



HP Officejet 4630 LCD Display Replacement

A guide for replacing the front-control-panel and LCD screen of the HP Officejet 4630.

Written By: Justin Engwall



INTRODUCTION

This guide will show you how to remove the LCD display.

TOOLS:

- [T10 Torx Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Heat Gun](#) (1)

Optional

Step 1 — LCD Display



- i** There is a hidden screw underneath the model sticker on the front panel.
 - Peel the model sticker off the cover.
 - This will expose the T10 screw securing the panel.

Step 2



- Remove the single 12mm-T10 screw securing the front panel to the printer body.
- Loosen the panel cover from the printer body.
- i** There is a ribbon cable connected to the backside of the cover. Disconnect the cable before separating the panel completely.

Step 3



- Gently remove the No-Fuss ribbon cable from the front panel.

Step 4



- Remove the seven 8mm screws using the Torx T6 screwdriver.
- Remove the motherboard from the front-panel housing.
- ⓘ The LCD display is on the opposite side.

To reassemble your device, follow these instructions in reverse order.