



HP Pavilion 17-x047na Back Panel Replacement

Follow this guide if you need to replace the optical guide of your HP Notebook 17-x047na.

Written By: Sarah Westberg



INTRODUCTION

Follow this guide if you need to replace the optical guide of your HP Notebook 17-x047na.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [SIM Card Eject Tool](#) (1)
-

Step 1 — Battery



 Turn off and unplug the laptop before replacing the battery.

- The netbook needs to be top-side down with the lid closed.
- Slide the plastic battery release latches towards the lock symbols.

Step 2




- Slide the battery out from the laptop.

Step 3 — Back Panel



- Using a Phillips #0 screwdriver, remove thirteen 7.0 mm screws from the back case.
- Using a Phillips #0 screwdriver, remove the CD/DVD drive screw.
- Use an ejection pin to eject and remove the CD/DVD drive.

Step 4

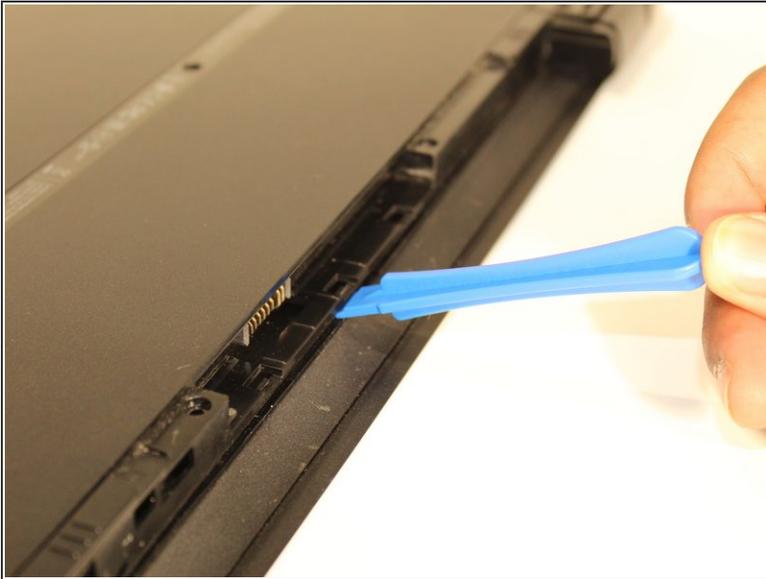

- Use an iFixit opening tool to separate the back cover from the laptop.

 Gently pry open the cover, trying not to break the plastic.

To reassemble your device, follow these instructions in reverse order.