




# HP iPAQ H2200 motherboard replacement

Written By: Tyler Andrews

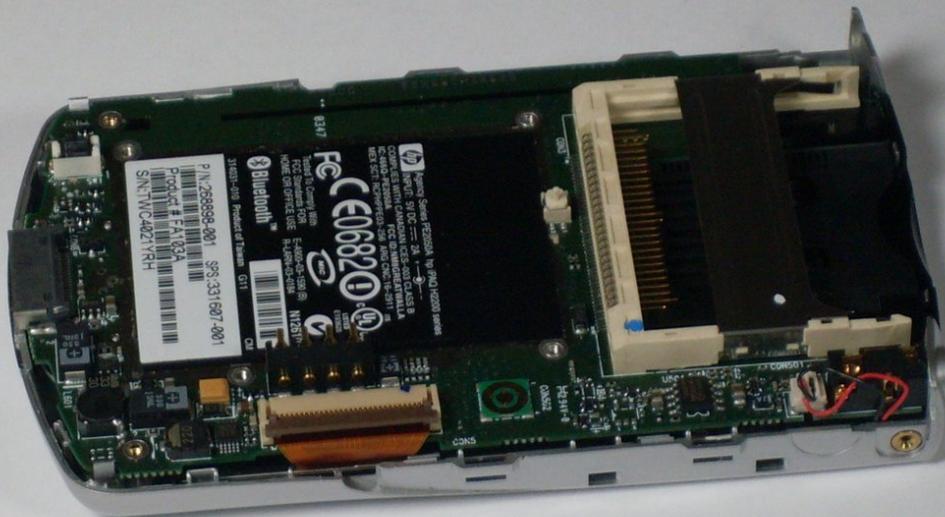

---

## INTRODUCTION

The purpose of this guide is to instruct the reader on how to remove the main board of their HP iPAQ H2200 device.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Battery




- Press and slide the battery cover tab to remove battery cover.

## Step 2




- Pull on the black tab to lift the battery out of the battery compartment.

### Step 3 — Main Board

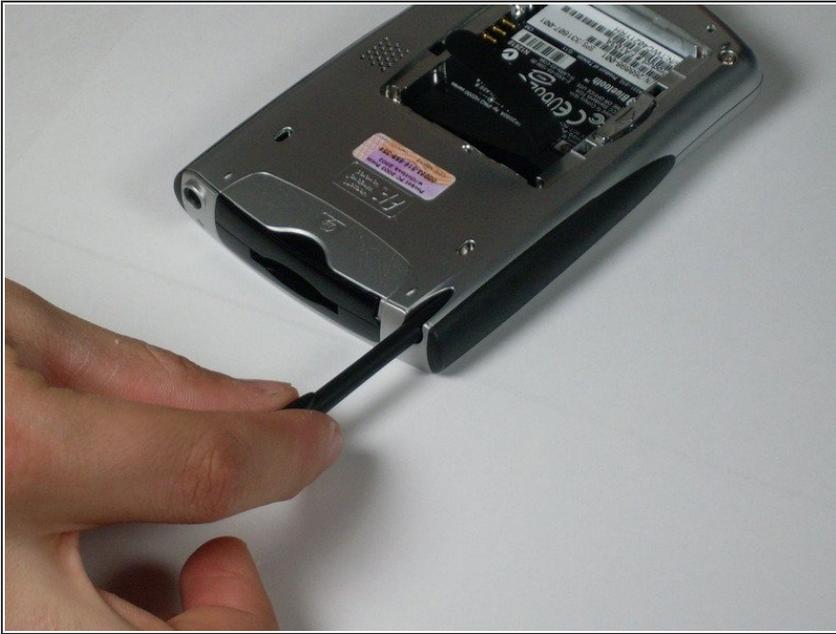

- Remove the stylus by sliding it out of the slot.

### Step 4

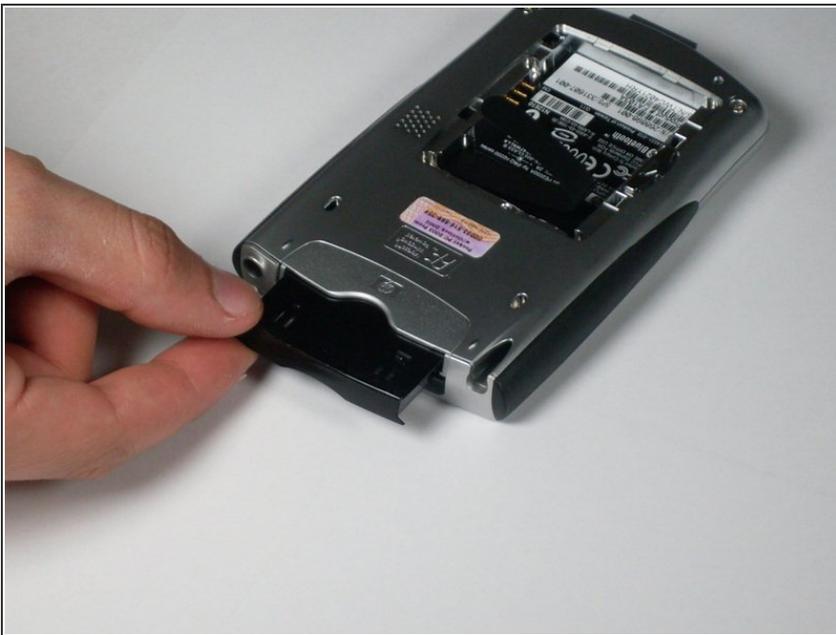



- Remove the CF card by sliding it out of the slot at the top of the device.

## Step 5





- Press down and push the black side strips toward the top of the device to remove them.

## Step 6

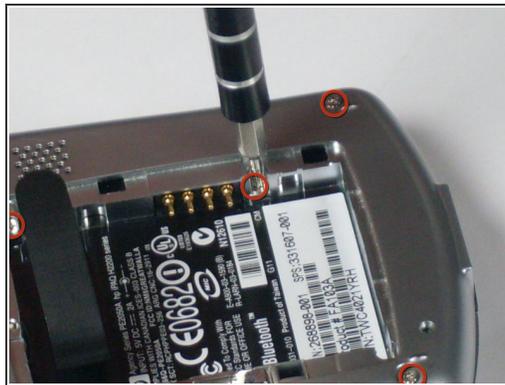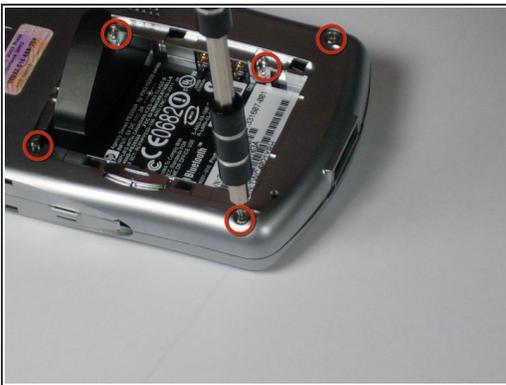


- Using the T5 Torx screwdriver, remove all six screws on the back and all screws on each side of the device.

## Step 7

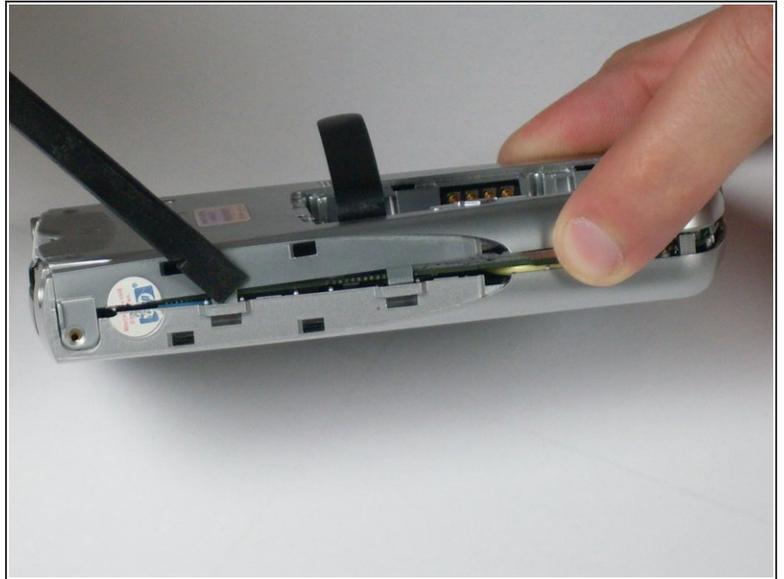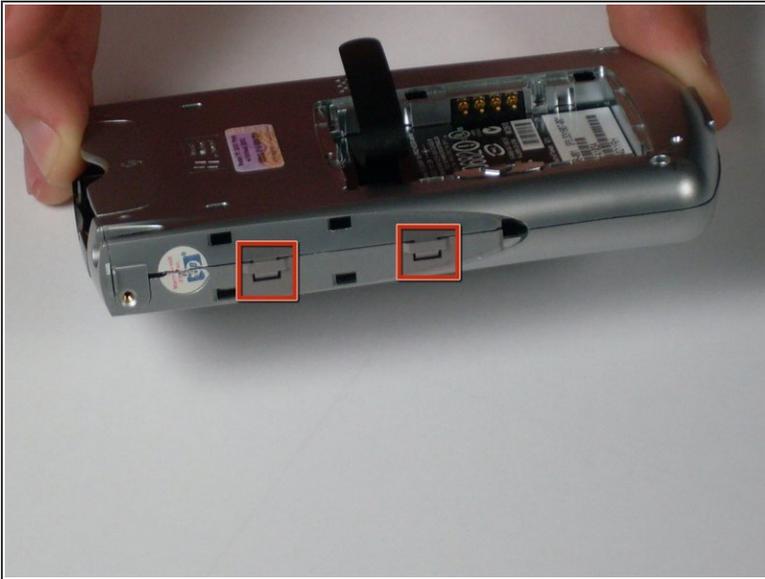

- Remove the back faceplate by pushing and loosening the 4 side slots (2 on each side).

## Step 8

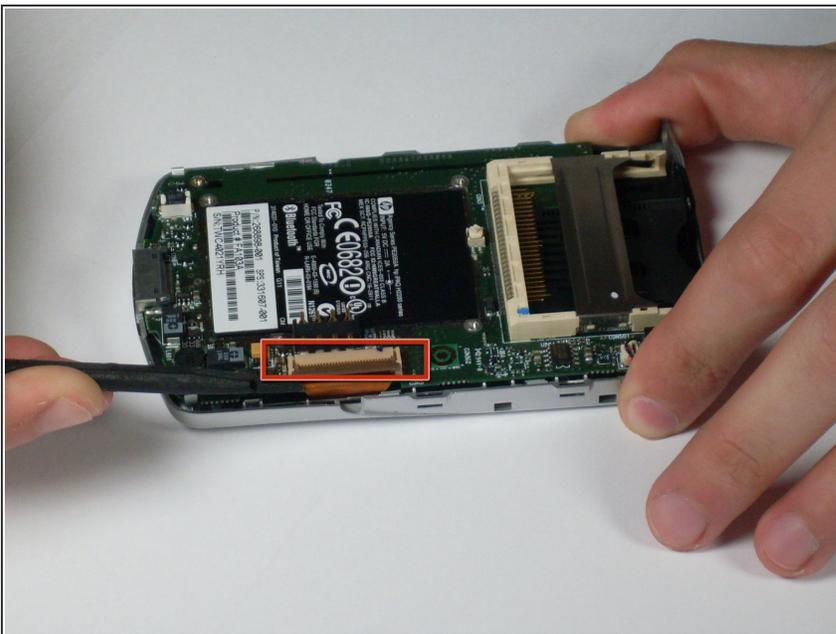


- Open the LCD connector, where the orange strip attaches to the main board.

## Step 9




- Carefully remove the orange LCD strip from the connector.

## Step 10

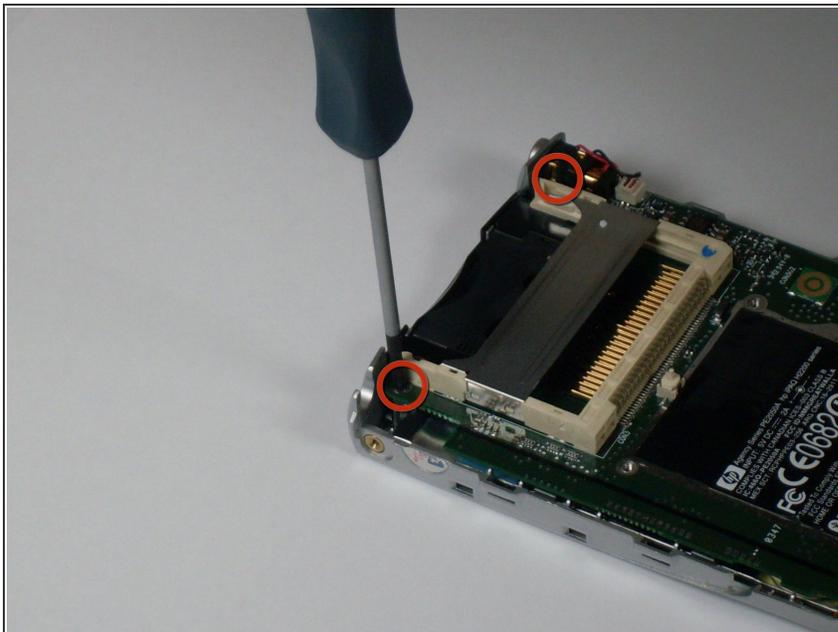

- Unscrew the 2 screws located at each top corner of the main board.

## Step 11

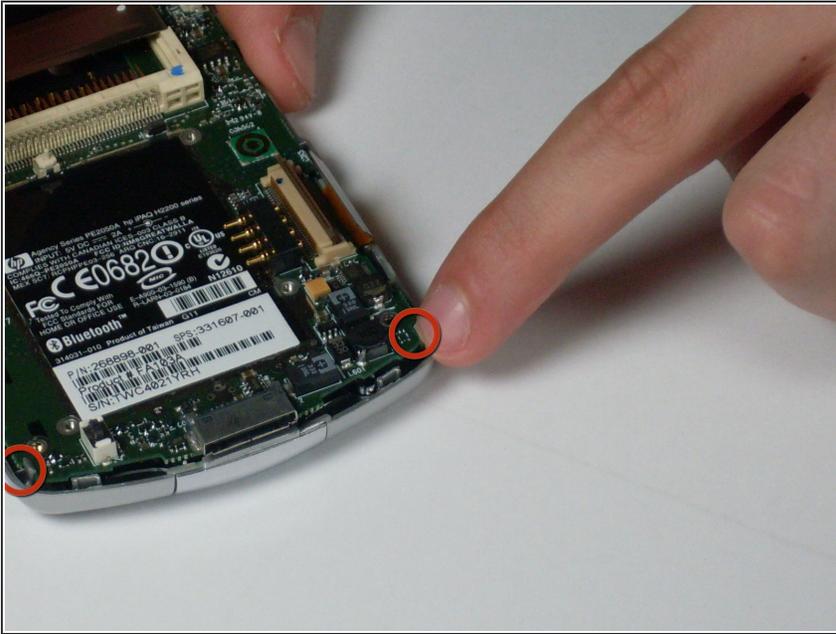

- Remove the main board by pushing outward on the two tabs located on each side near the bottom of the device.

To reassemble your device, follow these instructions in reverse order.