



Hoover Windtunnel Air Steerable Upright Wheel Replacement

Replacement of rear wheels for Hoover.

Written By: Wyatt Cornelison



INTRODUCTION

This guide will demonstrate proper removal of old or broken wheels and replacement with new wheels

TOOLS:

- [Large Needle Nose Pliers](#) (1)

PARTS:



- [Hoover rear wheel part no. #38522077](#)
(1)

Step 1 — Wheel




- Lay the vacuum flat on the ground, then flip it over 180 degrees so that you can see the inside of the wheel.

Step 2

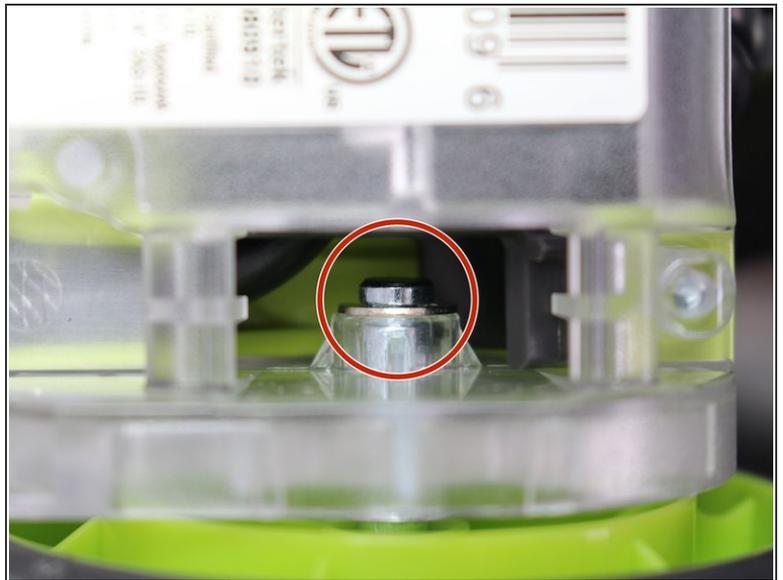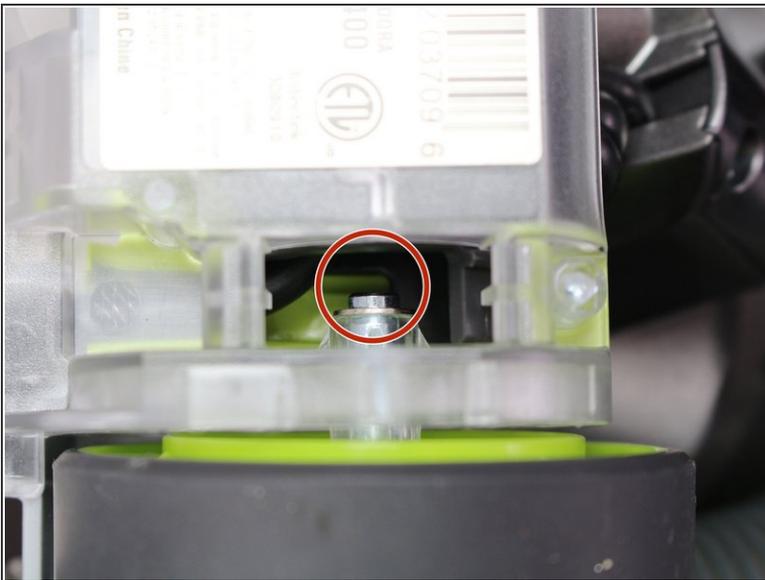

- Locate the small metal pin and bolt holding the wheel in place.

Step 3

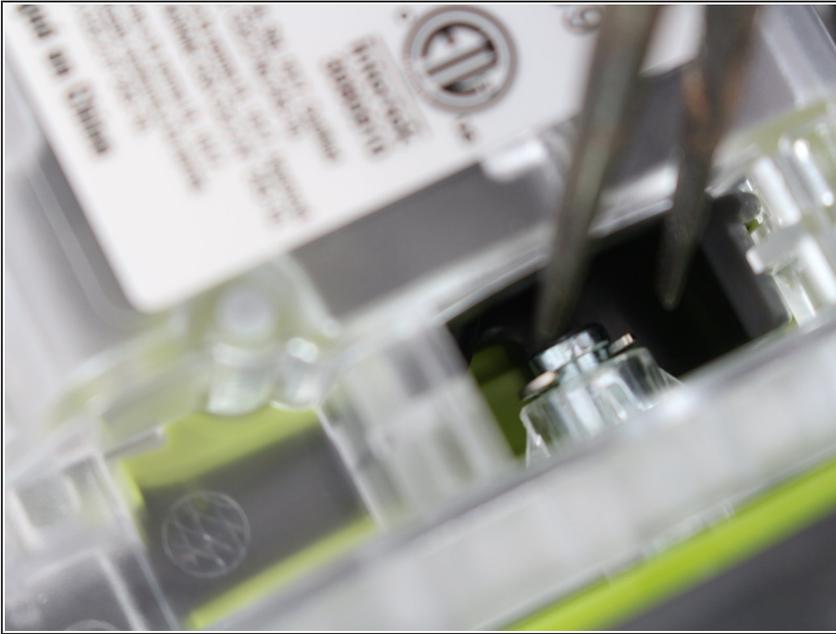

- Take the needle nose pliers and stick them in the rectangular hole.
- With the pliers, firmly grasp the metal pin that holds the bolt for the wheel in place.
- Slide the pin off the bolt by pushing the pliers forward.
- Carefully remove the pin from the rectangular hole and keep it in a safe place.

Step 4



- Now, remove the wheel by pulling it away from the vacuum.
- The bolt will come out with the wheel since the pin is gone.