



How to clean the Samsung SGH-E317 keypad

This guide is to show how to remove the keypad for replacement or cleaning. the bottom half of the phone will need to be disassembled.

Written By: Joe Cavaletto



INTRODUCTION

The bottom half of the phone will need to be disassembled, see "replacing logic board" for instructions to remove logic board.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Remove the back panel by pressing up on switch, located at the top on the back of the phone.
- ⓘ You may want to use a plastic opening tool to help pry the back panel off.

Step 2 — Motherboard

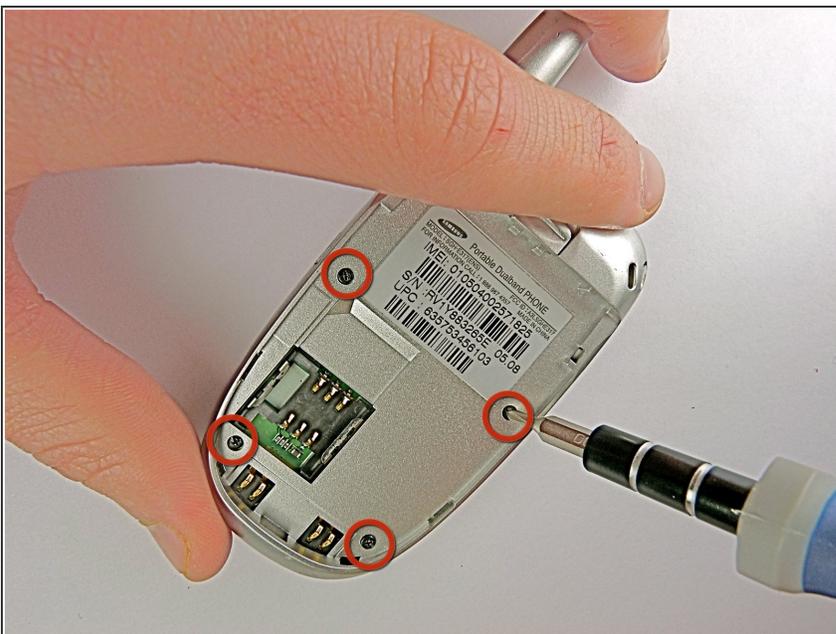

- Unscrew the four 4.5mm screws located on the back plate.

Step 3




- Remove the rubber screw cover using your fingernail.

Step 4




- Unscrew the 4.5mm screw located underneath the rubber cover.

Step 5

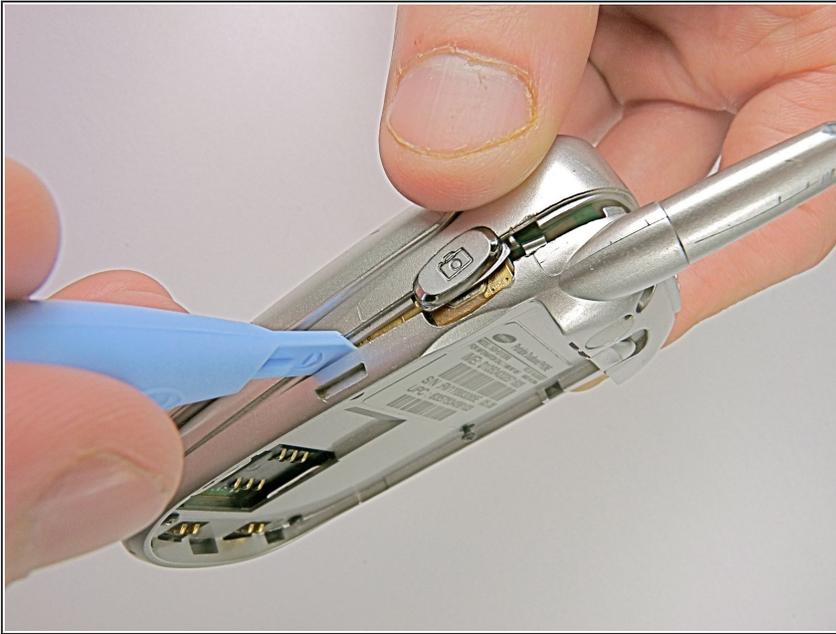



- Wedge the end of a plastic opening tool into the crack between the back panel and the phone.
- ⓘ The panel should come off without much effort.

Step 6

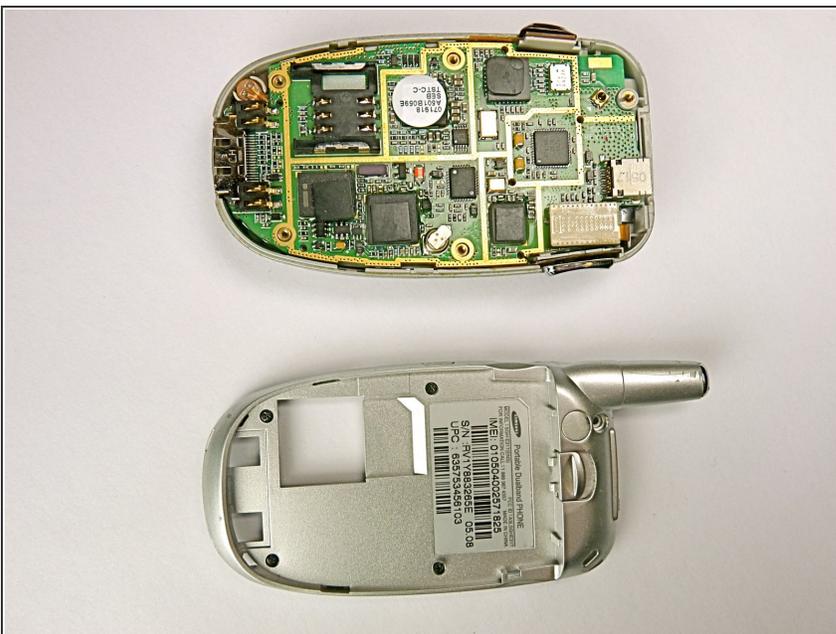



- With the back panel removed, the motherboard should be fully exposed.

Step 7

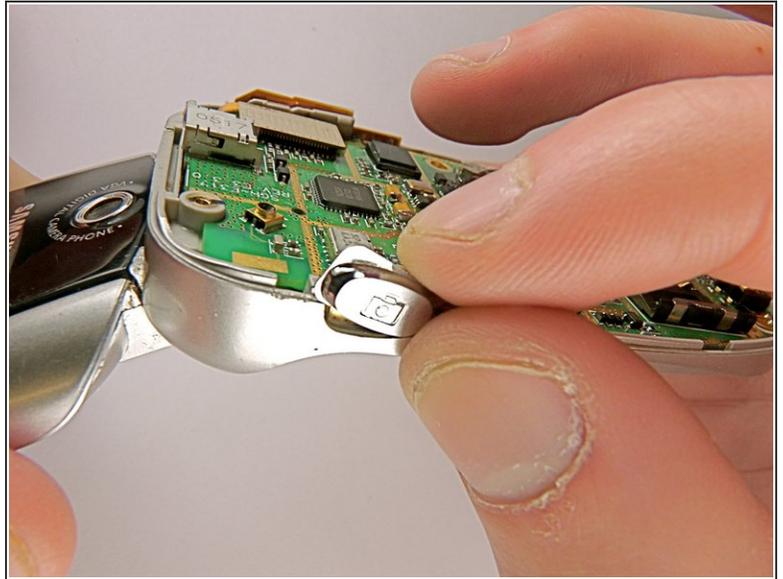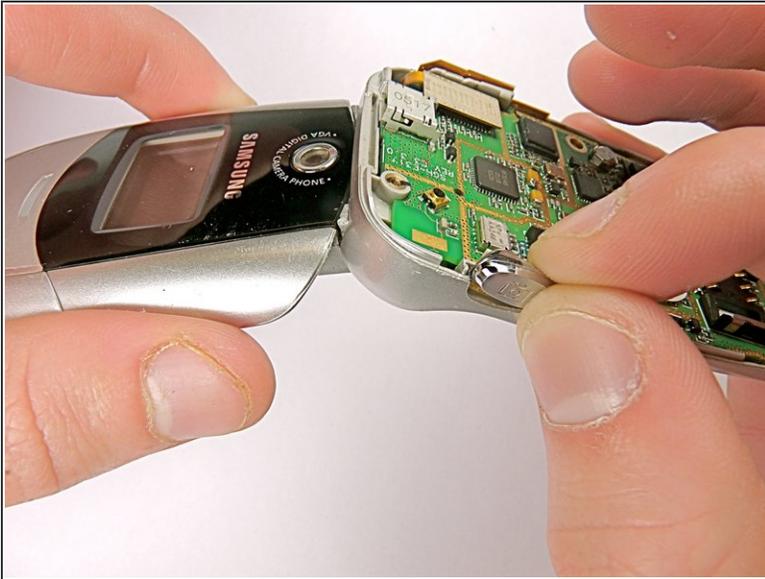


- Remove the camera and volume buttons and place them in a safe spot until reassembly.

Step 8

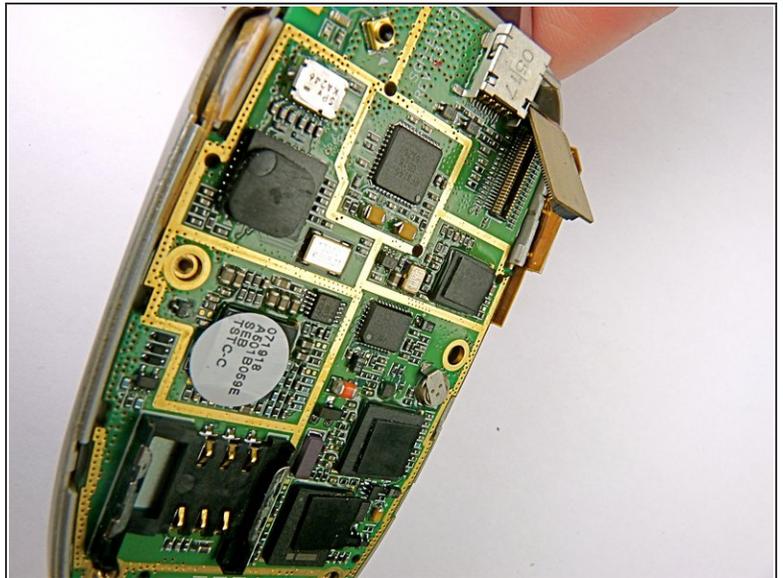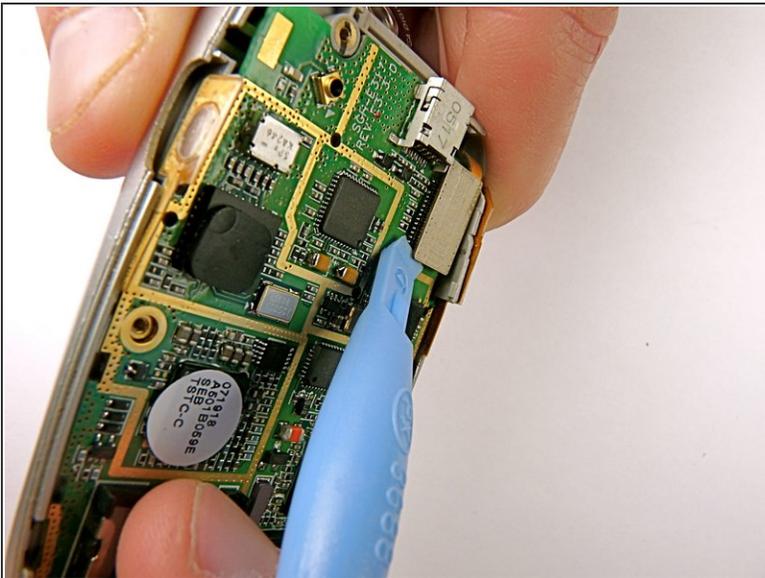


- Using a plastic opening tool, unplug the ribbon cable connecting the front LCDs to the motherboard.

Step 9

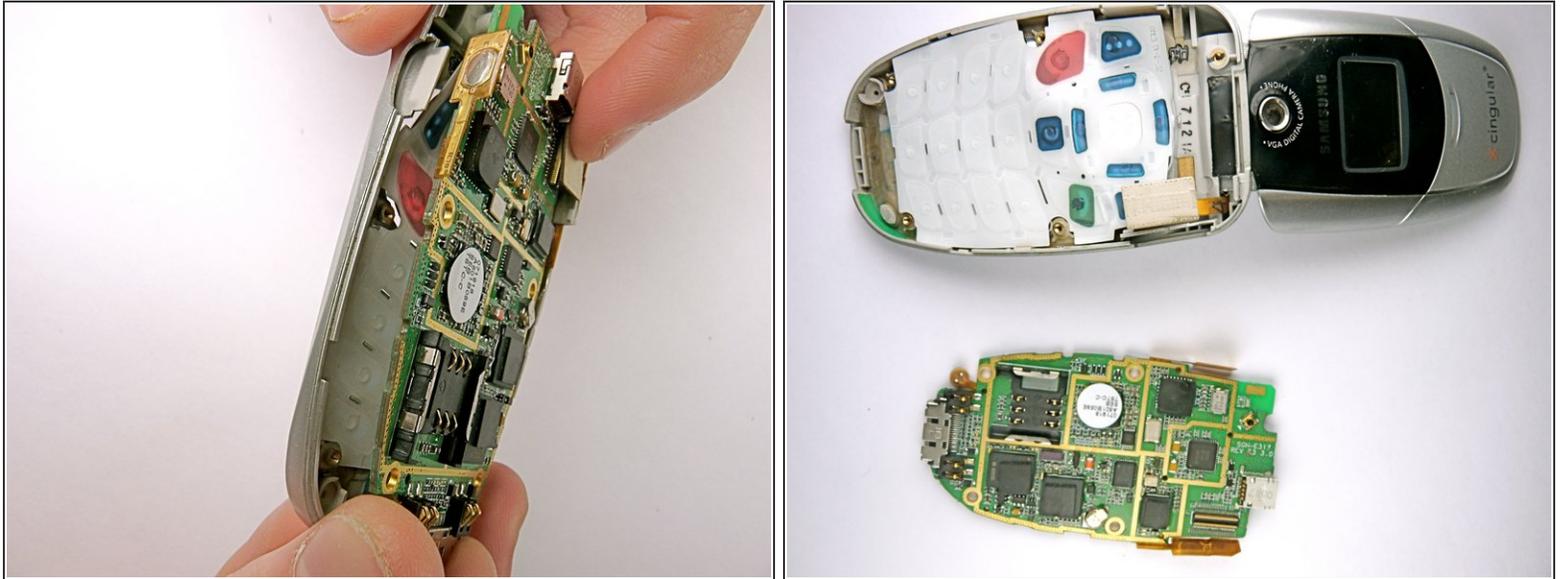

- Detach the motherboard by grabbing the edges of it and lifting it straight out of the phone.

Step 10 — How to clean the Samsung SGH-E317 keypad

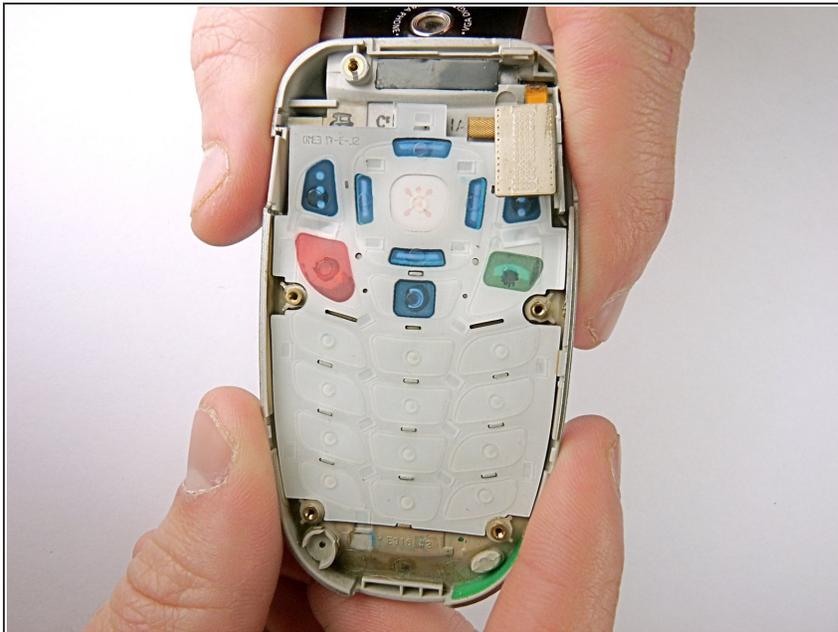

- After removing motherboard, the phone will look like this.

Step 11



- Grab the corner of the rubber key pad and lift out slowly.

Step 12



- By using a small standard screwdriver and a fine, thin, soft cloth you can clean in between the keypad to remove dirt and debris.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-16 12:08:17 PM (MST).

