




# How to clear a Epson Stylus Photo 820 paper jam jam

How to repair paper jams for an Epson Stylus Photo 820.

Written By: dante gagliardi

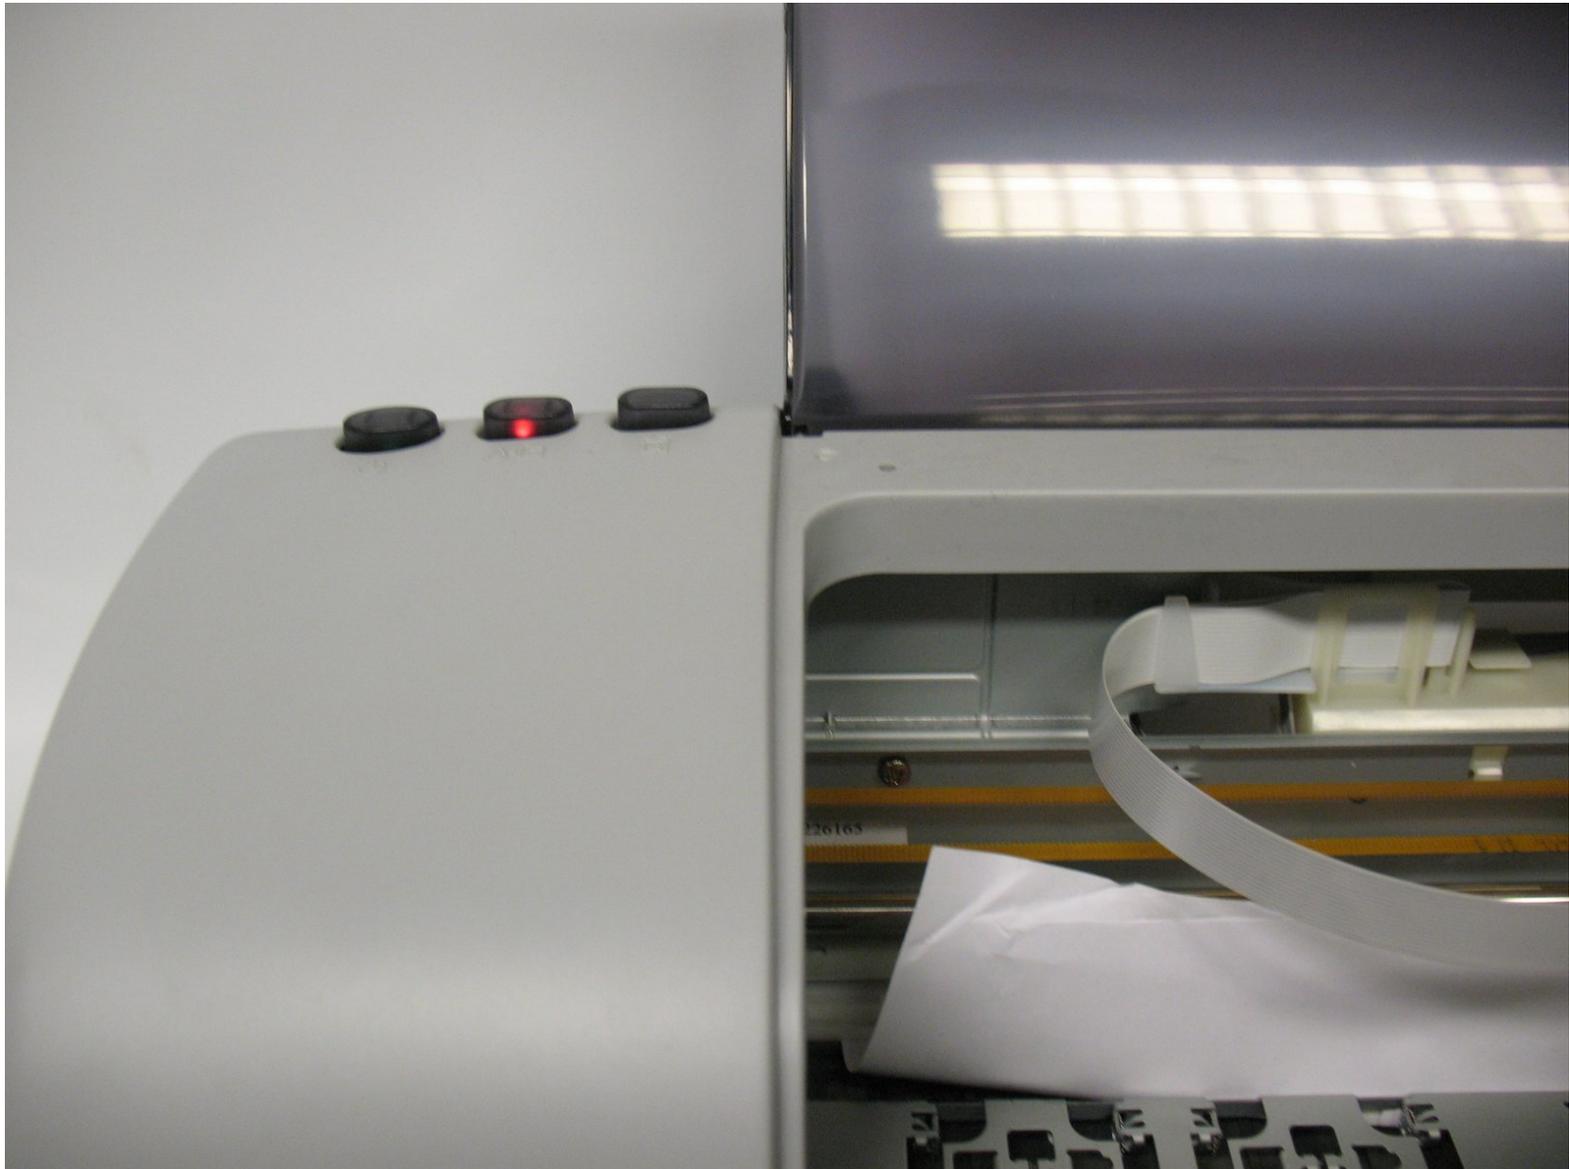

## INTRODUCTION


This guide can teach you how to repair/remove a paper jam for the Epson Stylus Photo 820. No tools are necessary for this operation, and no working knowledge of the printer is needed.

## Step 1 — How to clear a Epson Stylus Photo 820 paper jam



- If a paper jam is detected, the middle button will display a red light.
- Press the red button. This will cause the printer to try to automatically correct the issue.
- If this works, proceed to step 4. Otherwise, proceed to step 2.

## Step 2

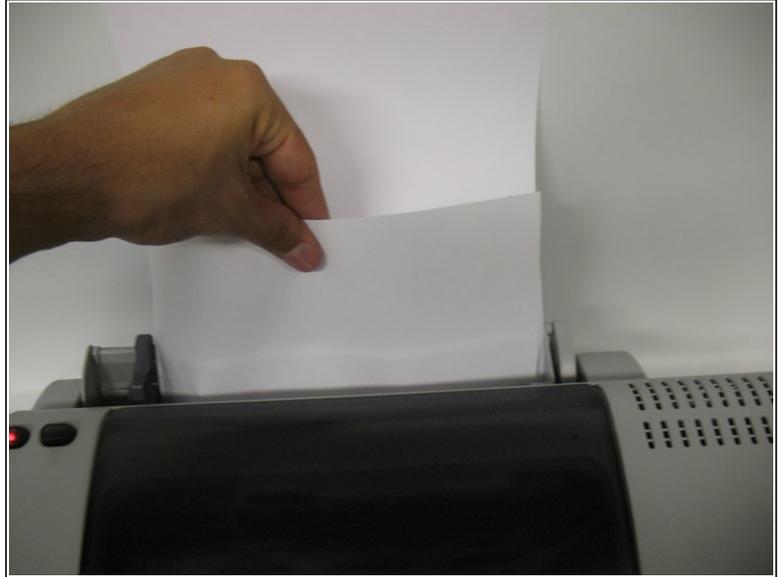


- The first step in repair is to attempt to remove the paper jam by pulling it out through the top.
- Pull the paper slowly, and as straight as possible.
- If this does not work, proceed to step 3.

### Step 3



- Assuming the paper will not come out of the top, assess the paper jam.
- If the print cartridge is in the way, gently push it to the side.
- Try to get the full edge of the paper above the metal grating.
- Gently pull the paper out the of the open hatch.

## Step 4

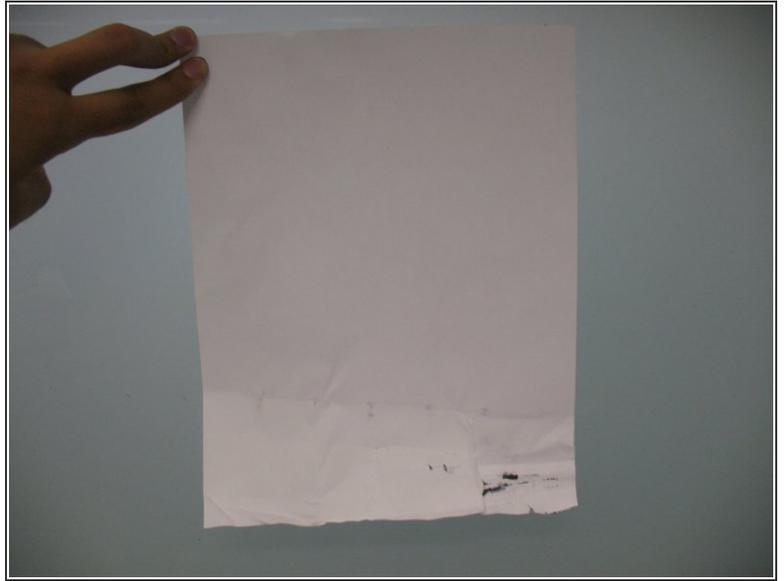

- If the paper jam was corrected during step 1, the red light should have turned off, leaving only a green light.
- If steps 2 or 3 corrected the problem, you will need to press the red button again.
  - This may cause another sheet of paper to be pulled through. Do not be alarmed.
  - This should cause the red light to go out.