



How to fix Logitech Anywhere MX Phantom Double Click

After a couple of thousands clicks the Anywhere MX Mouse develops a phantom double click. This is due to a groove that develops on the inside of the button. It can be fixed with a piece of tape.

Written By: Stefan Magometschnigg



This document was generated on 2019-09-21 05:04:33 PM (MST).

INTRODUCTION

After a couple of thousands clicks the Anywhere MX Mouse develops a phantom double click. This is due to a groove that develops on the inside of the button. It can be fixed with a piece of tape.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Black Electrical Tape](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Front Screw Removal



- The front screws are underneath the front gliders. They can be removed with a butterknife or Plastic Opening Tool. The gliders have three layers, be careful not to separate them.


Step 2 — Removing Back Screws



- The back screws are underneath the stickers with the battery images. You can either remove them, like I

did, or just poke a hole into them to get to the screws.

Step 3 — Identification of the Problem

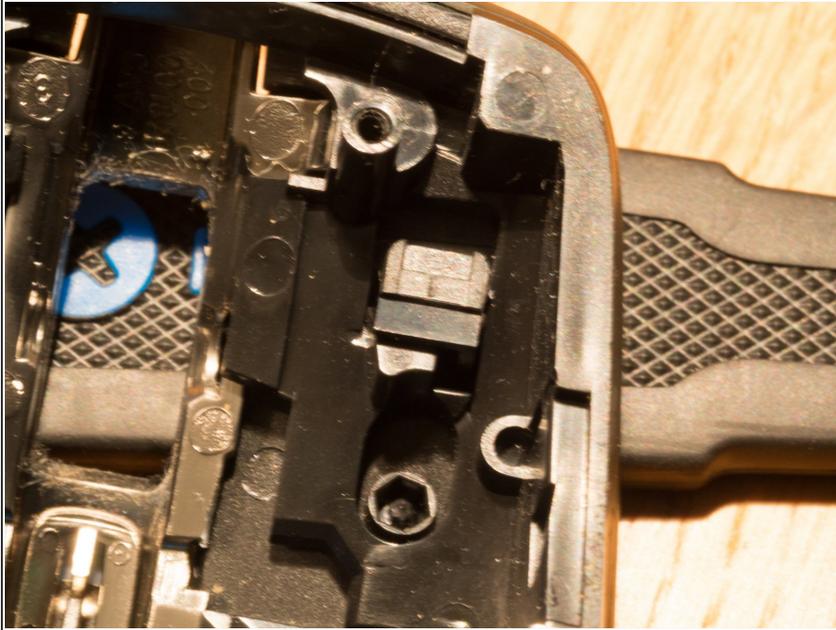

- After the four screws are removed, the top and the bottom part can be easily taken apart. In the top part the groove that was made by the click-sensor should be clearly visible. This causes the *phantom double clicks*.

Step 4 — Solution of the Problem



- Put a piece of tape over the groove.

To reassemble your device, follow these instructions in reverse order.