



# IBM ThinkPad t43 RAM Replacement

In this guide, we will remove and replace the RAM from the IBM ThinkPad T43 Laptop.

Written By: aLiX pleRRe



---

## INTRODUCTION

Replacing or upgrading the RAM for the IBM T43 can give it a greater performance boost.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — RAM



- To remove the cover, you will need to take out the single screw.
- Unscrew until the cover comes off
- Lift the cover from the edge and pull off
- ⓘ If the cover doesn't come right up and you have felt that you have unscrewed it, you can lift the cover and the screw will come off with it.

## Step 2



- Place your hands on the clips and push on them outward until the RAM pops out

## Step 3



- Place hands on the RAM and pull towards yourself
- For replacement, follow these steps in reverse order
- ⓘ Make sure that when you put in the ram that the short side is on the right

To reassemble your device, follow these instructions in reverse order.