





# Insignia NS-CLOPP2 Speaker Replacement

This guide will show viewers how to remove the speaker from the Insignia NS-CLOPP2 Digital Alarm Clock and AM/FM Radio.

Written By: Dilini De Silva

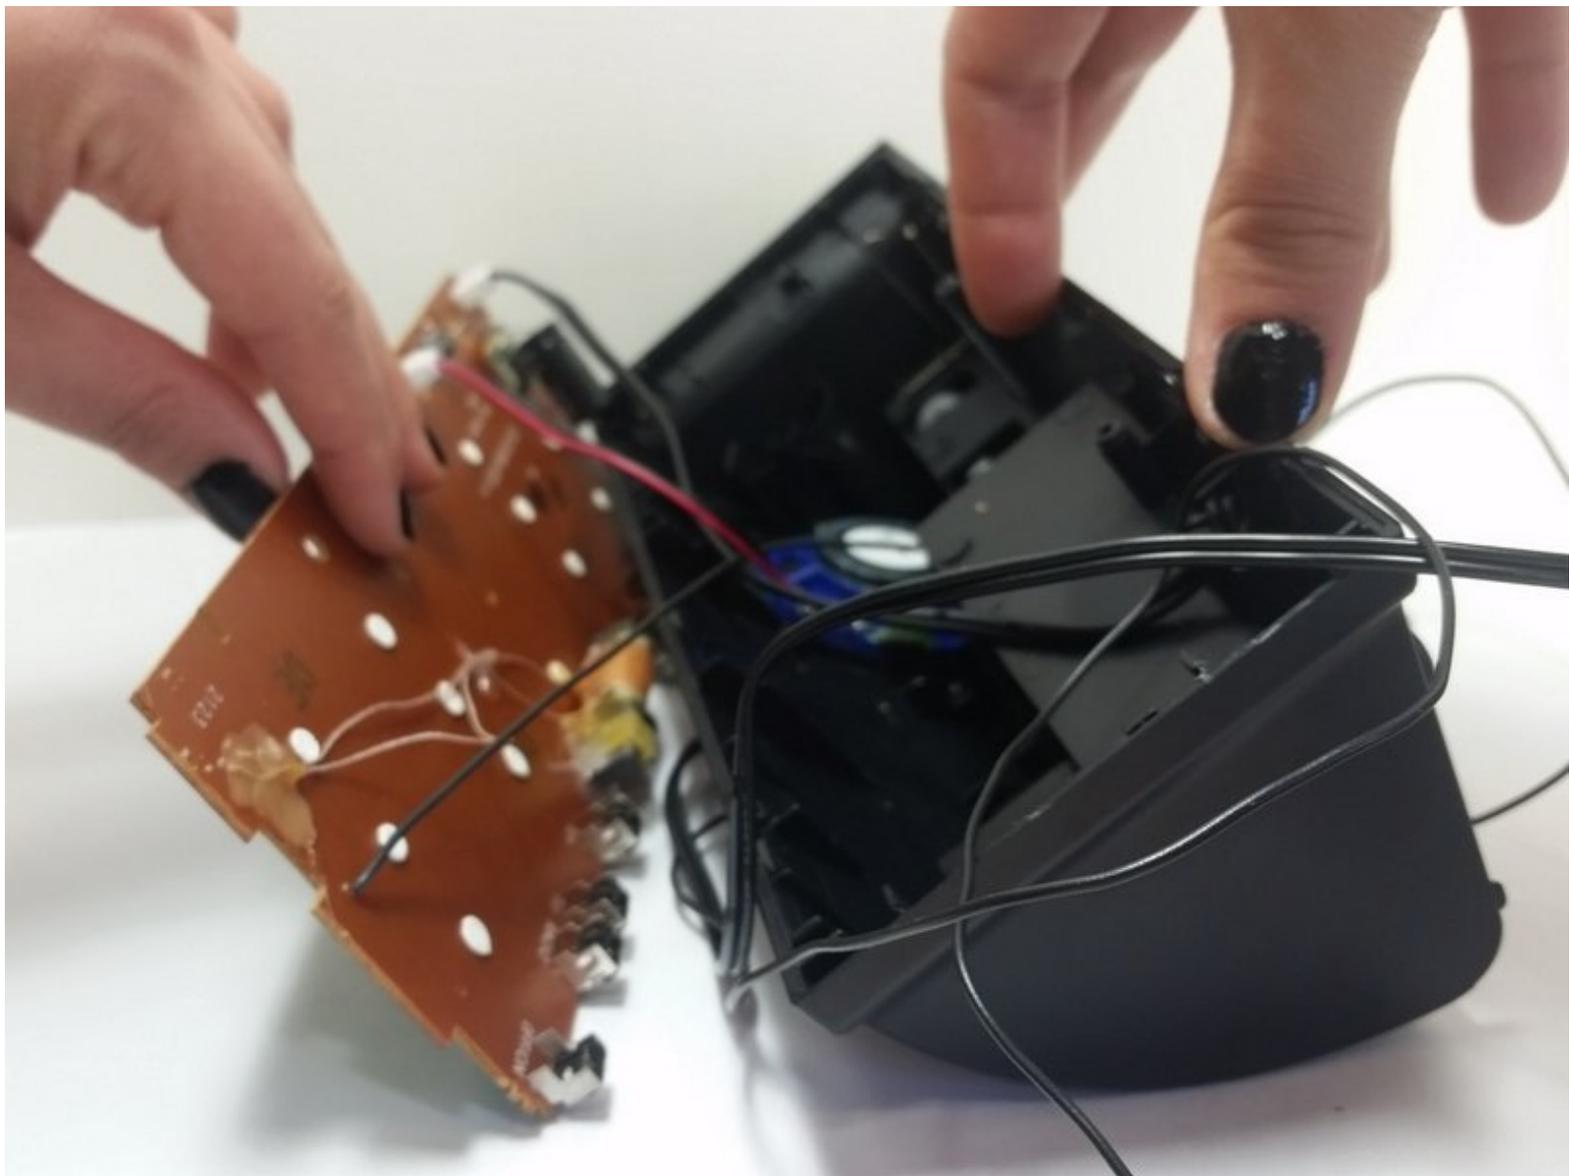


## Step 1 — Speaker

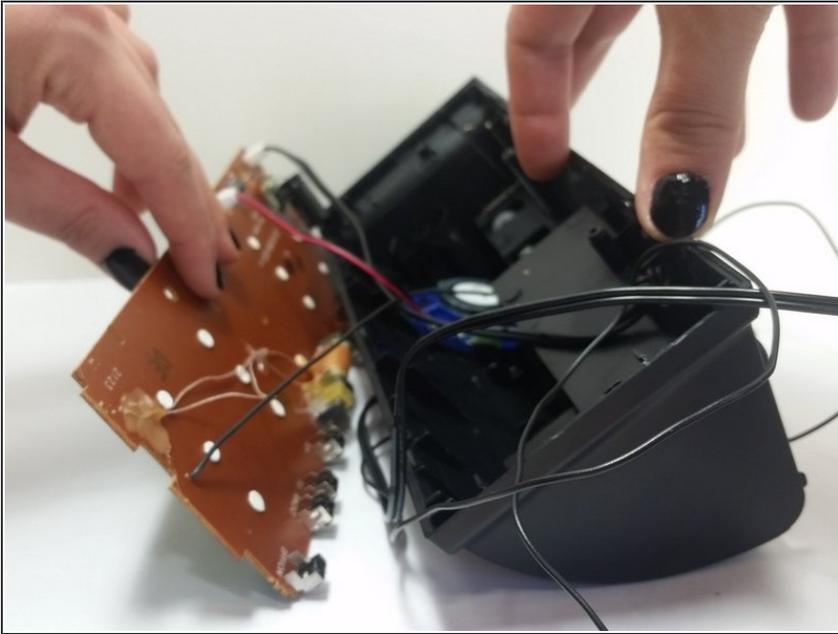


- First, make sure the motherboard has been pulled out, not cutting any of the wires attached, exposing the blue speaker.

## Step 2

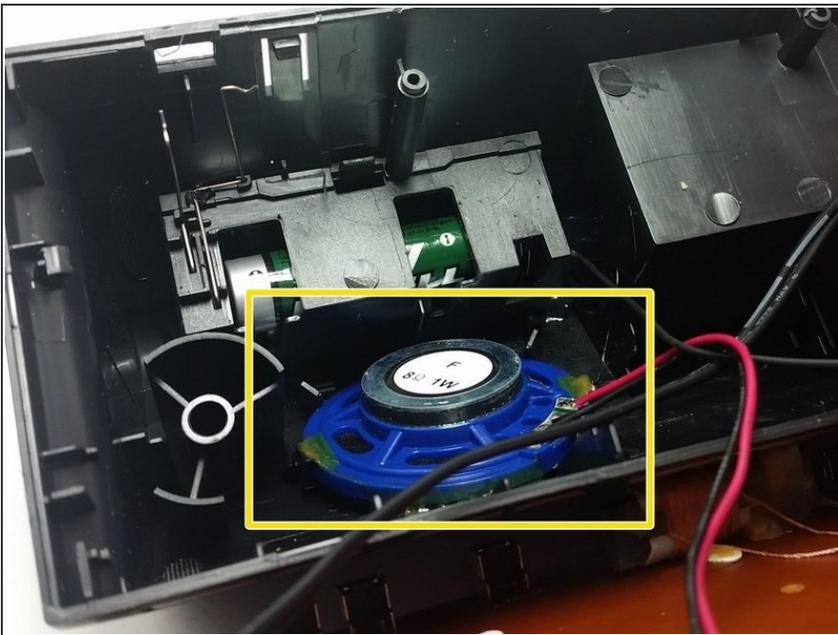


- Locate the speaker, the dark blue colored circular device, pictured in the center of the photo.

### Step 3

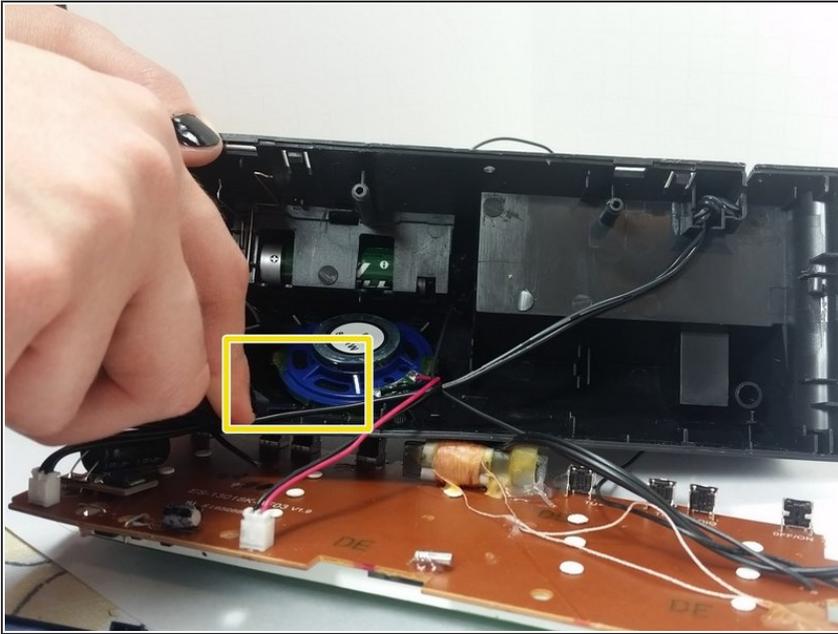

- Using a plastic opening tool, scrape off the glue attaching the speaker to the black plastic of the clock.

### Step 4

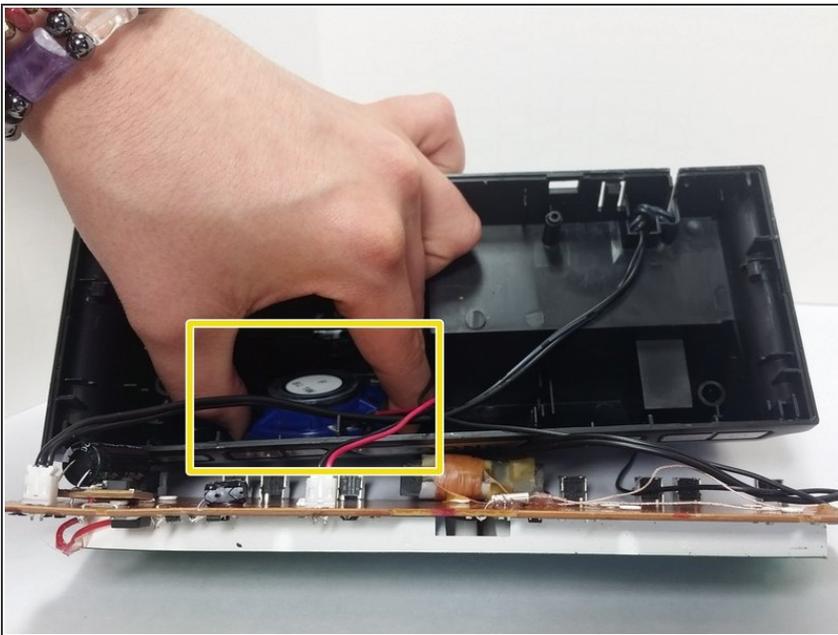

- Lastly, once the adhesive has been removed, gently lift the speaker out of place.
- To put a replacement speaker in, use technology-friendly adhesive to glue it back in place.
- To reassemble your device, follow these instructions in reverse order.

To reassemble your device, follow these instructions in reverse order.