



# Kindle Fire HD 2013 Speakers Replacement

This guide will show you how to change both the speakers on the Kindle Fire HD 2013.

Written By: aaa




 **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [T4 Torx Screwdriver](#) (1)

 **PARTS:**

- [Kindle Fire HD 7" \(2nd Gen\) 2013 Left Speaker](#) (1)
- [Kindle Fire HD 7" \(2nd Gen\) 2013 Right Speaker](#) (1)

## Step 1 — Speakers

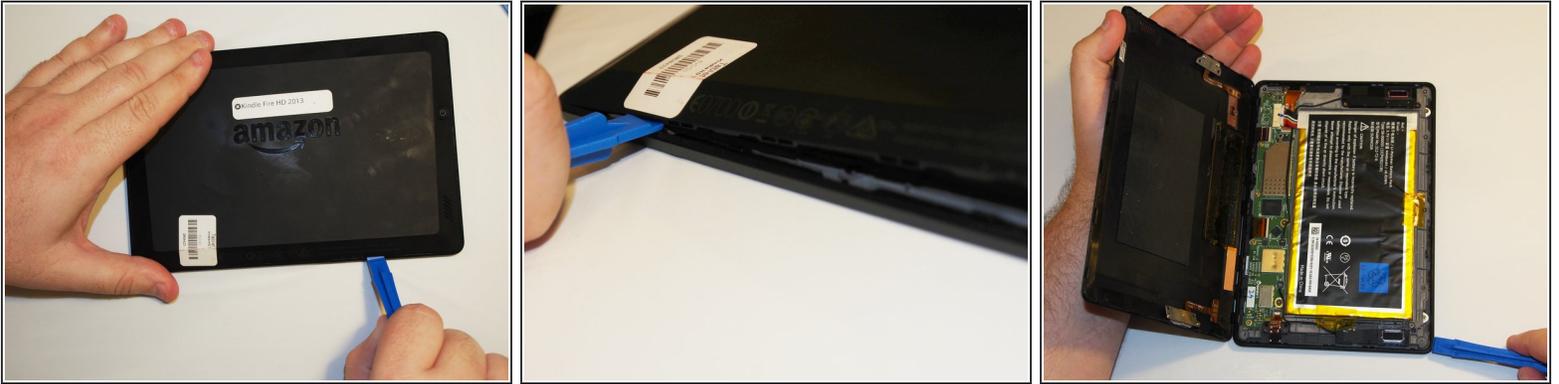


- Open up the device by using a plastic opening tool in order to avoid damaging the device.
- To do so, find the seam along the outer edge of the device and use the plastic tool to pry the back panel up. Doing so may take some force and patience.

## Step 2




- There are (4) 3mm T4 Torx screws between both speakers (two each). Remove the ones necessary for whichever speaker needs to be replaced.

### Step 3

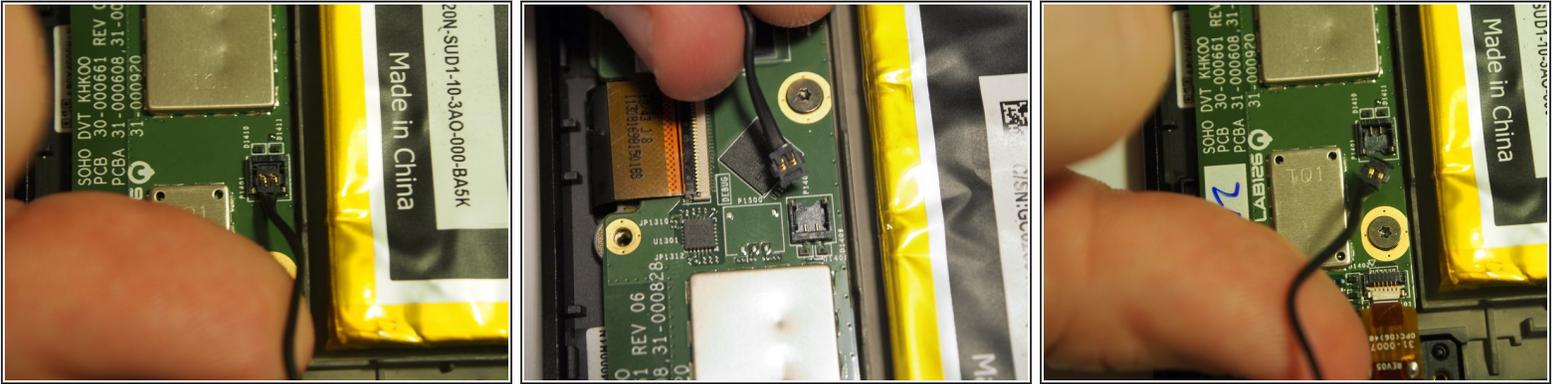

- After the screws are removed, locate the wire, follow it to where it connects to the main device, and pull up gently until it disconnects.

### Step 4

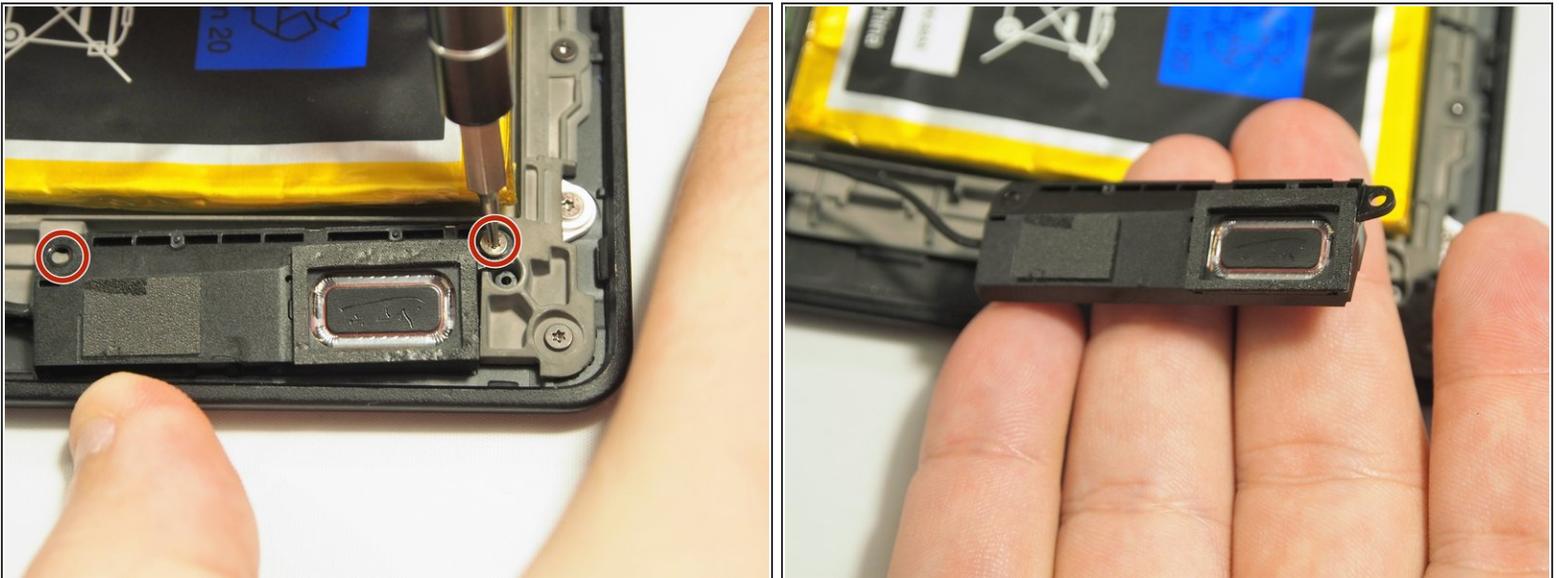

- Remove (2) 3mm T4 Torx screws from the bottom speaker.

## Step 5



- Same as Step 3, after the screws are removed, follow the wire to where it connects and pull up gently until it disconnects.

To reassemble your device, follow these instructions in reverse order.