




# Kyocera Hydro Vibe Camera Button Replacement

This guide will allow you to remove the camera button and replace it.

Written By: Kunal Patel

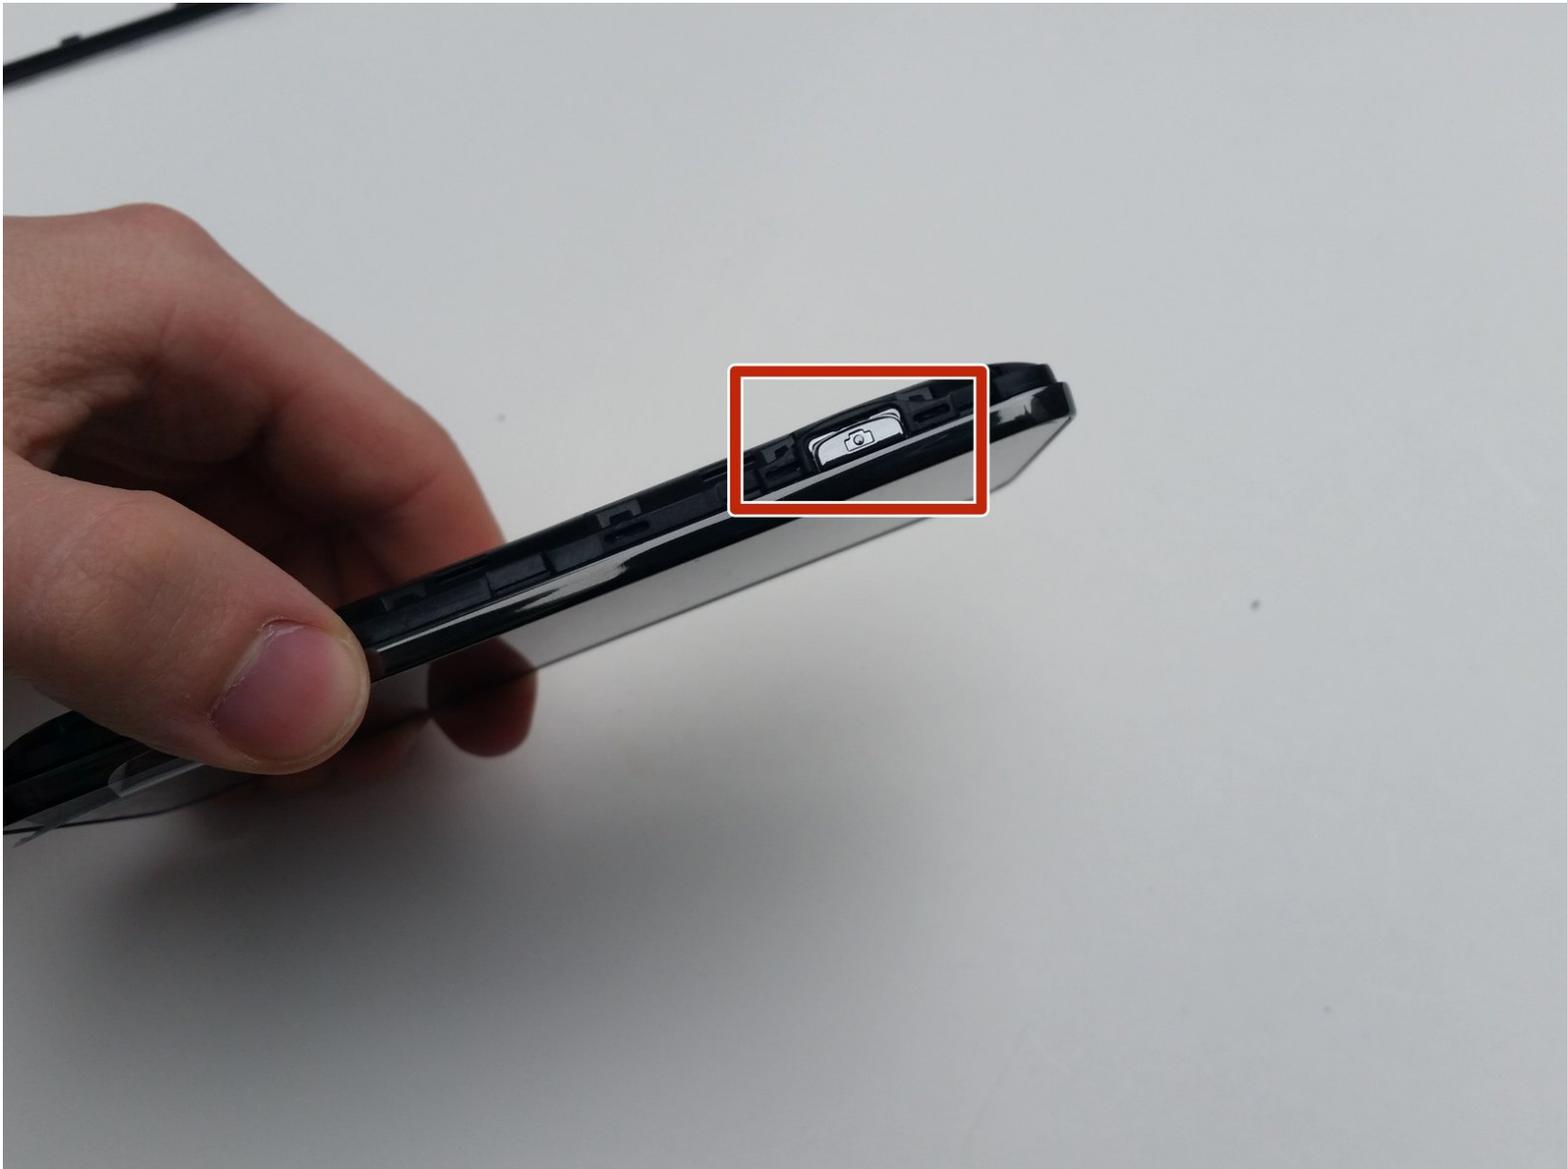

---

## INTRODUCTION

Remove the camera button and replace it.

---

### TOOLS:

- [Metal Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Screwdriver](#) (1)
  - [Precision Tweezers Set](#) (1)
-

## Step 1 — Battery



- ⓘ Make sure that the device is turned off before beginning.
- Look for a small indentation on the bottom of the phone.
- Insert the plastic opening tool into the indentation and lift off the back casing.

## Step 2



- The large white component is the battery. Look for a small indentation under the arrow that says "LIFT."
- Place the plastic opening tool in the indentation and lift the battery out of the socket.

### Step 3 — Trim



- Locate the screws holding the trim which are the four side screws on each corner.
- Remove each screw with a Phillips screw driver #J00. The screws are 5mm Phillips.

### Step 4



- Locate the clasps holding the trim in place.
- You will need to insert the metal spudger through the bottom of the trim and slowly push upwards to release the clasps.


## Step 5



 The trim is flimsy.

- This is what the trim will look like once removed.

## Step 6 — Camera Button

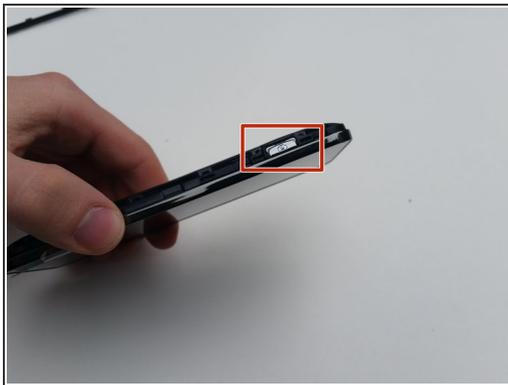

- Now that you have taken apart the trim, the camera button should be easily removable.
- Locate the camera button. When looking at the back side (battery side), the camera button will be on the left side.
- Take the camera button out with tweezers.

To reassemble your device, follow these instructions in reverse order.