



LG G Pad F 7.0 LK430 LCD Display Touch Screen Digitizer Glass Assembly Replacement

How to replace a broken display on the LG G Pad F 7.0 LK430.


Written By: macrossps



 **TOOLS:**

- [thin guitar pick, screwdriver set](#) (1)
-

Step 1 — LCD Display Touch Screen Digitizer Glass Assembly replacement

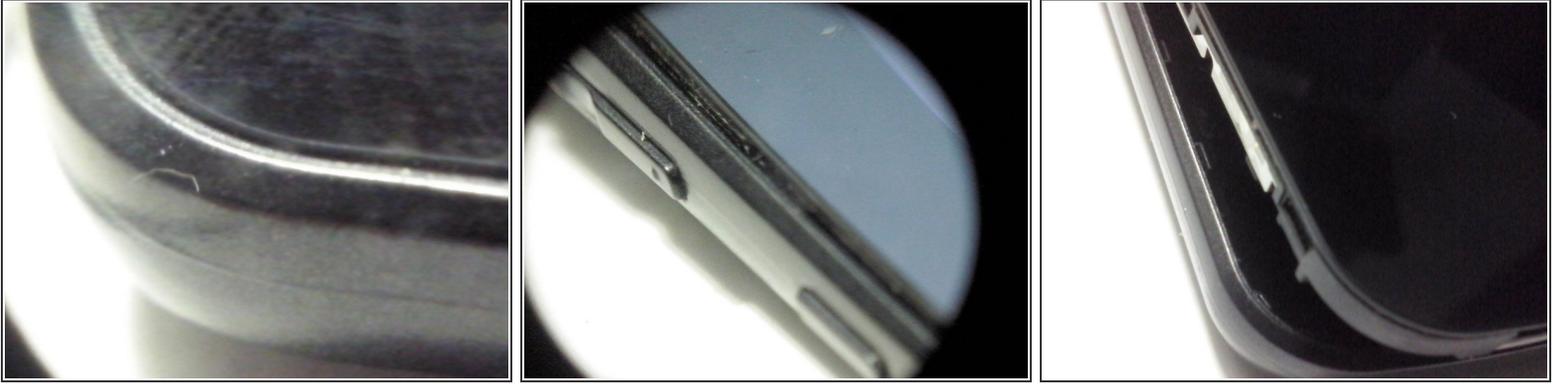

- With a magnifying glass, take a look at the corner of the screen; you'll see a space where the screen meets the rest of the tablet; the screen is hold in place by plastic tabs; inserting a thin plastic piece or just your fingernail and slowly going along the seam will separate the screen form the back cover, exposing the electronics.

Step 2



- Disconnect battery and USB connectors. This tablet is an electronics masterpiece, so be gently and patient when moving around.

Step 3



- In my tablet the speaker is hold in place by tabs, very easy to remove.

Step 4




- Remove the speaker and the vibration motor in order to expose the ribbon cable beneath. All the components sport contact connectors, very nifty.
- Carefully peel away the tape, in order to remove the ribbon cable. Remove the two screws you see in the picture.

Step 5



- Remove the ribbon cable by gently pulling the micro USB connector out of the plastic carcass. The ribbon is held in place by tiny plastic dots and a mild glue; did I mention being gently already?
- Remove the battery by going around the border with a thin guitar pick or other plastic tool. Try your best not to bend the battery.
- Disconnect the delicate camera connector.

Step 6

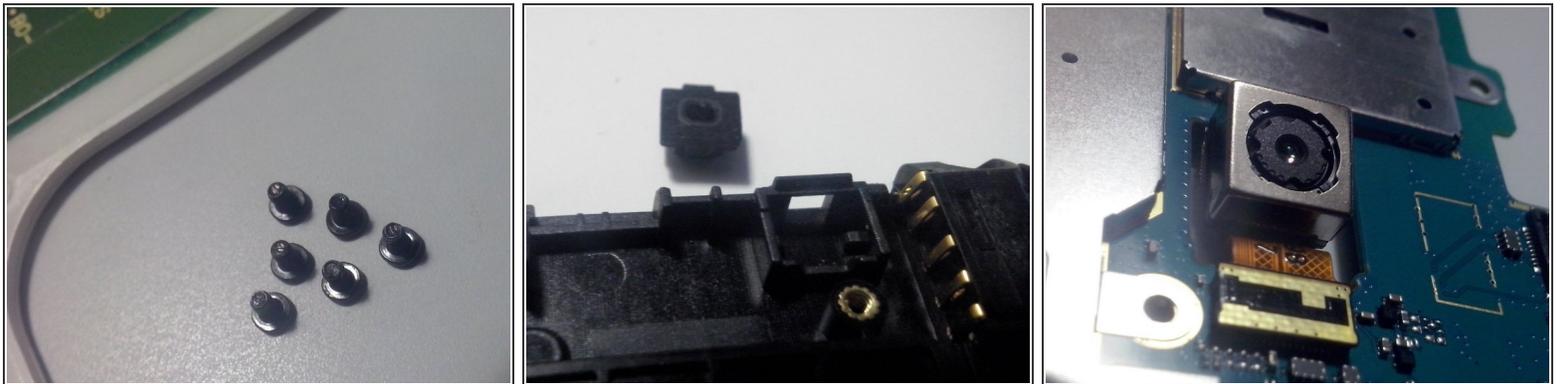

- Remove the screws that hold the main board in place. My tablet came with 6 tiny screws.
- There's a small rubber seal that tend to get loose from the plastic carcass; take good care of it.
- Also exercise careful handling of the main board as it has attached the 8 Megapixel camera lens.

Step 7



- There are now several US and Chinese Ebay sellers offering the whole assembly, so you basically only have to reconnect the ribbon cables, put the screws in place and enjoy your tablet again. I ordered item 172233283111.

It's really satisfying to bring back from the dead your beloved LG tablet, especially when your kid accidentally broke it just 18 days after Christmas.