



LG G Stylo (Model H636) midframe replacement

Remove the midframe from a LG G Stylo (Model H636)

Written By: lcaduemacs89





INTRODUCTION

Remove the midframe from a LG G Stylo (Model H636)

TOOLS:

- [Essential Electronics Toolkit](#) (1)
-

Step 1 — midframe

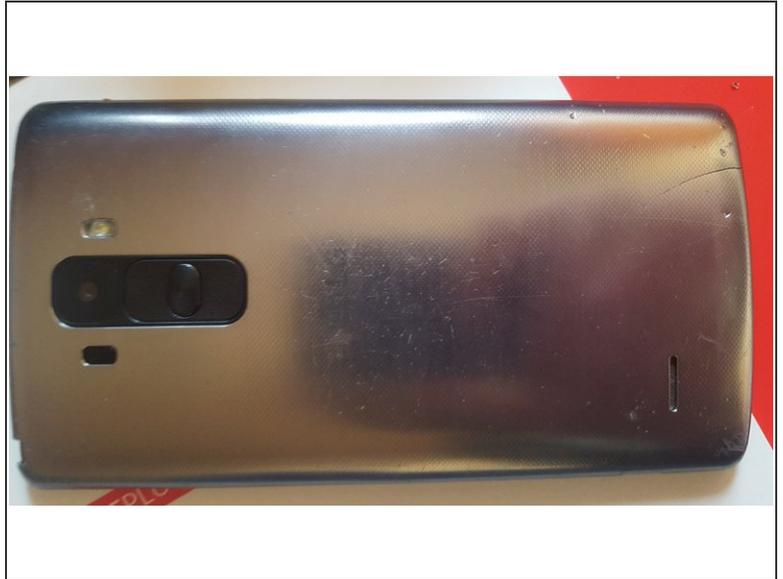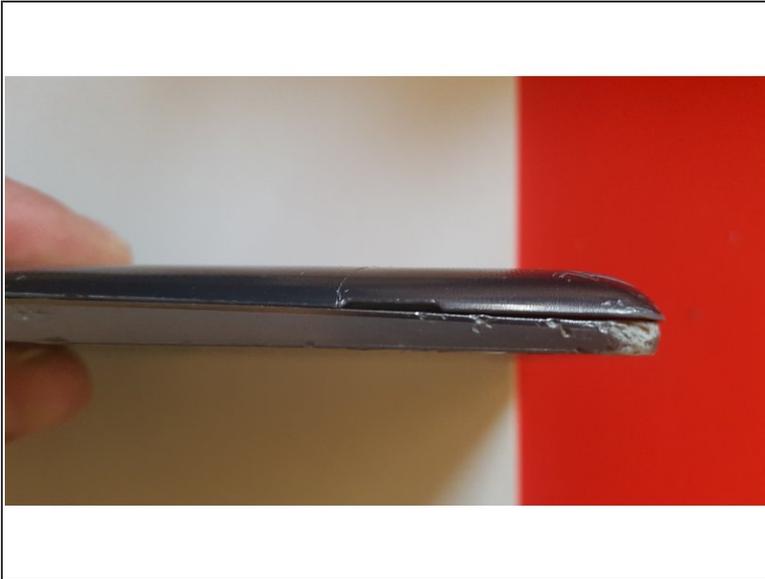


- Remove the back cover of the phone by locating the indent on the bottom right corner of the device

Step 2



- Remove the battery by prying out from groove near bottom of battery

Step 3

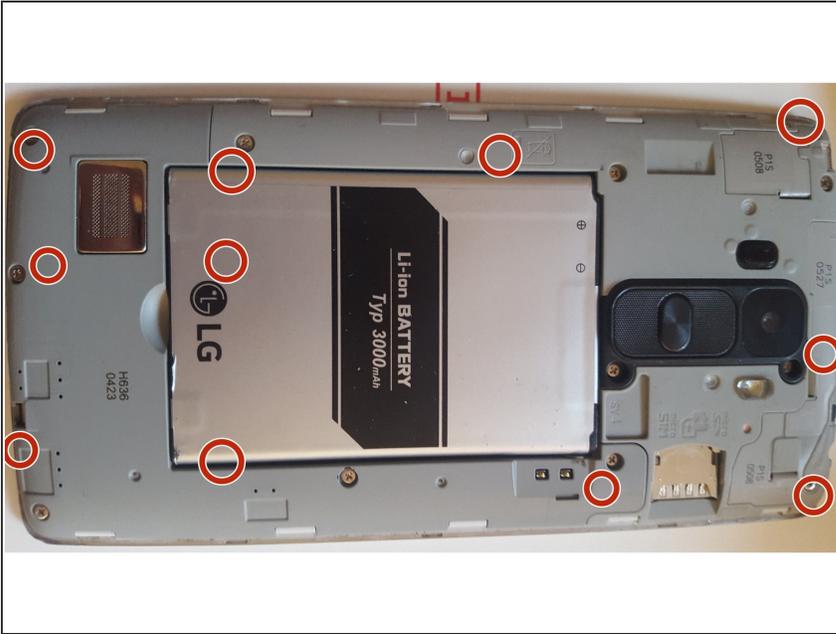

- Remove 11 screws

To reassemble your device, follow these instructions in reverse order.