



# LG Optimus V Speaker Replacement

This guide will show you how to repair and replace a broken speaker on your LG Optimus V phone

Written By: Joseph Pasquantonio



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
  - [2 Hands](#) (1)
  - [Pro Tech Toolkit](#) (1)
-

## Step 1 — Battery



- Turn the LG Optimus V over so that the back cover is facing upward.

## Step 2



- Locate the opening right above the camera.
- Use a spudger to detach the back cover.

### Step 3




- Gently remove the battery with your spudger.

### Step 4 — Camera



- Remove the six screws on the silver casing.
- Use the plastic opening tool to remove the silver casing.

## Step 5

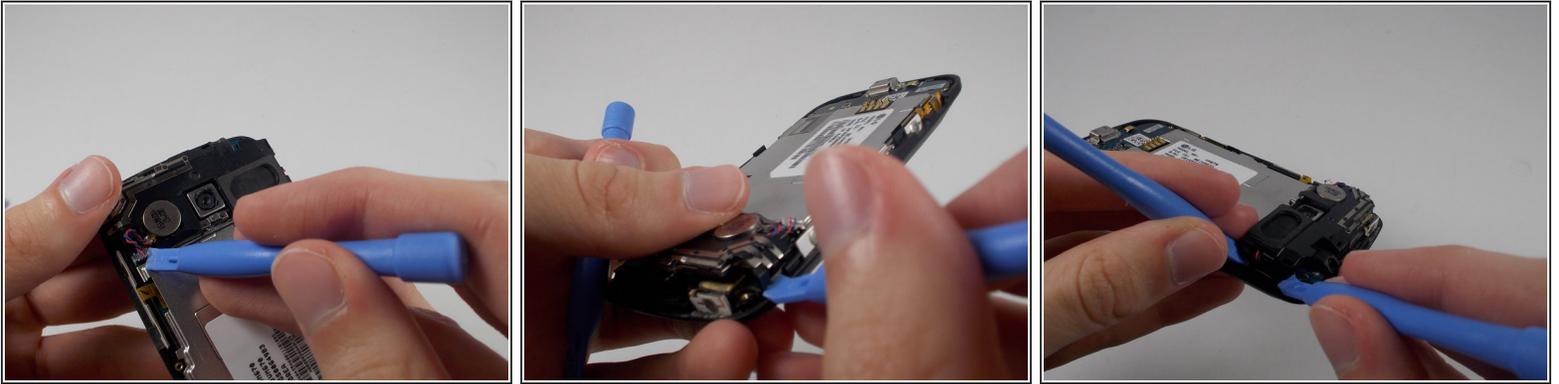

- Use a plastic opening tool to remove each area holding the parts together.

## Step 6





- Use a plastic opening tool to remove the small black and yellow piece that reads Y3114C.
- Use a plastic opening tool to pry off the camera.

## Step 7 — Speaker



- This is the speaker area

## Step 8

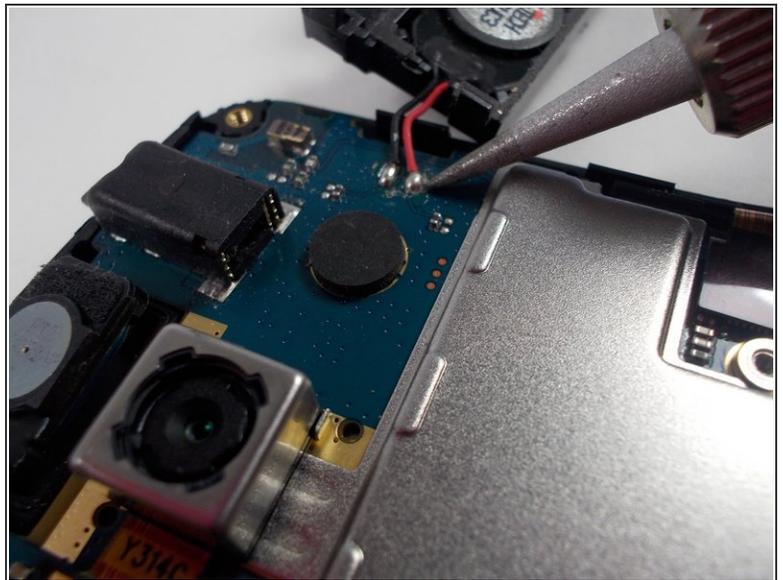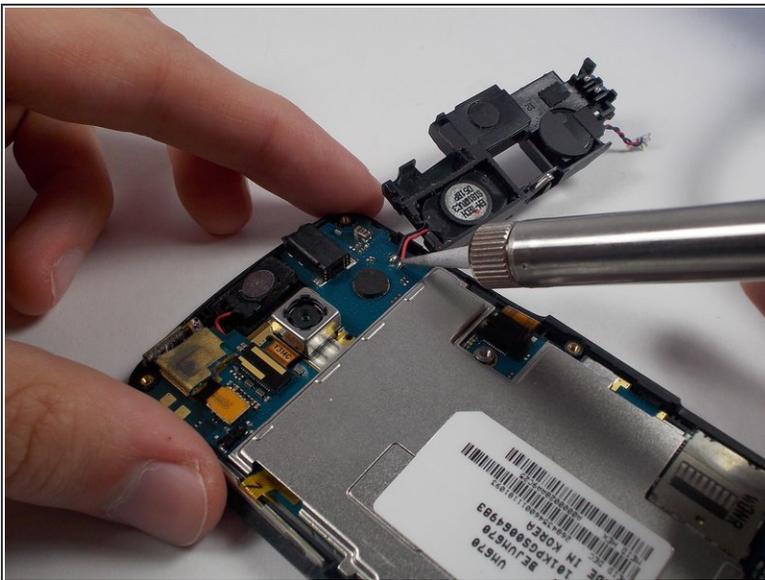

- Take your soldering iron and hit the two points where the wires meet the motherboard. Remove that part and take your new speaker and solder it back on. Speaker is now fixed.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-12 05:10:16 PM (MST).

