



Lenovo Essential G555-0873 Battery Replacement

This guide describes how to remove and replace the battery of the Lenovo Essential G555-0873.


Written By: Michael Elledge



INTRODUCTION


Removing the battery doesn't require any equipment, and does not have any steps that need to be completed prior to beginning the battery's removal. The battery may need to be replaced if the battery is too old and has expired. Use this guide to replace the battery in the Lenovo Essential G555-0873.

Step 1 — Battery

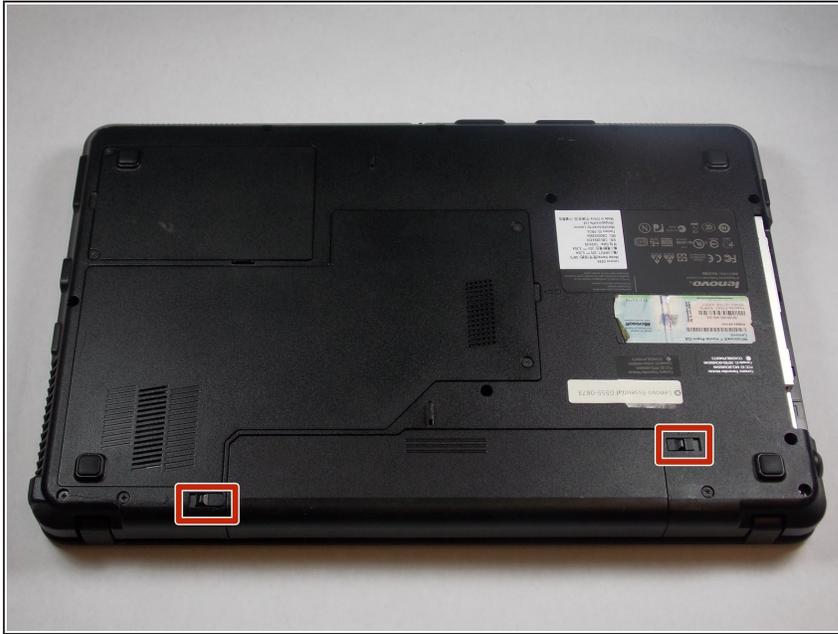

- Locate the switches on the bottom of the computer on either side of the battery, as shown in the picture.

Step 2

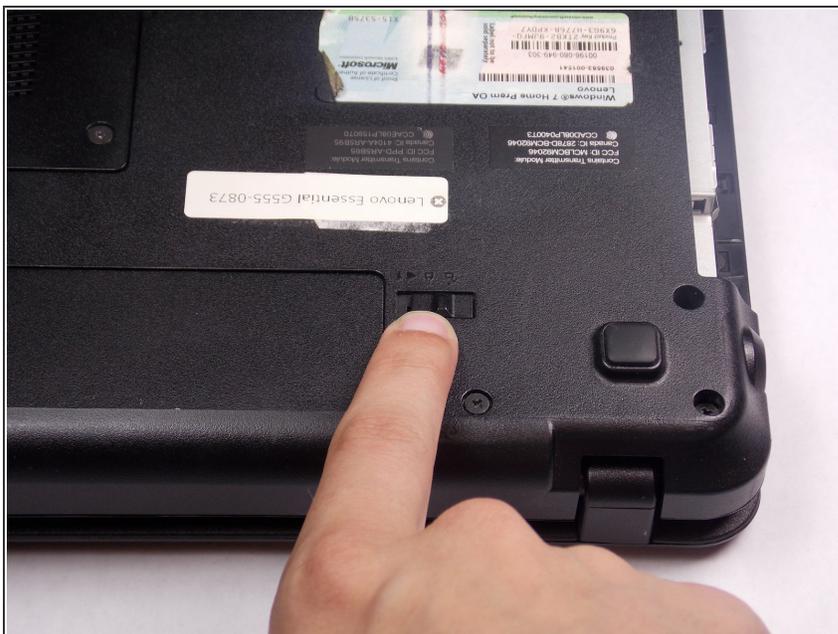

- Push the switch on the right to the “unlock” position. There will be an audible click.

Step 3



- Push and hold the switch on the left to its “unlock” position.

Step 4



- While still holding the switch on the left in the unlock position, slide the battery out.

To reassemble your device, follow these instructions in reverse order.