


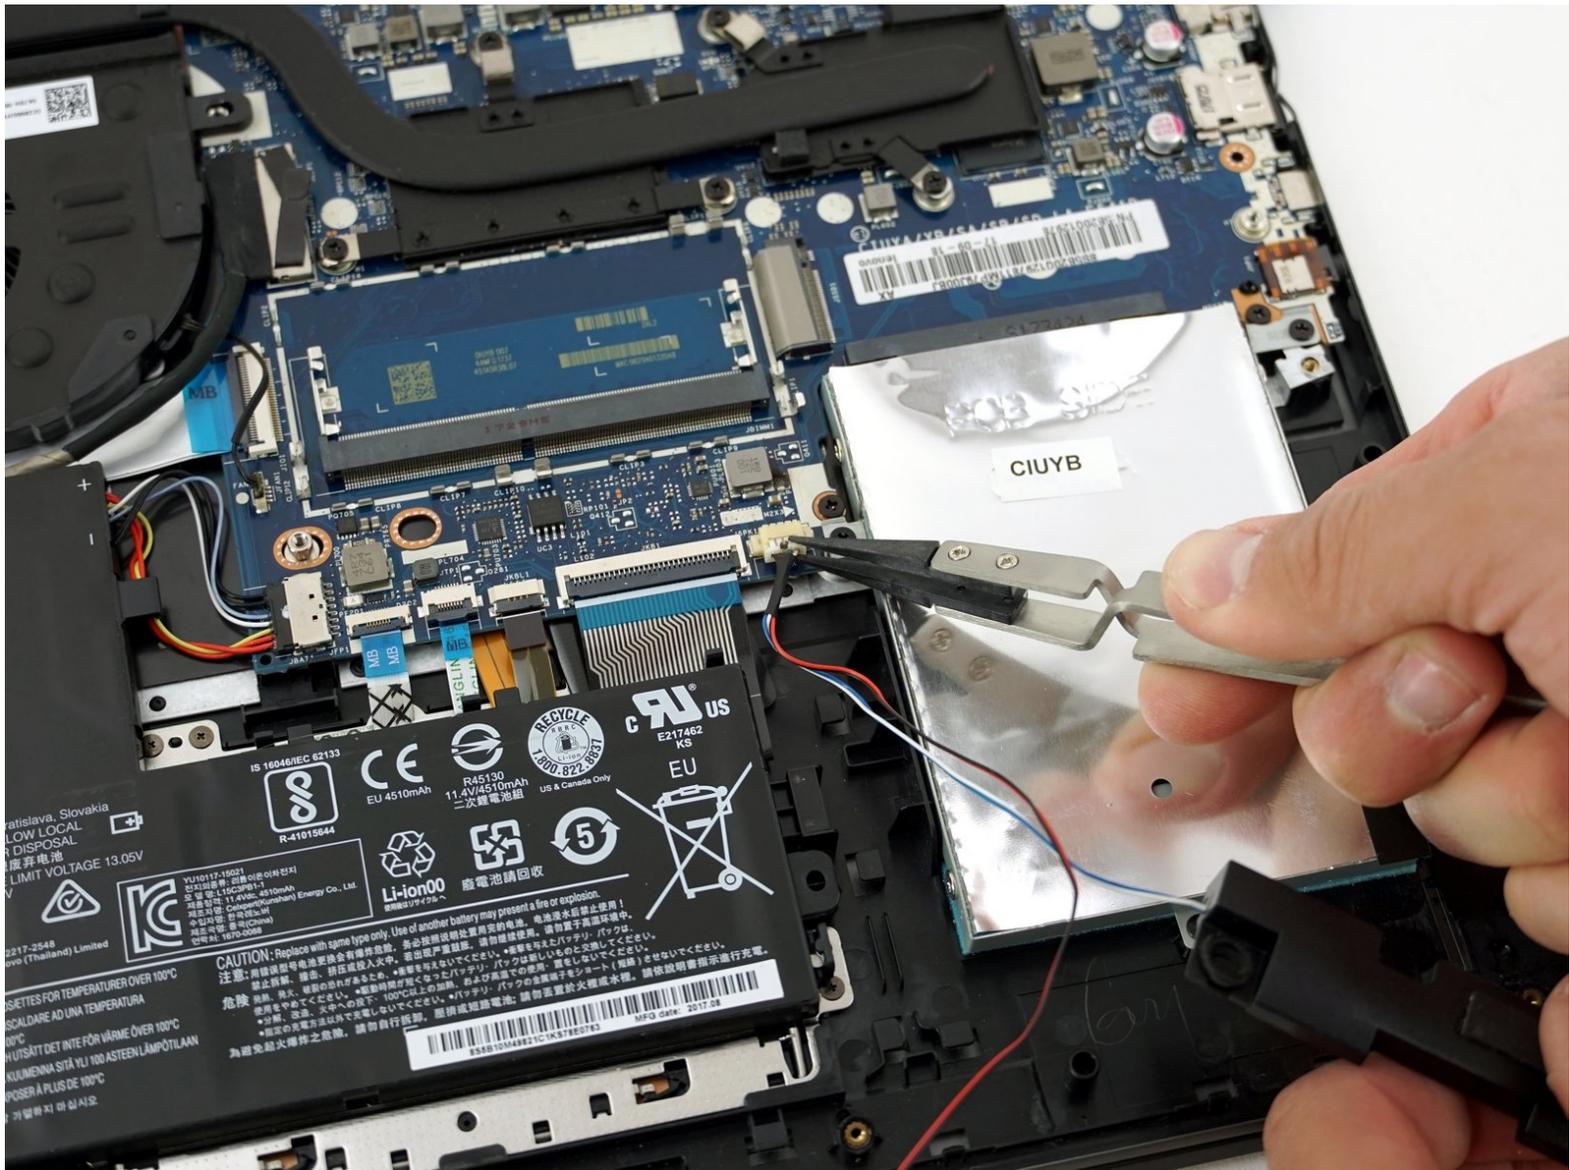

Lenovo IdeaPad Flex 5-1570 Speaker Replacement

A faulty speaker in the Lenovo IdeaPad Flex 5-1570 can result in poor/no audio output. This guide will show you how to successfully replace the speaker.

Written By: Nate Blake



This document was generated on 2020-04-06 09:00:36 AM (MST).

INTRODUCTION


The speakers of any laptop are essential for listening to music, watching videos, etc. Faulty or broken speakers can be extremely frustrating. Your Lenovo IdeaPad Flex 5-1570's speakers may not be working properly because of a hardware issue and if that is the case, check out this device's [troubleshooting page](#) to see if you can fix the issue without replacement.

The speakers may also be having software problems, and if that is the case then a replacement is necessary. Luckily, replacing your speakers is straight-forward and does not require many tools or experience working with devices.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Nylon Tipped Tweezers](#) (1)
-

Step 1 — Back Panel

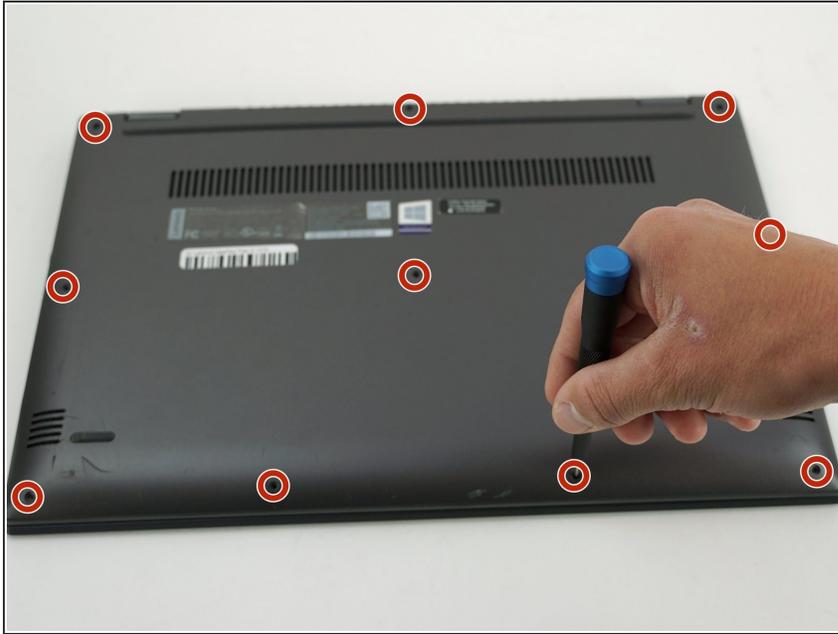

- Remove the ten 5 mm Phillips #00 screws that are holding the back panel on.

Step 2




- Gently use the plastic opening tool around the edges of the laptop to pry up the back panel.

Step 3 — Speakers



- Using the iFixit nylon tipped tweezers, disconnect the wire that connects the speakers to the motherboard.

Step 4

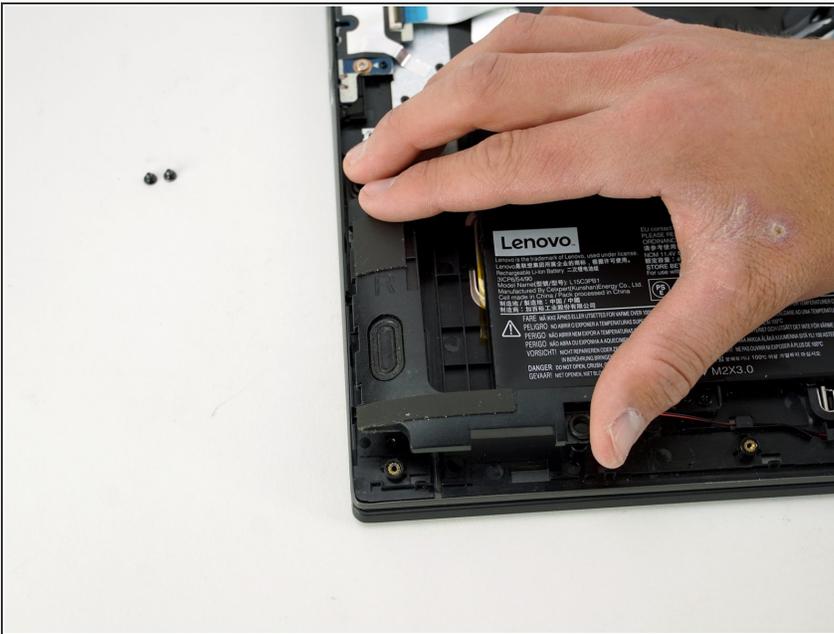

- Using your hands, gently pull the speaker up and out of the device.

Step 5



- Repeat the two previous steps for the other speaker.

To reassemble your device, follow these instructions in reverse order.