



---

## INTRODUCTION


To remove the speakers, follow this guide.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery

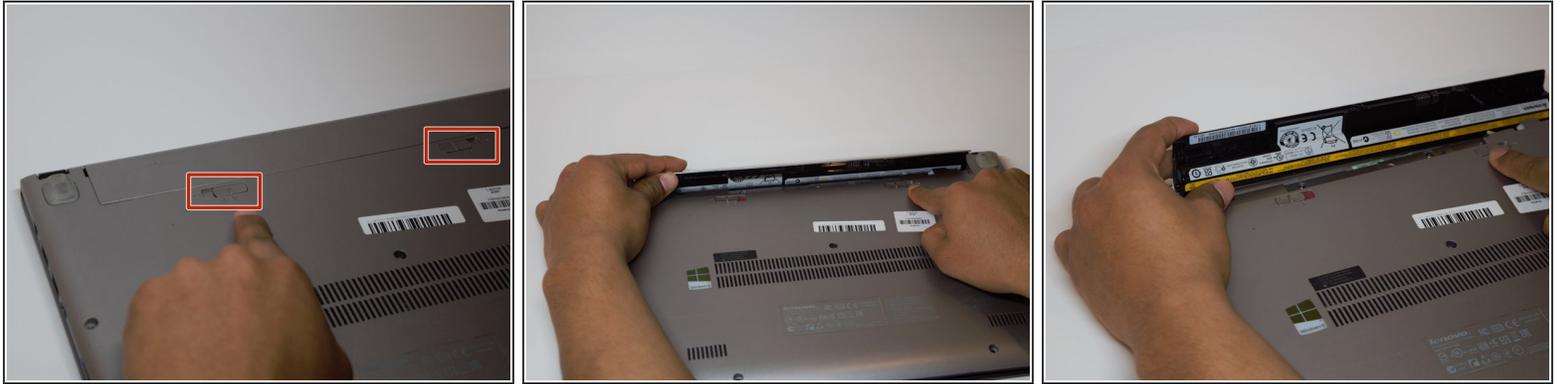


- Turn your computer over so the back is face up.
- Use your forefinger to unlock the two tabs located on the back. Slide the tabs until you see the red showing.
- The battery cover will then pop up allowing you access to the battery.

## Step 2 — Speakers




- Remove the five 6mm Phillips #0 screws from the back panel.
- Pull back the rubber tabs from the corners of the laptop backing to expose the screws.
- ⓘ The two tabs next to battery flip toward the battery. The two remaining tabs flip down, away from the battery.
- Remove the four 4mm Phillips #0 screws that are underneath the rubber tabs.
- Remove the three 6mm Phillips #0 screws from under the battery.

### Step 3

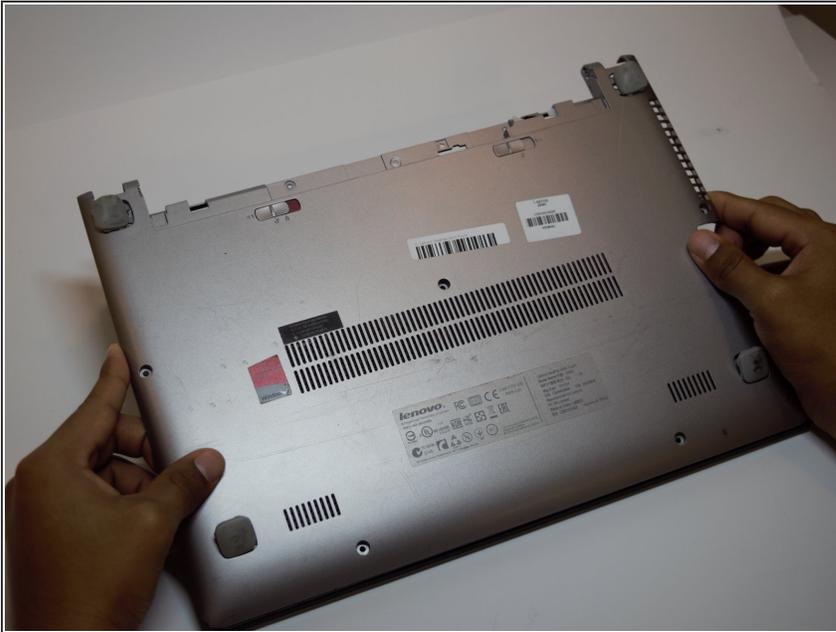

- Slide the back panel away to remove it.
- ⓘ Don't be afraid to apply force when removing the back panel.

### Step 4

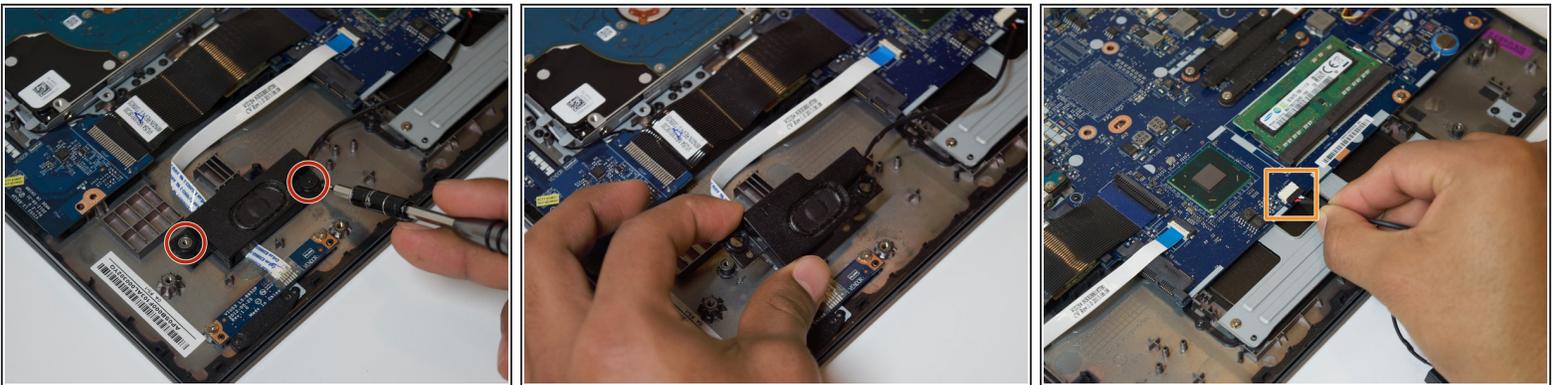

- Remove the two 2mm Phillips #0 screws from each speaker.
- Take the speakers off the base.
- Pull the connecting cable from the motherboard, which will release the speakers.

To reassemble your device, follow these instructions in reverse order.