




Lenovo Ideapad Flex 4-1570 Battery Replacement

How to replace the battery on your Lenovo Ideapad Flex 4-1570

Written By: Isaiah Vang

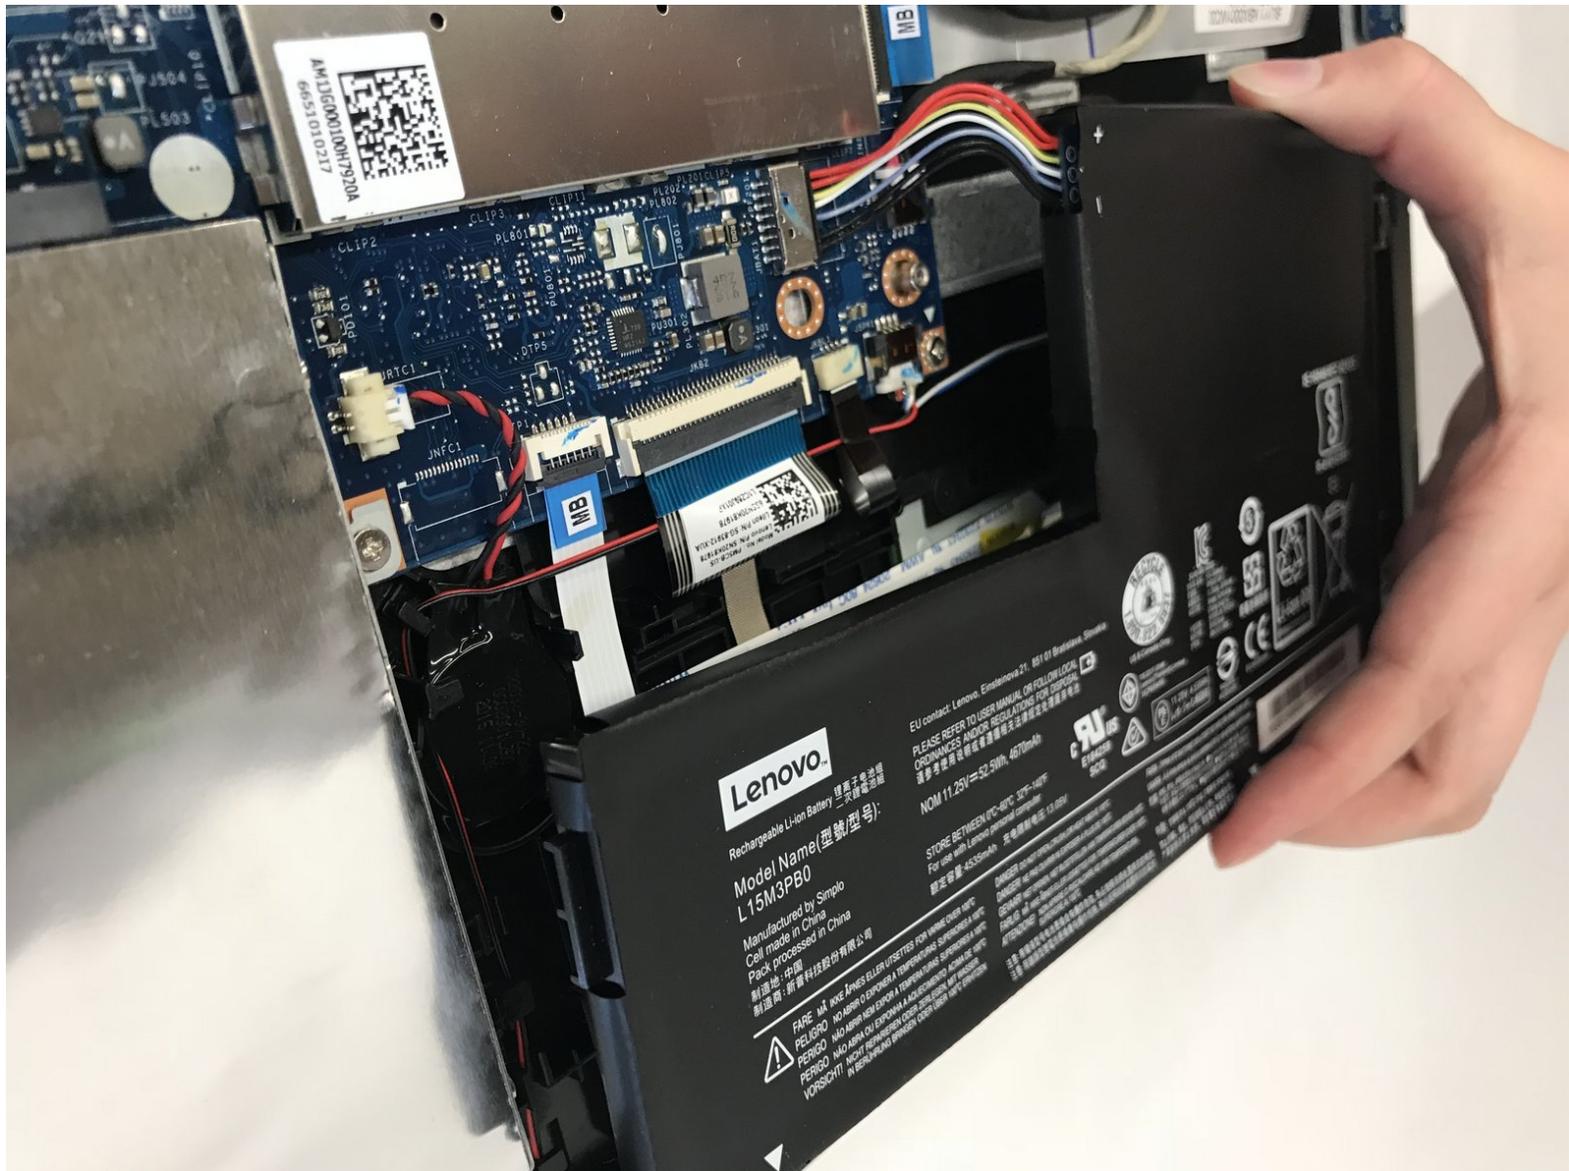

INTRODUCTION

If your Lenovo's Ideapad Flex 4 battery cannot hold a charge, and your laptop dies if not plugged in, use this guide to replace your battery.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [Lenovo Flex 4-1470 and Flex 4-1570 Replacement Battery](#) (1)

Step 1 — Back Panel



 Turn off your laptop before you begin.

Step 2




- Remove the nine 6 mm screws using a T5 Torx Screwdriver.
- Remove the two 10 mm screws using a T5 Torx Screwdriver.

Step 3



- After all of the screws are removed, use a plastic opening tool to carefully pry the black cover off.
- Remove the back cover.

Step 4 — Battery

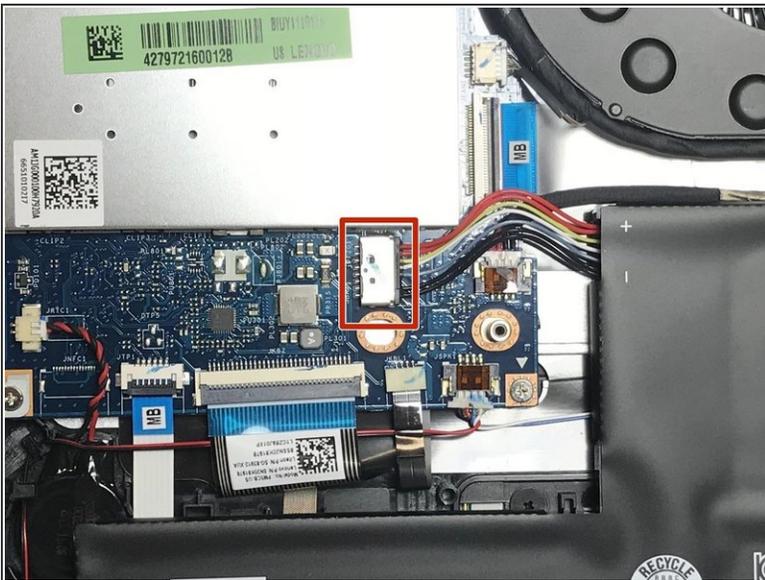


- Disconnect the battery by using a plastic opening tool or your fingers to push the connector towards the battery.
- ⚠ Do not pry or pull on the socket itself or you risk damaging the motherboard.

Step 5



- Remove the three 4 mm screws using a T5 Torx Screwdriver.

Step 6

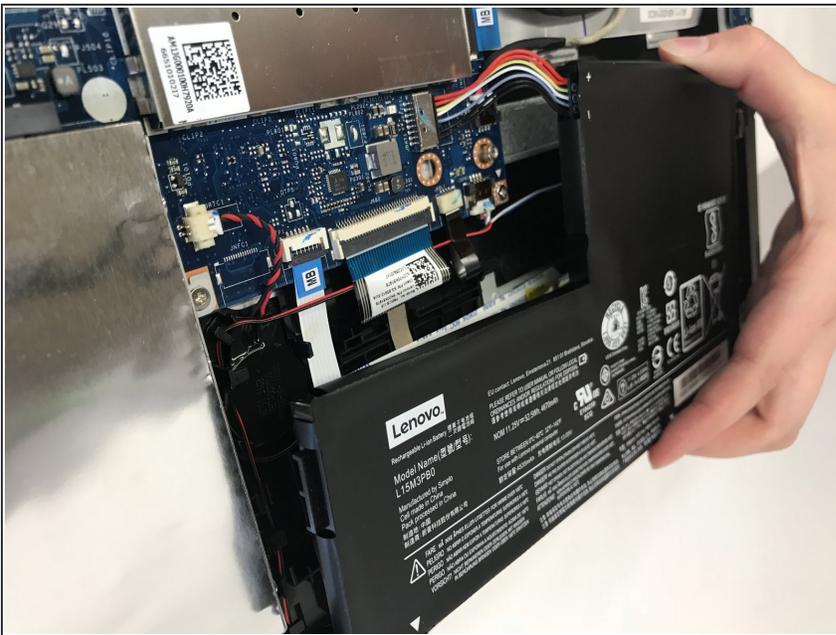

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).