




# Lenovo ThinkPad Helix Battery Replacement

This guide will help you replace a ThinkPad Helix battery step by step.

Written By: Manuel Parra Rocha

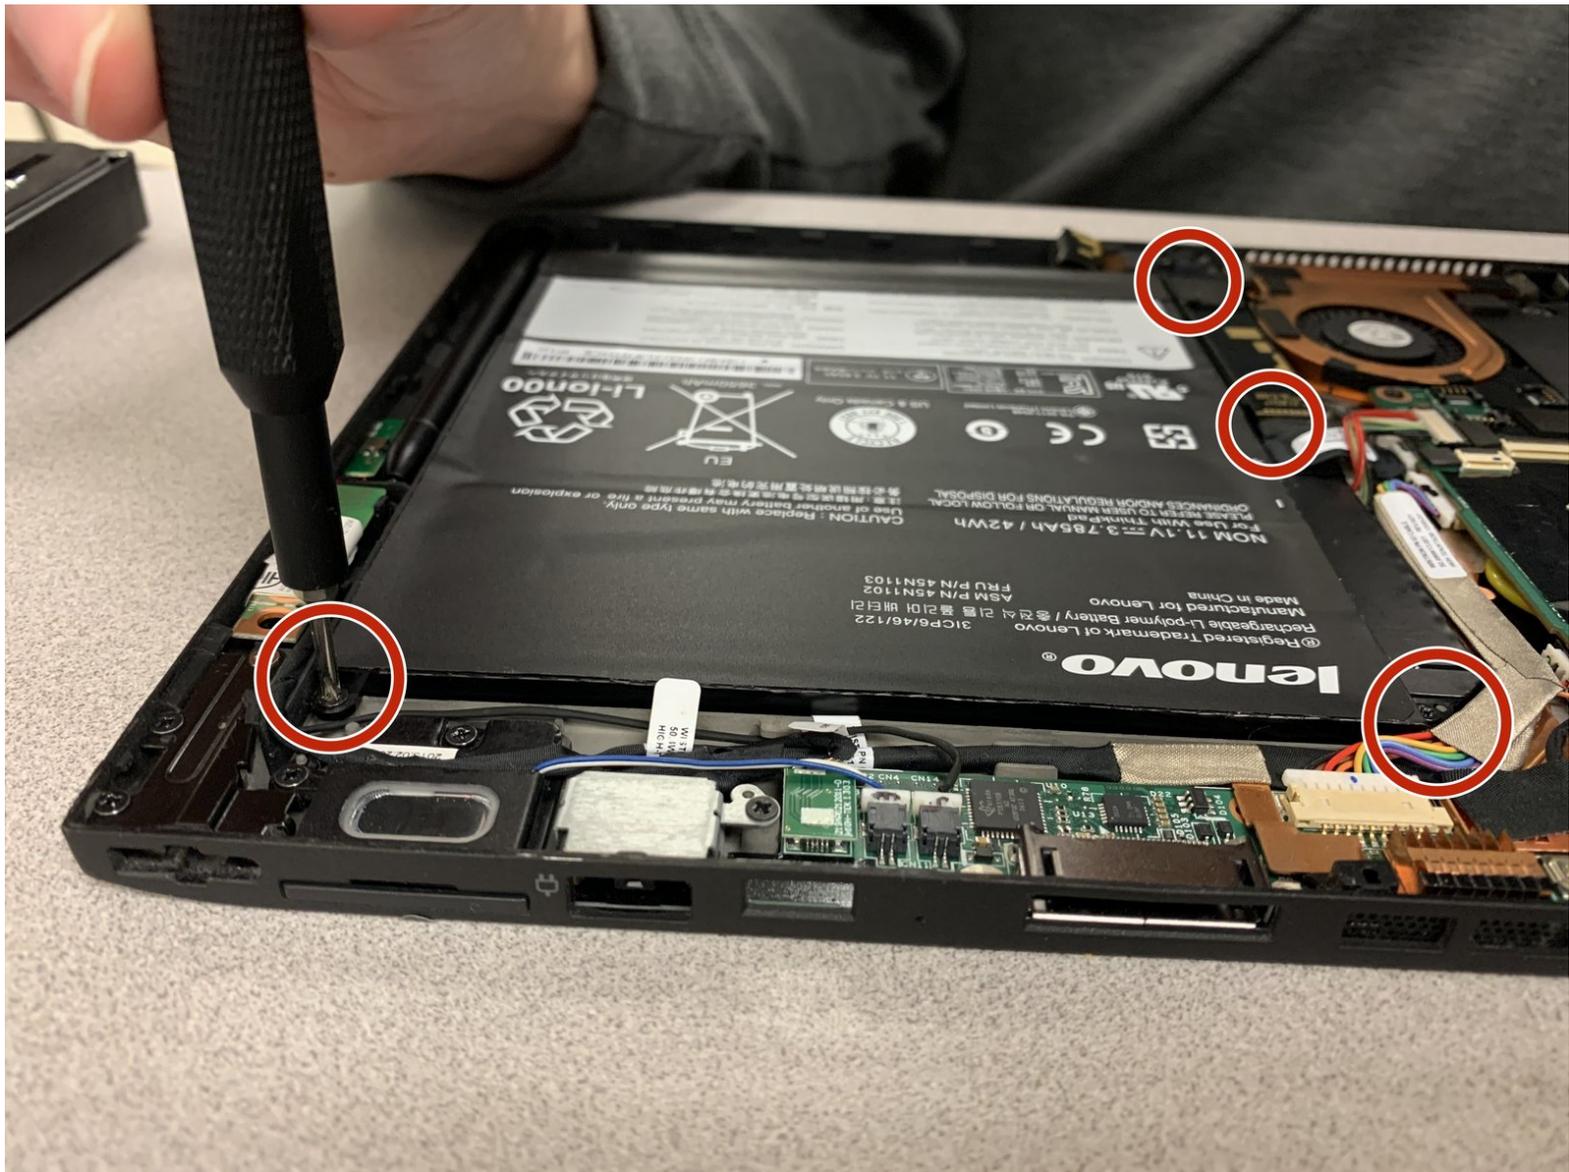

## INTRODUCTION

This guide provides information on how to replace a Lenovo ThinkPad Helix battery.

Replacing a battery is essential to keep your device on and running for use. When following these steps remember to maintain a safe work space and a place to store screws that way you do not lose anything.

Lenovo adds that; “Use only the authorized battery specified for your tablet. Any other battery could ignite or explode.” This is essential to keep you and your device safe, intact and usable.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Screen




- Using a plastic opening tool or opening pick, gently pry the screen off.
- ⚠ If possible, use plastic tools to pry the screen, as the metal tool as shown in the image can potentially damage your device.
- ⓘ You will need to use a little bit of force to pry it open. There is little indent that goes around the tablet. You will insert your tool between this indent and pry it open.
- Once you're able to lift a little bit of the screen away from the tablet, work your way around until screen is separated from tablet. Stop for step two.

## Step 2

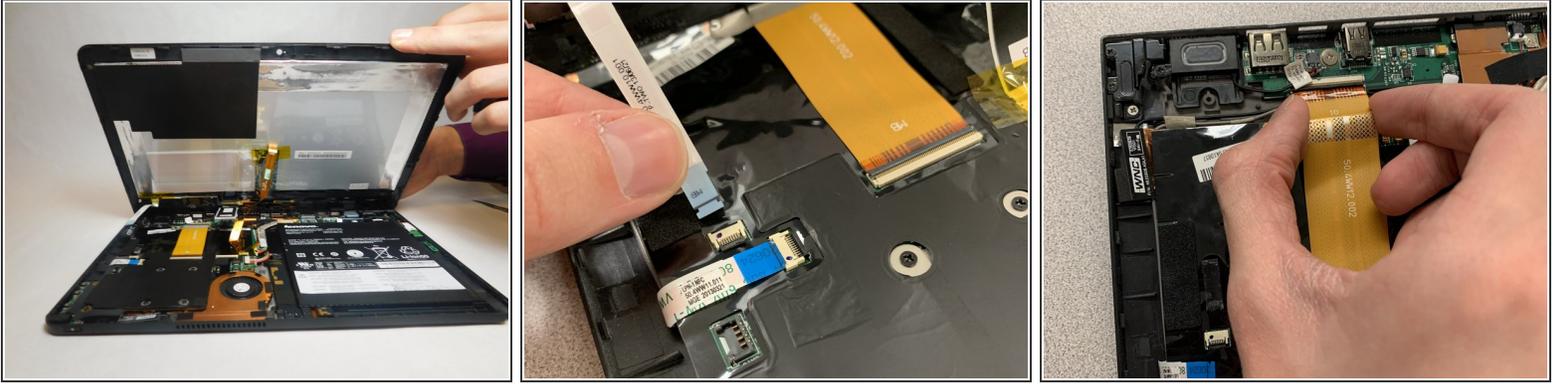


- Lift the screen up slowly.
- ⓘ Once separated, you can not fully take it off due to some cable connections.
- Open the clips of the ZIF connectors and gently grab the cable to pull it out.

## Step 3

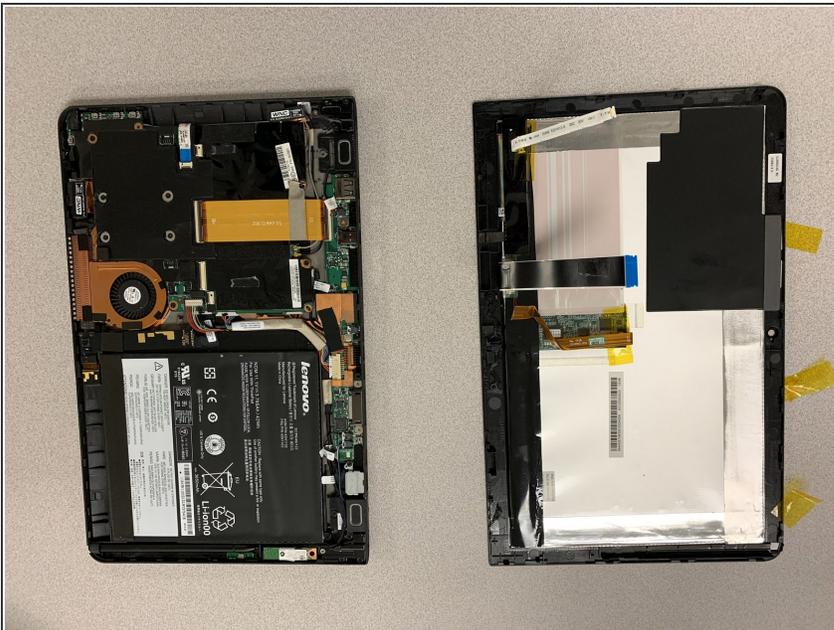

- Once the cables are disconnected, remove the screen.

## Step 4 — Battery

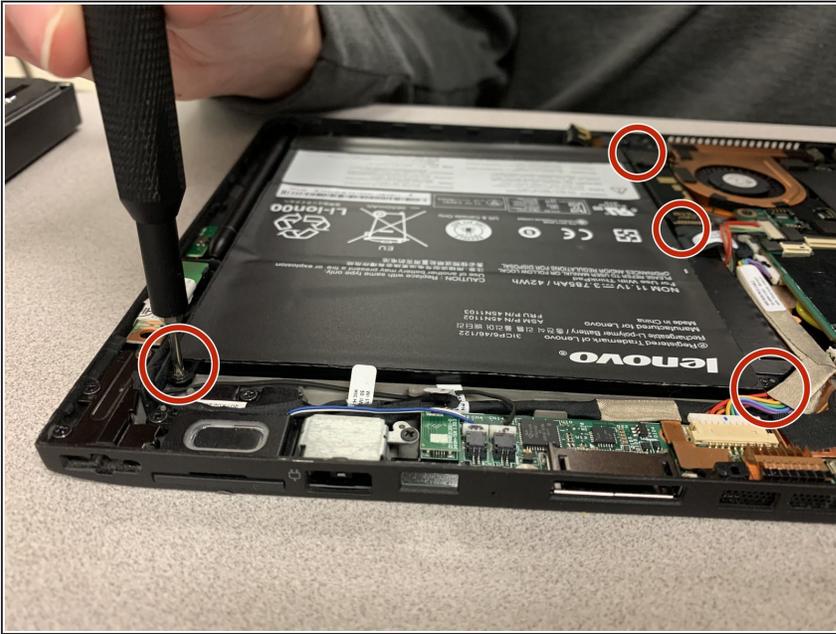

- Using a Phillips #00 screwdriver, unscrew the four nylon-coated 3 mm screws holding the battery in place.

## Step 5



- Disconnect the battery cable from the motherboard.
- Lift the battery out of the device.

To reassemble your device, follow these instructions in reverse order.