



# Lenovo ThinkPad T410s Keyboard Replacement

This guide will instruct you on how to replace the keyboard on your Lenovo ThinkPad T410s.

Written By: Blake Wilson



## INTRODUCTION

This guide will instruct you on how to replace the keyboard on your Lenovo ThinkPad T410s.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
- [Spudger](#) (1)

### PARTS:

- [Lenovo Keyboard - 45N2211](#) (1)

## Step 1 — Battery




- Flip the laptop over.
- Push and hold the locking switch to the left.
- Pull the battery out with your other hand.

## Step 2 — RAM




- Remove the single Phillips #0 screw from the back panel.
- Pull the back panel off.

### Step 3

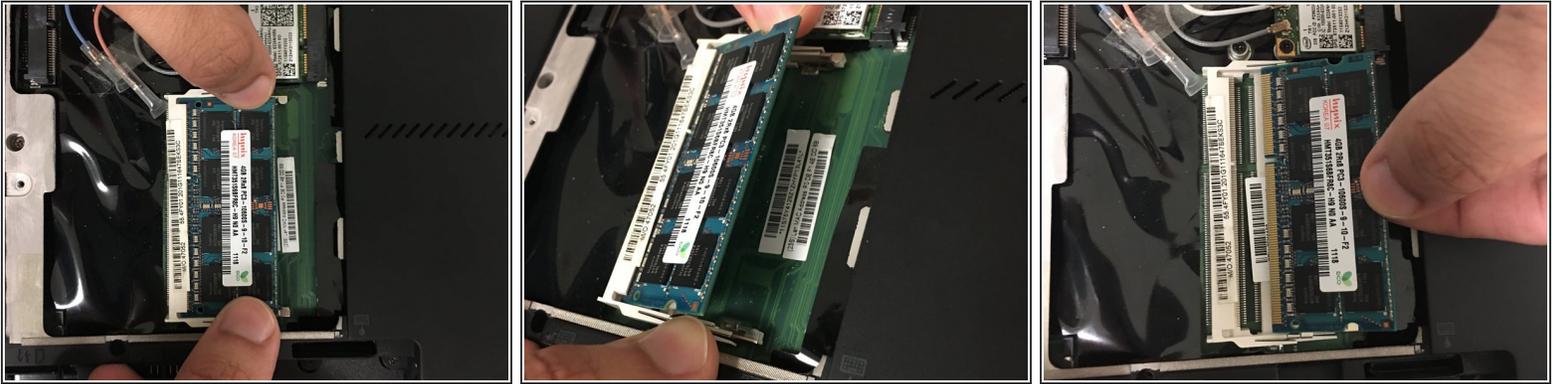

- Pull the metal prongs at the side of the RAM away from each other.
  - ⓘ The RAM will pop out of its socket when done correctly.
- Pull the RAM out.

### Step 4 — Hard Drive

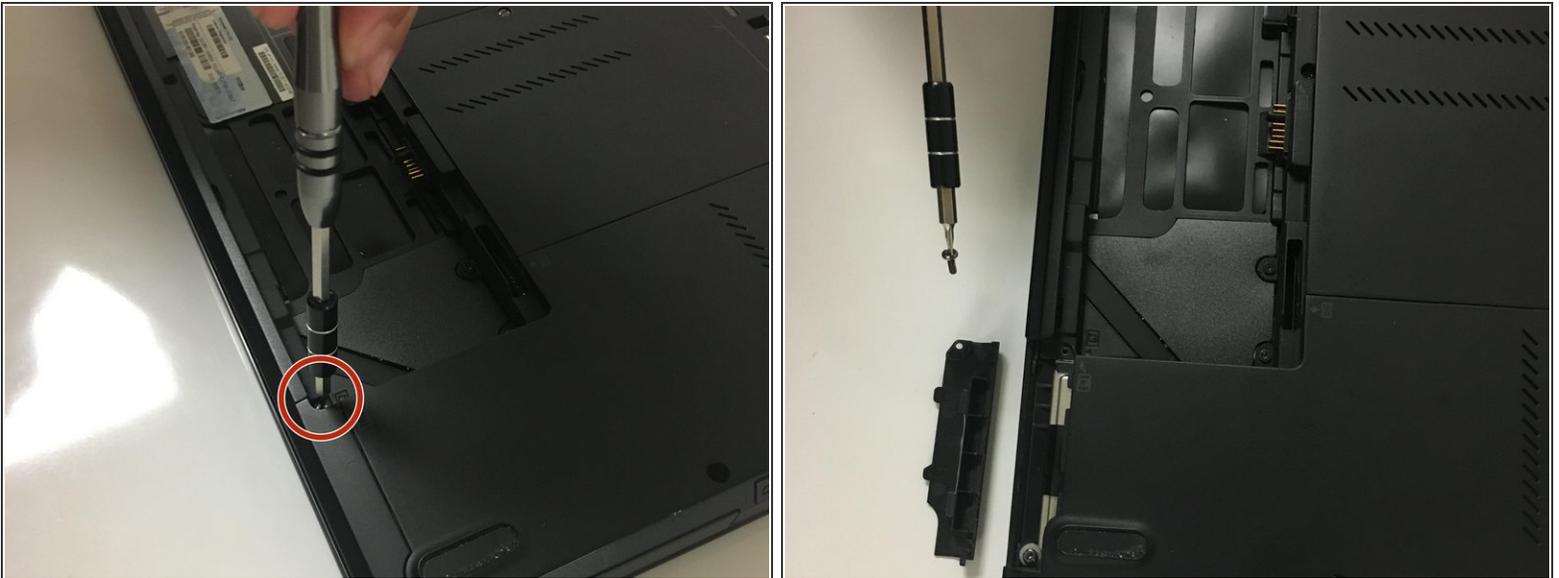

- Remove the single Phillips #0 screw that secures the hard drive cover.

## Step 5




- Flip the black plastic tab out.

## Step 6





- Pull the hard drive out.

## Step 7 — Keyboard

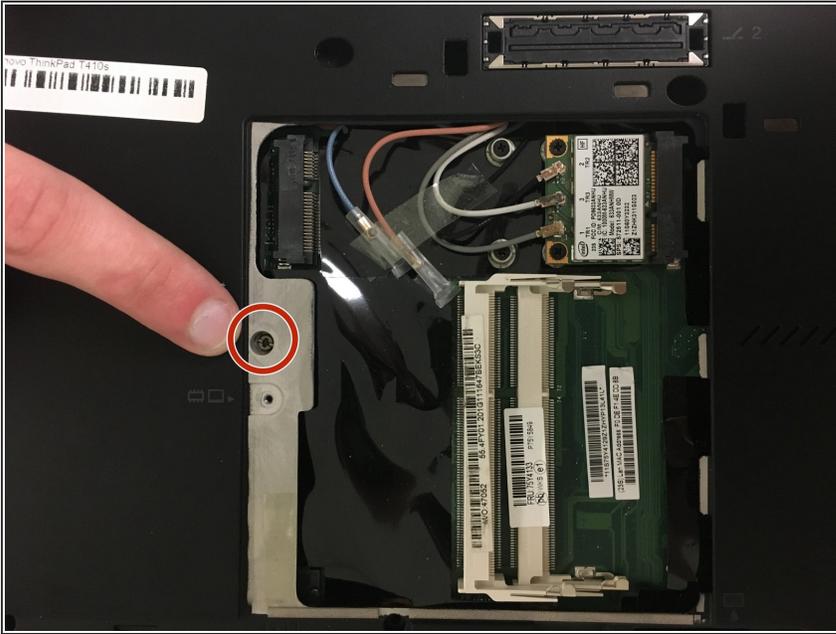

- Remove the Flathead 2.5mm screw.
- Flip the laptop over.

## Step 8

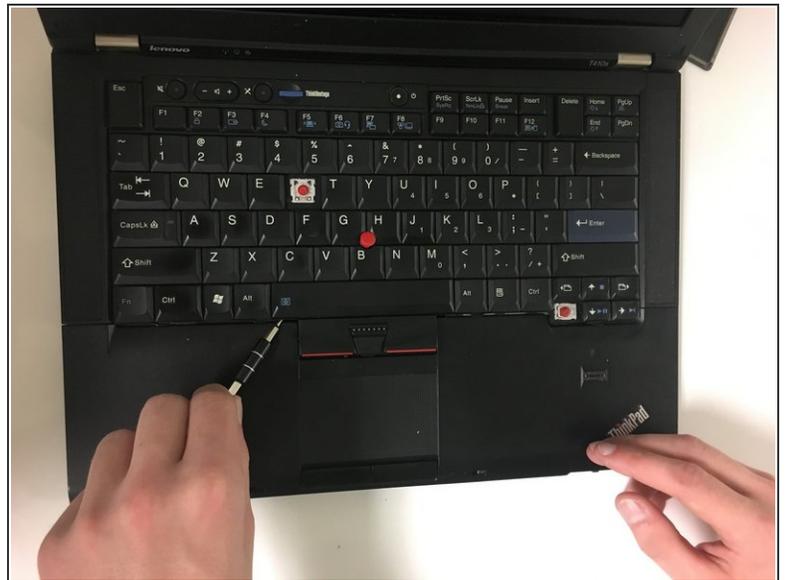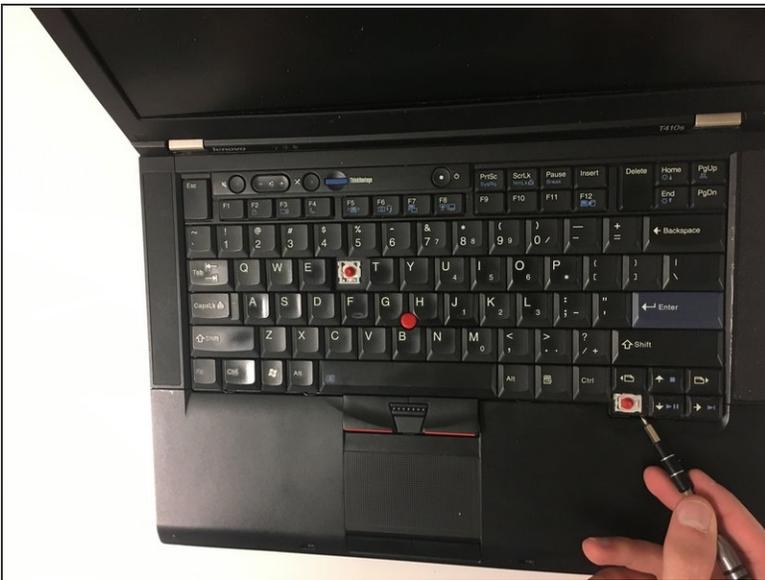

- Wedge the flat end of a spudger, or plastic opening tool, under the end of the keyboard and pry up.


## Step 9



- Slide the keyboard out of the way until you can see what's underneath it.

⚠ The keyboard is still attached with a ribbon cable so don't try to fully remove it.

## Step 10

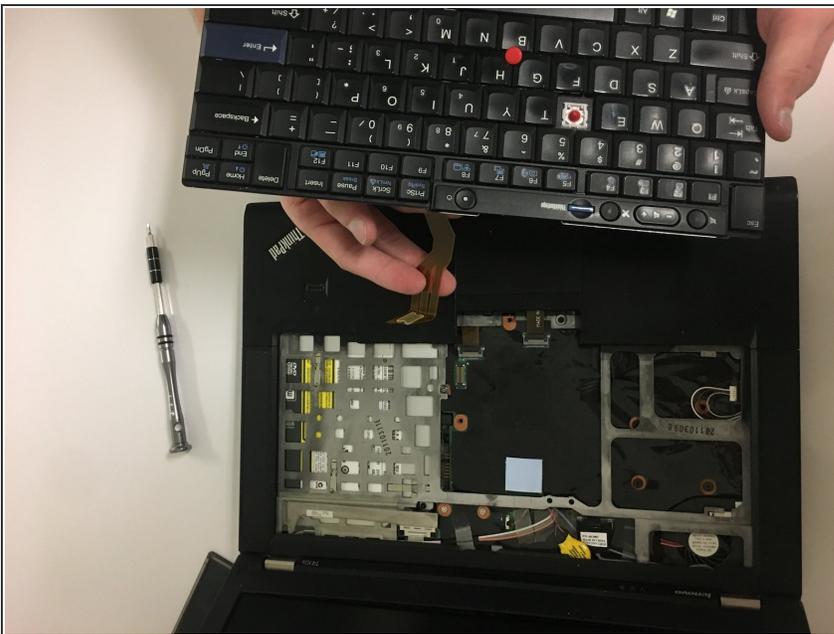

- Use the flat end of a spudger to unplug the keyboard connector from the laptop.
- Pull the keyboard out.

To reassemble your device, follow these instructions in reverse order.