




# Lenovo Yoga 2 11" 20428 Speaker Replacement

This guide will show how to properly remove and replace the speaker modules in a Lenovo Yoga 2 with the serial number 20428.

Written By: Joshua Thomas Tyler

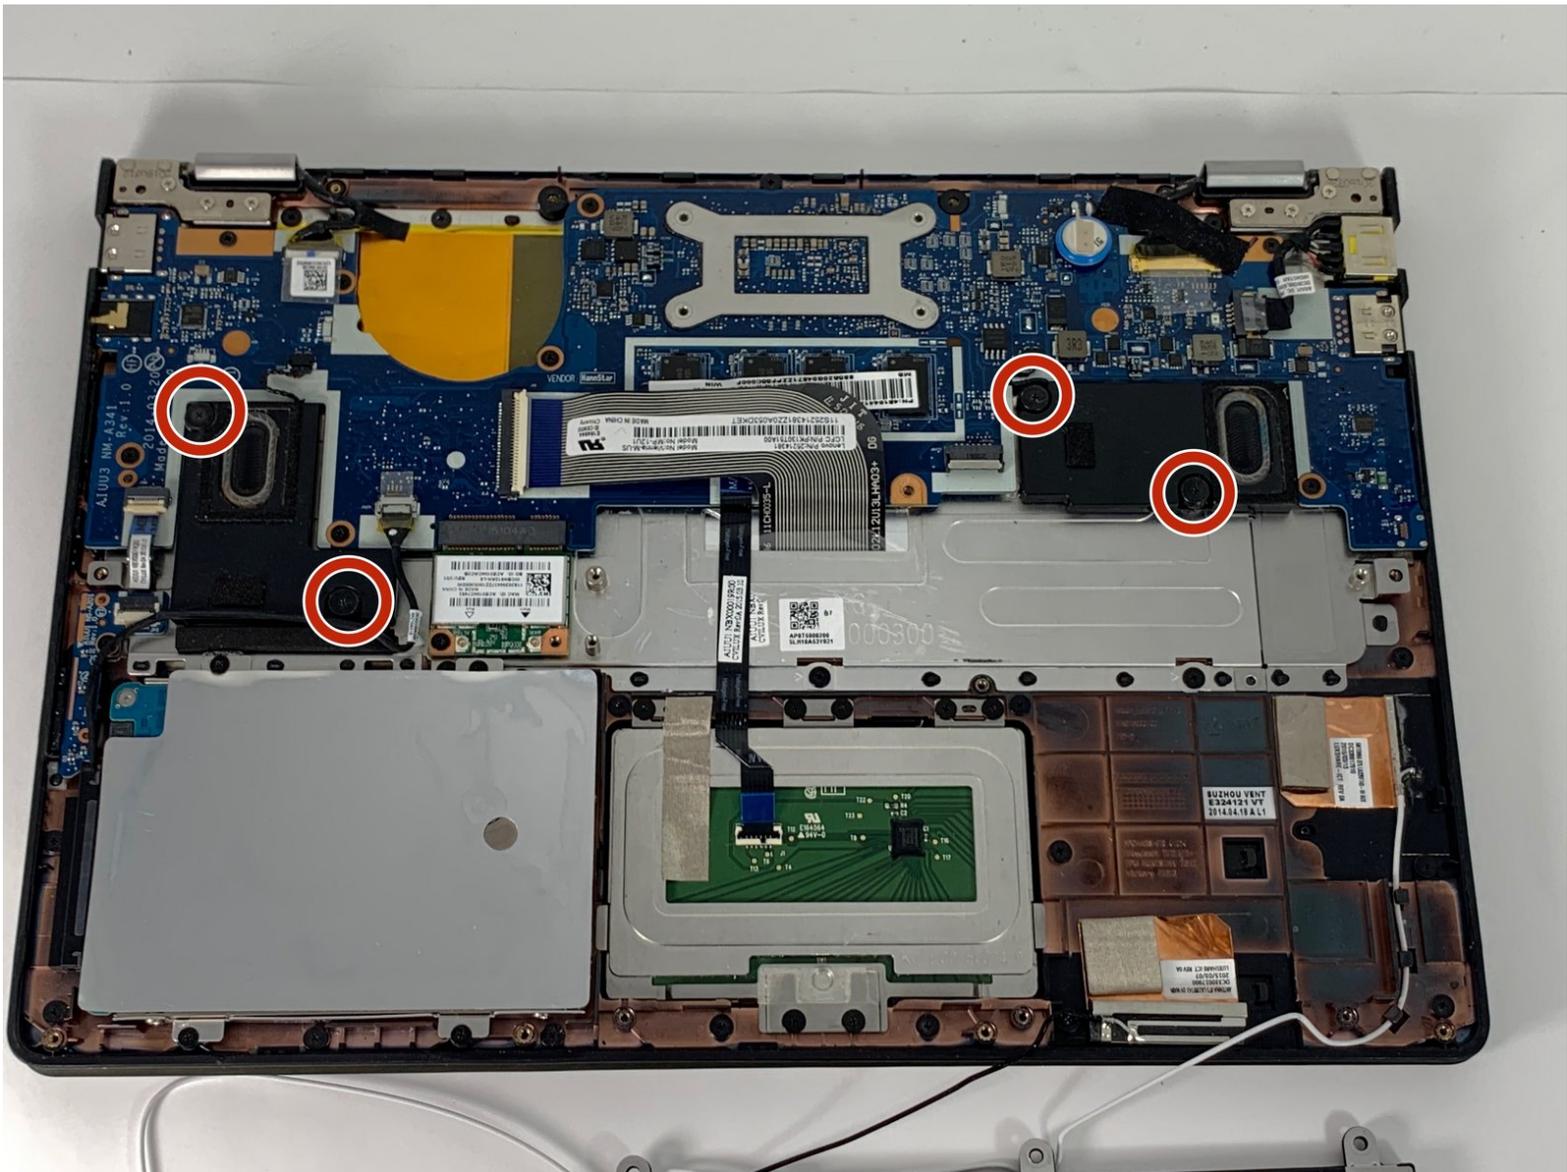

This document was generated on 2019-12-28 08:17:43 AM (MST).

---

## INTRODUCTION

This guide will show the step-by-step process of removing and/or replacing the speakers in the Lenovo Yoga 11" 20428. This guide can be used to replace broken speakers and remove speakers for repair. When removing your speakers, make sure to remove the battery before beginning the speaker removal process.

---

### TOOLS:

- [T4 Torx Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Panel




- Flip the computer over so the bottom is facing up.
- Remove the ten 6mm screws with a T4 Torx security screwdriver.

## Step 2



- Carefully remove the back panel by gently prying the panel from the front to the back.
- ⚠ Take care not to pull any wires or crack the outer shell.

## Step 3 — Battery

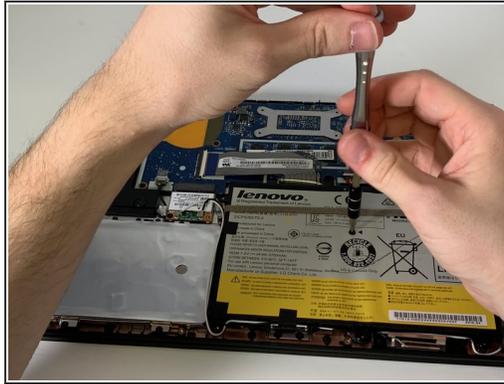



- Remove six 3.3 mm Phillips #00 screws around the perimeter of the battery.
- Remove one 6.75 mm Phillips #00 screw from the center of the battery.

## Step 4



- Remove the pieces of tape securing the bluetooth/wifi antenna.

## Step 5

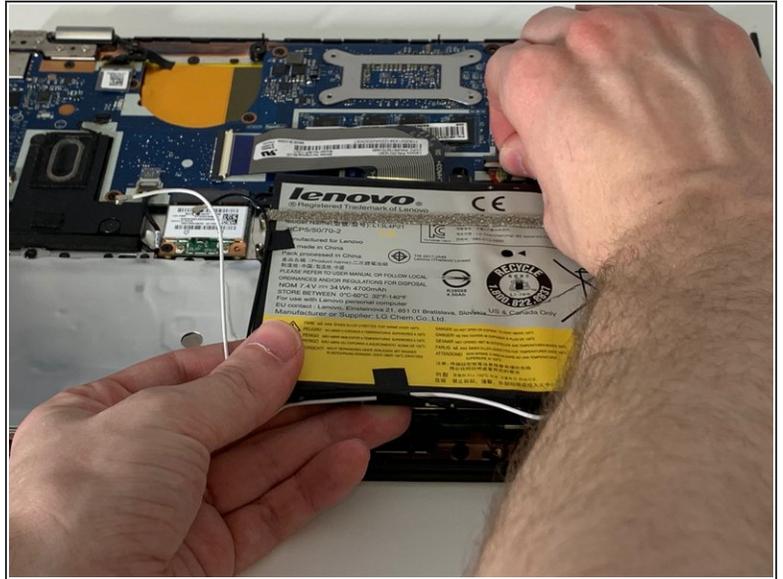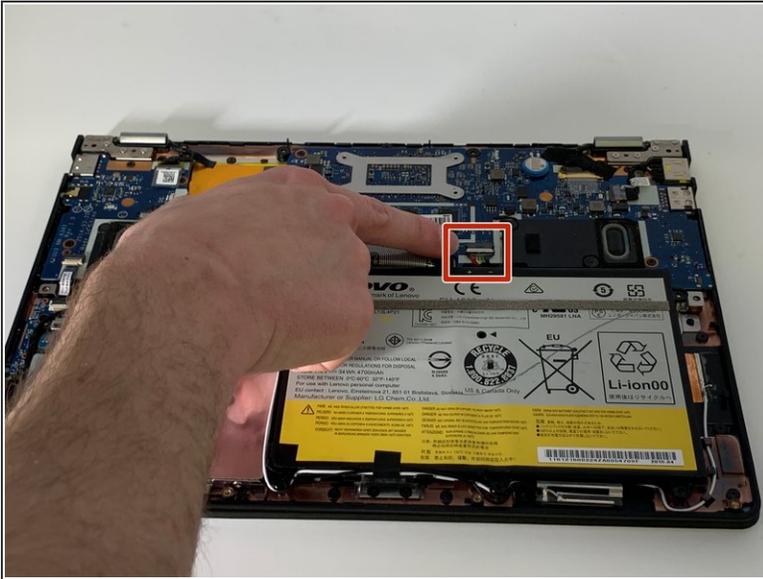

- Grip the base of the connector with your fingers or pliers, and gently pull the connector straight back towards you to remove it.

⚠ If possible try not to pull the connector out by the wires, as this can damage the connector.


## Step 6



- Carefully remove the battery from the laptop.


⚠ Take care not to pull out the Bluetooth antenna while removing the battery.

## Step 7 — Speaker

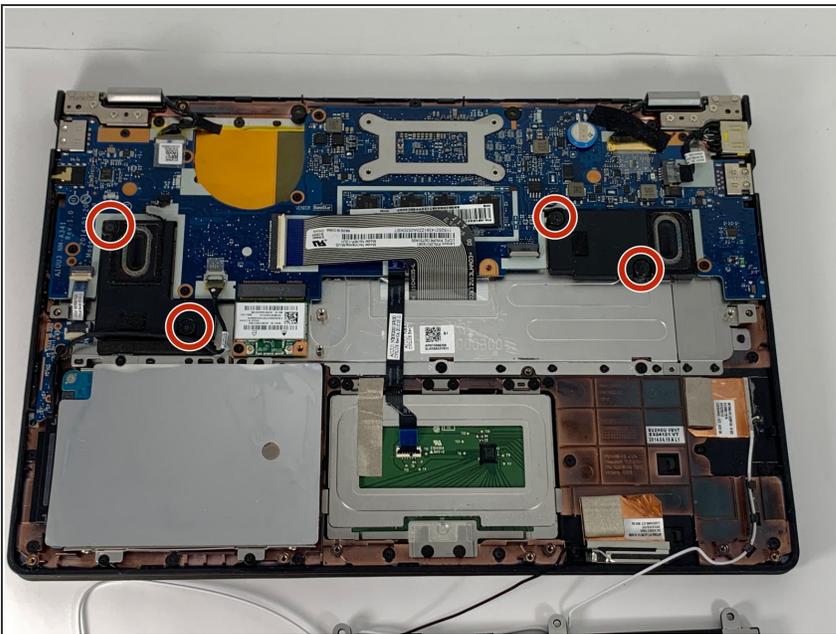

- Unscrew four 1.7 mm Phillips #00 screws.

## Step 8

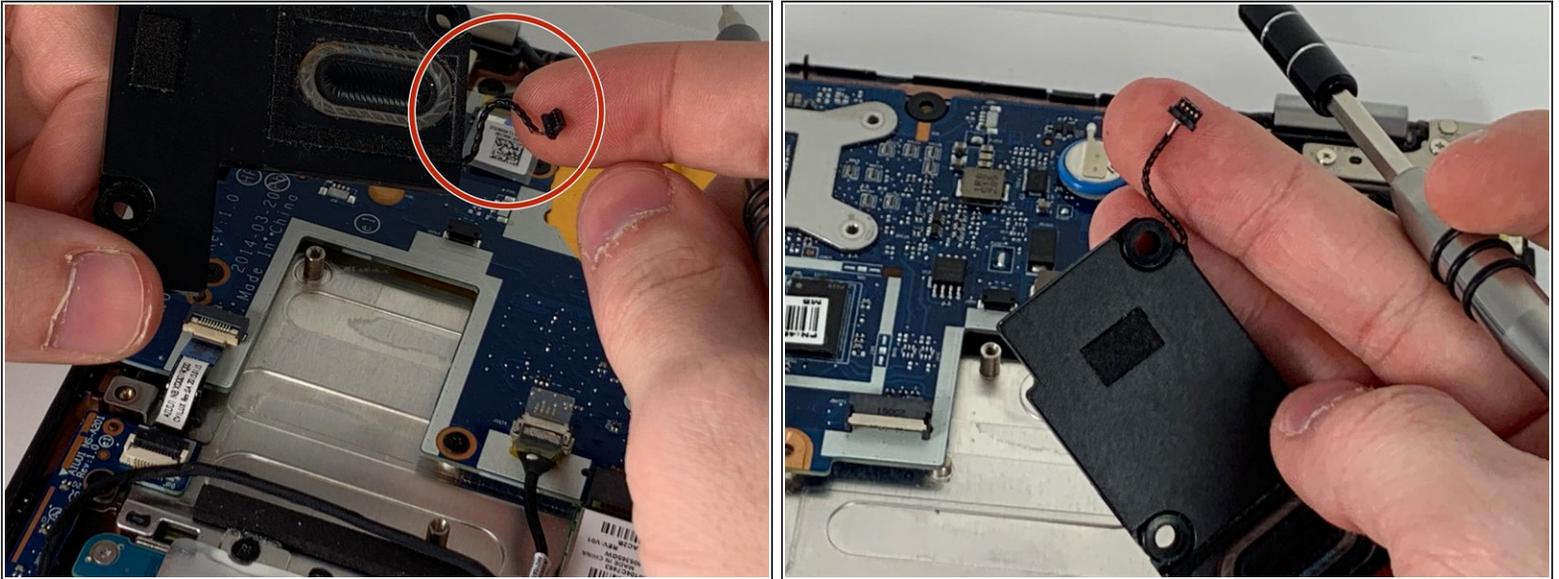

- Detach the speaker wire, and remove the speaker.

To reassemble your device, follow these instructions in reverse order.