



# MacBook Pro 13" Unibody Mid 2010 Clutch Cover Replacement

Replace the clutch cover on your MacBook Pro 13" Unibody Mid 2010.

Written By: Andrew Bookholt



---

## INTRODUCTION

Use this guide to replace a cosmetically damaged clutch cover.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Lower Case



- Remove the following 10 screws securing the lower case to the MacBook Pro 13" Unibody:
  - Seven 3 mm Phillips screws.
  - Three 13.5 mm Phillips screws.

## Step 2



- Slightly lift the lower case and push it toward the rear of the computer to free the mounting tabs.


## Step 3 — Battery



**⚠** For precautionary purposes, we advise that you disconnect the battery connector from the logic board to avoid any electrical discharge.

- Use the flat end of a spudger to lift the battery connector up out of its socket on the logic board.


## Step 4 — Display

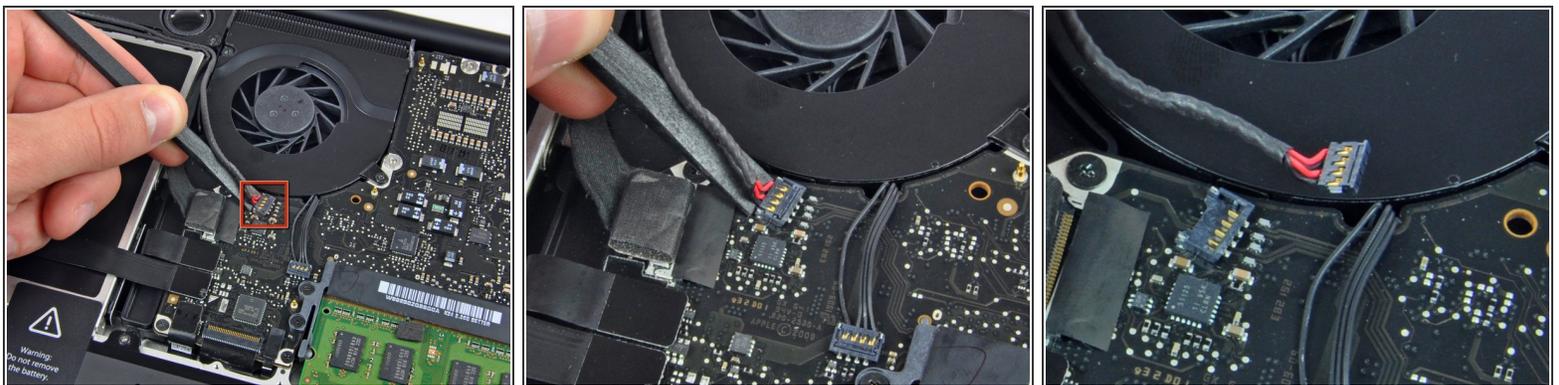

- Use the flat end of a spudger to pry the subwoofer/right speaker cable connector up off its socket on the logic board.

**⚠** Be very careful to pry under the connector as shown, and not under the socket itself. Otherwise you may accidentally separate the socket from the logic board.

## Step 5

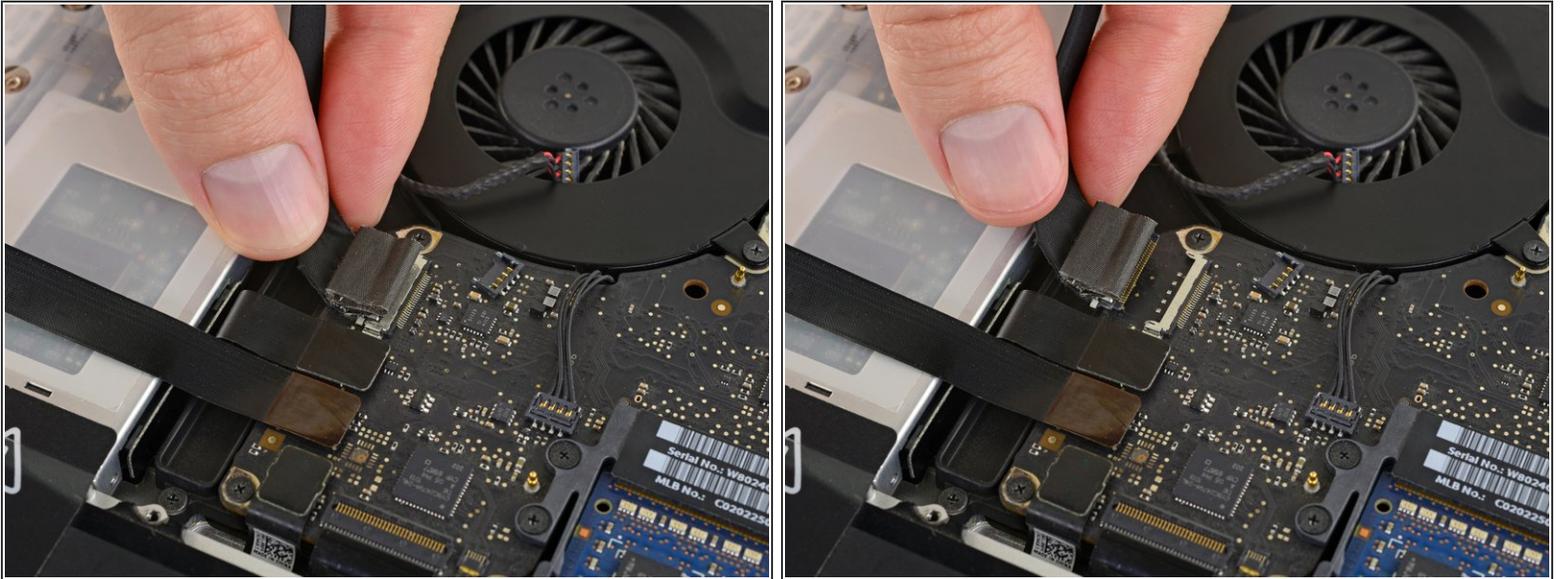



- Disconnect the camera cable by sliding it horizontally out of its socket.
  - ⚠ Pull the cable parallel to the surface of the logic board, in the direction of the optical drive. Do **not** pull straight up, or you will destroy the connector.
  - If you see a [small plastic retainer](#) stuck to the logic board that prevents the camera cable from sliding out, peel it up carefully from the logic board. Apply a little heat from a hair dryer or heat gun if necessary to help soften the adhesive holding it in place. **Do not** attempt to forcibly disconnect the cable with the retainer in place.
  - If you still have trouble, use the point of a spudger to push at each side of the connector and ["walk" it slowly from its socket](#).

## Step 6




- De-route the camera data cable from the channel in the optical drive.

## Step 7

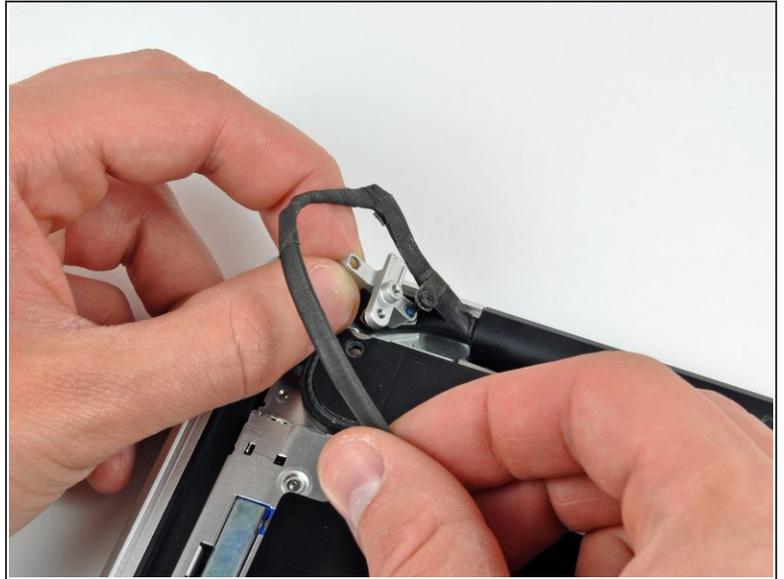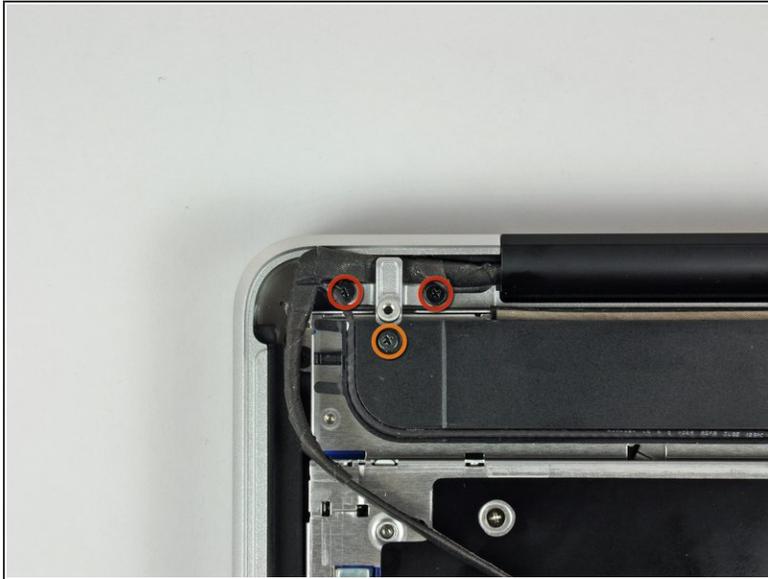



- Remove the following screws securing the camera data cable and right speaker to the upper case:
  - Two 8 mm Phillips screws.
  - One 4mm Phillips screw.
- ⓘ One of the 8 mm Phillips screws will likely remain captive in the camera cable ground loop.
- Slide the camera cable bracket out from under the subwoofer and remove it from the computer.

## Step 8

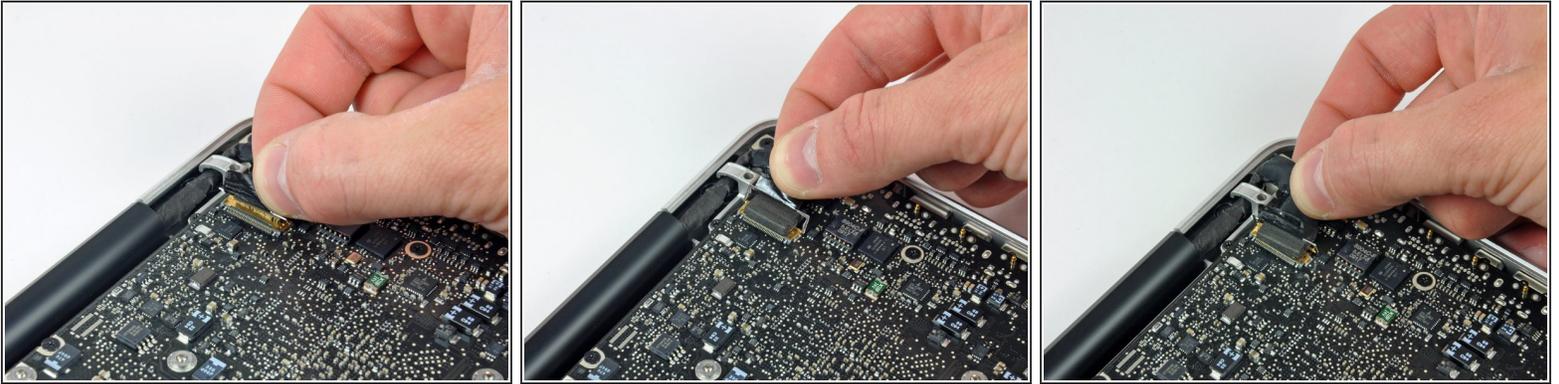


- Grab the plastic pull tab secured to the display data cable lock and rotate it toward the DC-in side of the computer.
- Pull the display data cable connector straight away from its socket.
- ⓘ Make sure to pull the connector straight away and not straight up from its socket.

## Step 9

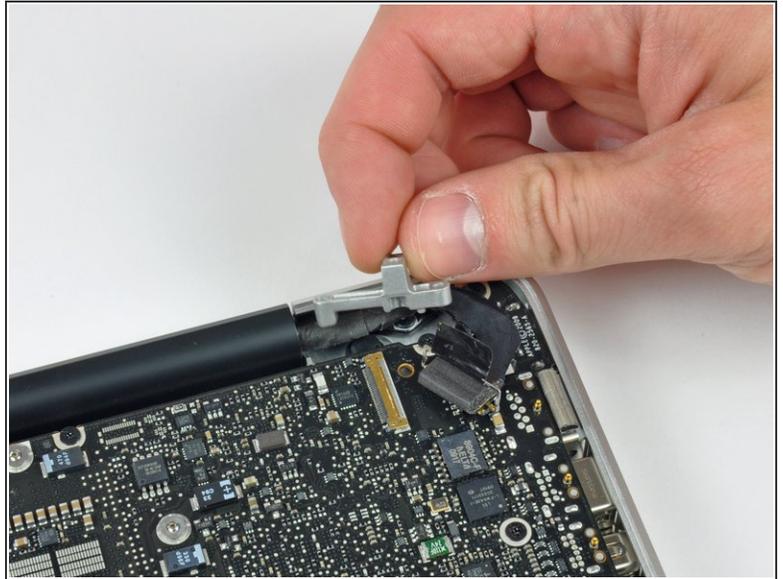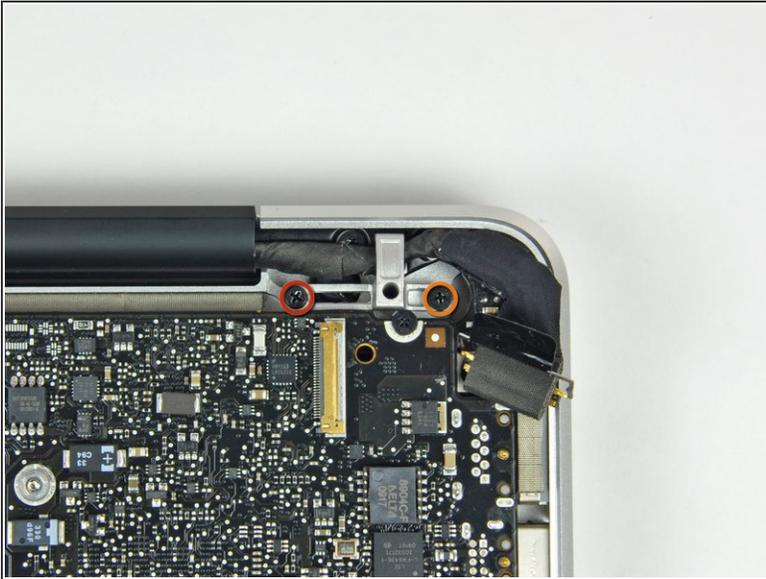

- Remove the following two screws securing the display data cable bracket to the upper case:
  - One 7 mm Phillips screw.
  - One 5 mm Phillips screw.
- Lift the display data cable bracket out of the upper case.

## Step 10

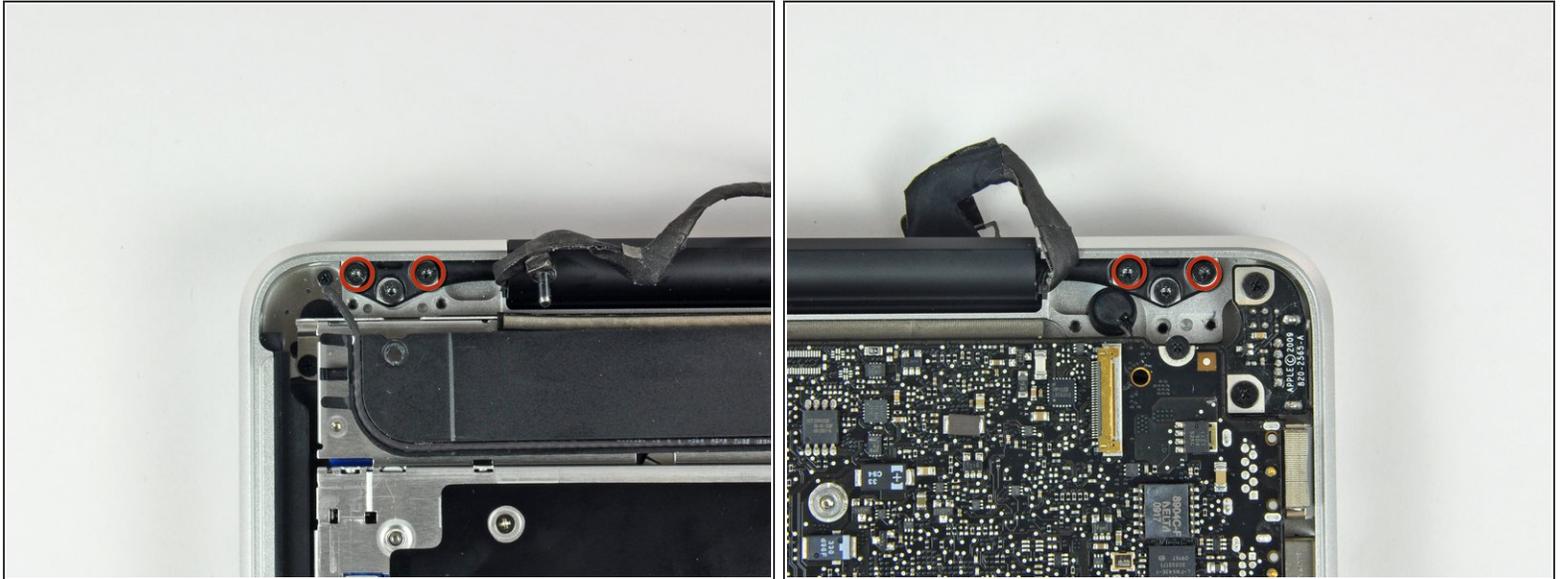

- Use your Torx driver to remove the two outer 6.5 mm screws securing each of the two display brackets to the upper case (4 screws total).
- ⓘ Mid 2009 models require a T6 Torx driver, while Mid 2010 models require a T8.

## Step 11



- Open your MacBook so the display is perpendicular to the upper case.
- Place your opened MacBook on a table as pictured.
- While holding the display and upper case together with your left hand, use your Torx driver to remove the remaining 6.5 mm screw from the lower display bracket.

## Step 12



**⚠** Be sure to hold the display and upper case together with your left hand. Failure to do so may cause the freed display/upper case to fall, potentially damaging each component.

- Remove the last remaining 6 mm Torx screw securing the display to the upper case.

## Step 13



- Grab the upper case with your right hand and rotate it slightly toward the top of the display so the upper display bracket clears the edge of the upper case.
- Rotate the display slightly away from the upper case.

## Step 14



- Lift the display up and away from the upper case, minding any brackets or cables that may get caught.

## Step 15 — Clutch Cover



- Grab the clutch cover as shown and slide it toward the right side of the display.

**i** It should move about 1/4" and stop. Don't force it beyond this point.

## Step 16



- Gently rock the clutch cover back and forth on its long axis while pulling it away from the display.
- Do this action along the length of the clutch cover until you can lift it off the framework attaching it to the display.

## Step 17



- Remove the clutch cover from the display.

To reassemble your device, follow these instructions in reverse order.