



Milwaukee 2780-20 Battery Pack Replacement

This is a guide to replace the Battery Pack for the Milwaukee 2780-20 angle grinder.

Written By: Chris Hopper



INTRODUCTION

Once in a while, your angle grinder may seem very slow while running and keeps quitting on you. The problem may be that your battery is either dead or on the verge of dying. The battery replaces the use of a cord that runs directly to a power source. It actually runs more effectively, yet you don't have to worry about the cord getting in the way while you're working. This guide will help you replace the dead battery with a freshly charged ones o you can continue on your work with no hassle.

Step 1 — Battery Pack



- In order to change the battery, press the two red buttons on either side of the battery and slide it out of its port, exposing the terminals.

To reassemble your device, follow these instructions in reverse order.