




Nextbook Premium 7SE Volume Buttons Replacement

This repair guide will show you how to remove and replace the volume buttons on your Nextbook device.

Written By: Michelle Helweh

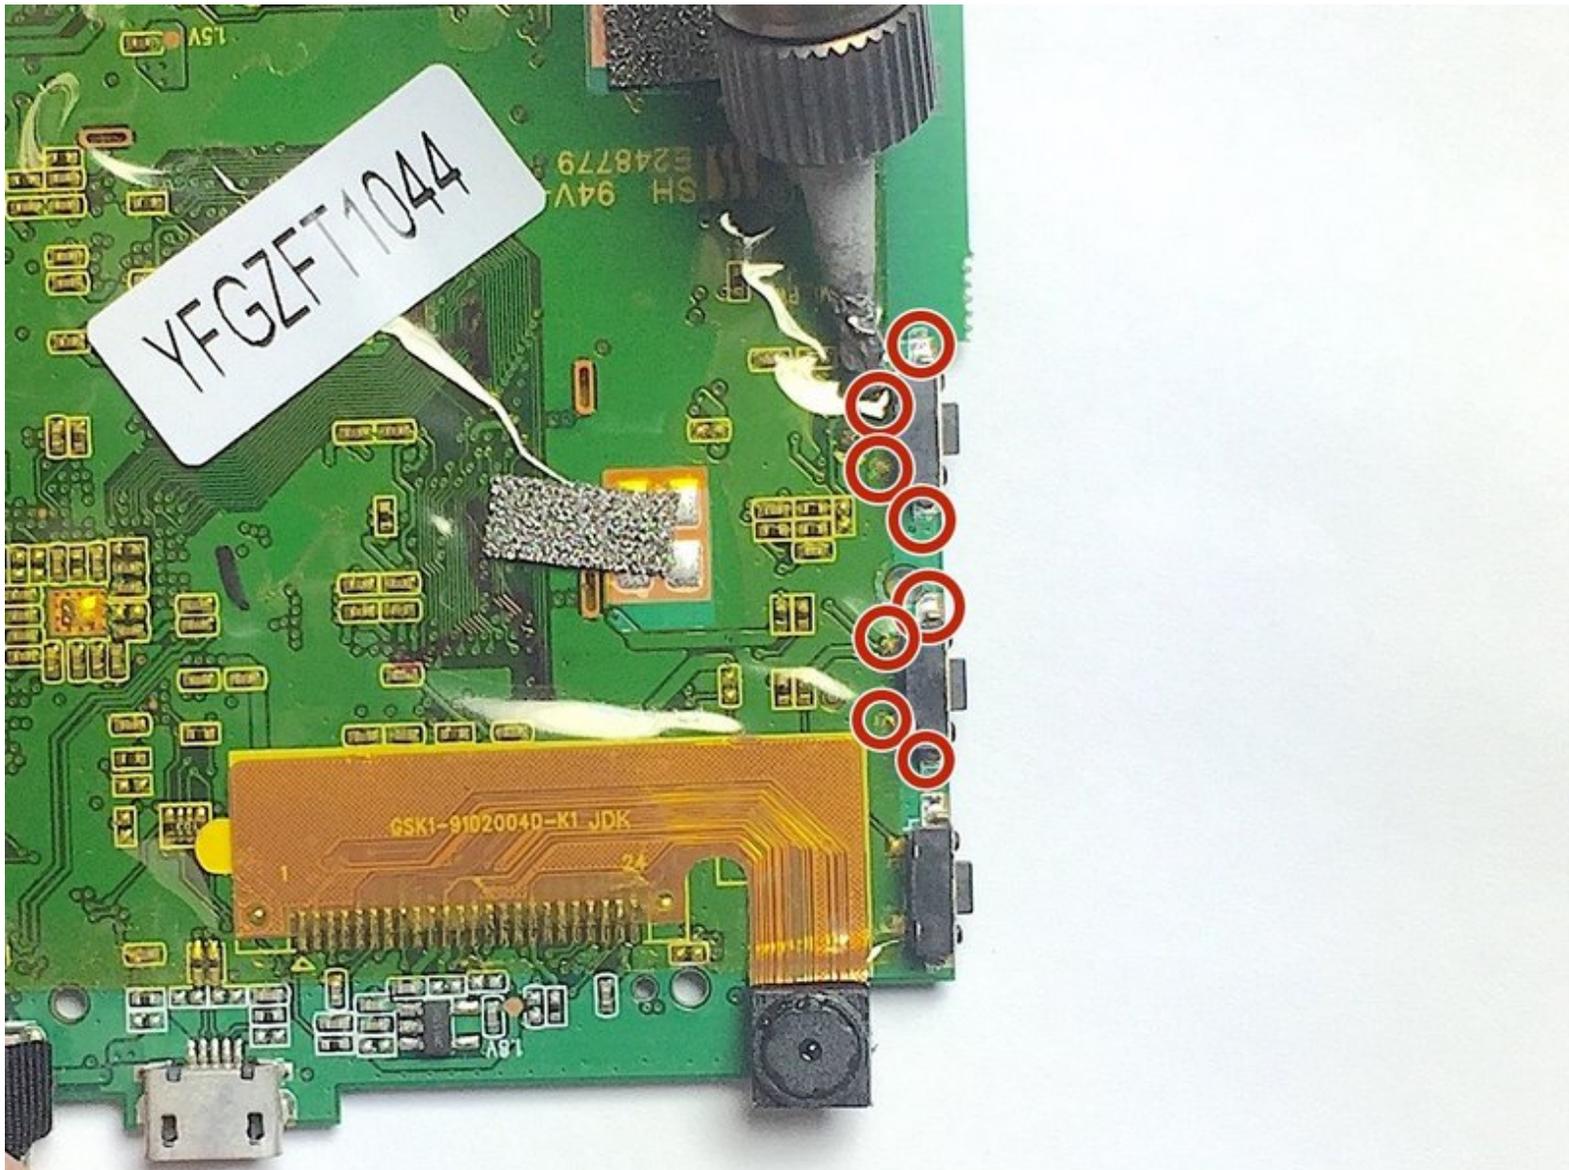

This document was generated on 2019-09-30 11:31:21 PM (MST).

INTRODUCTION

It's important to note that replacing the volume buttons includes using three prerequisite guides.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Desoldering Braid](#) (1)
 - [Solder](#) (1)
 - [Staples](#) (1)
 - [Soldering Iron](#) (1)
 - [Spudger](#) (1)
 - [Nut Driver 2.5 mm](#) (1)
-

Step 1 — Back Cover



- Insert the plastic opening tool into the middle of the bottom edge of the device. The tool should be inserted within the seam between the back and front covers.
- Slide the opening tool to the right and slowly continue to separate the back cover from the device.


⚠ Avoid prying on the buttons, as they are easily damaged.

Step 2





- Pull the cover off of the device once about three quarters of the cover has been pried open using the plastic opening tool.

Step 3 — Battery

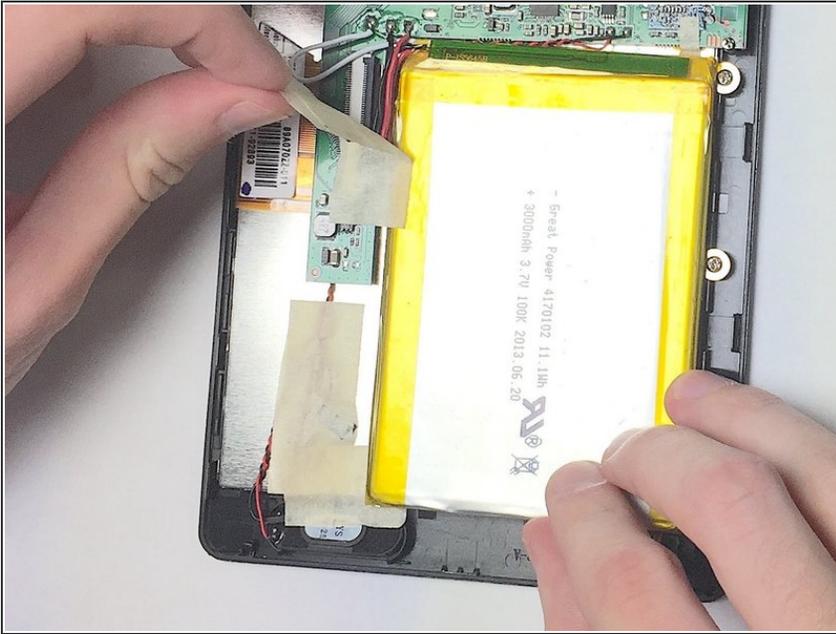

- Remove masking tape from the battery.


Step 4

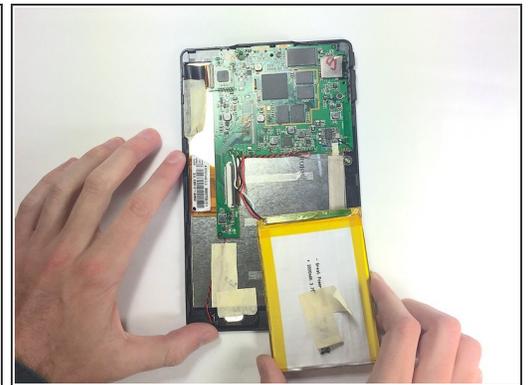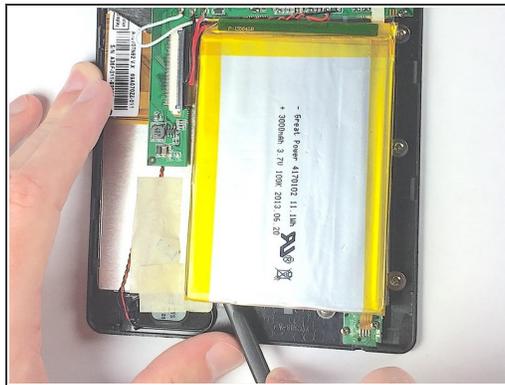

- Pry the battery from the base using the nylon spudger and move it away from the motherboard.


⚠ Handle the battery with care to avoid damaging it.

Step 5

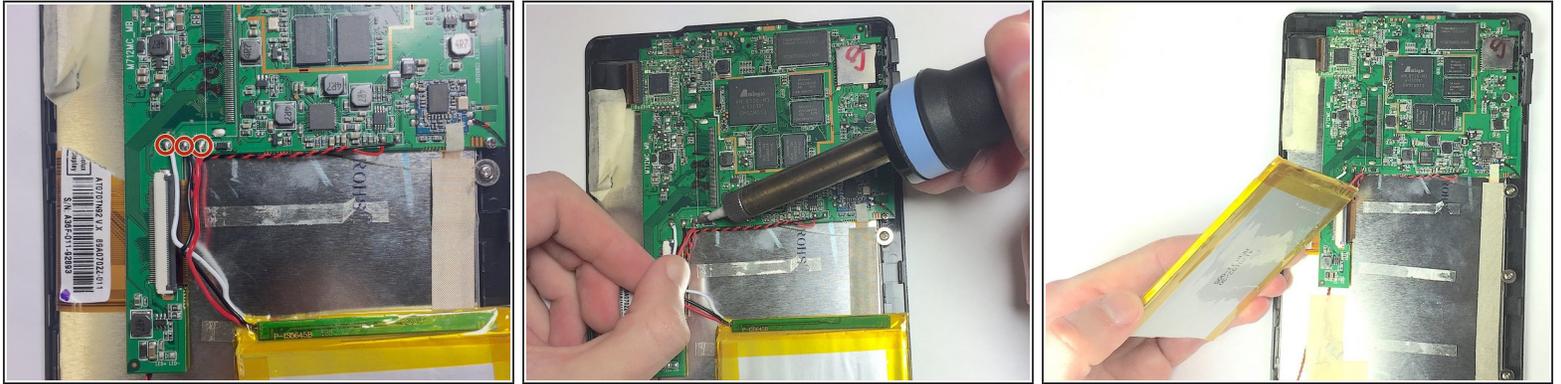


- De-solder the three contact points and remove the battery.
- ⓘ See the following guide for instructions on how to solder. [How To Solder and Desolder Connections](#)
- ⚠ Use caution when operating the soldering iron.

Step 6 — Motherboard

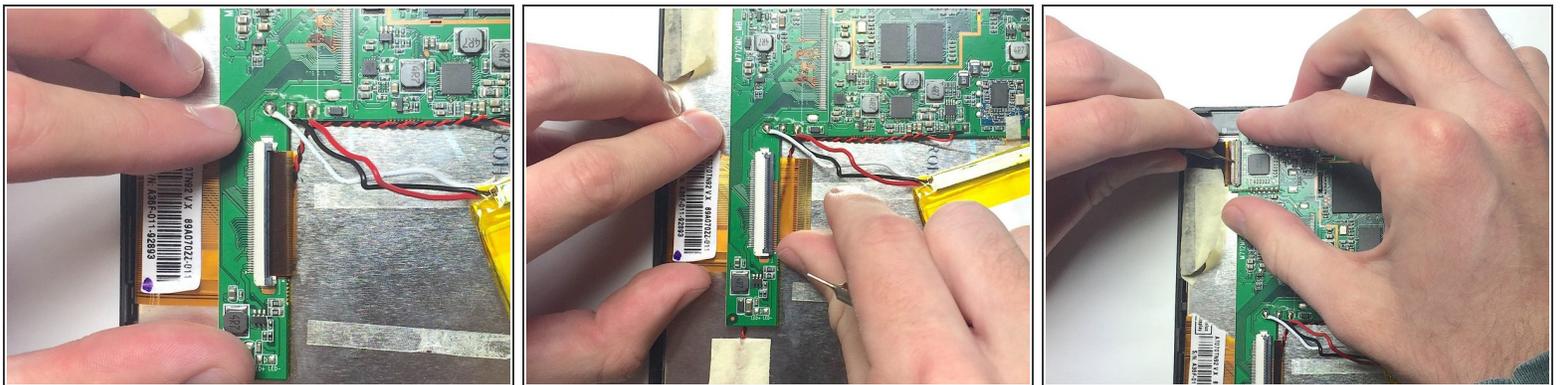


- Remove the two ZIF connectors attached to the motherboard by flipping up the black tabs before pulling the ribbon cable away.
- ⚠ Only use a fingernail or nylon spudger to flip up the retaining flap. Using metal tools may damage delicate components.

Step 7

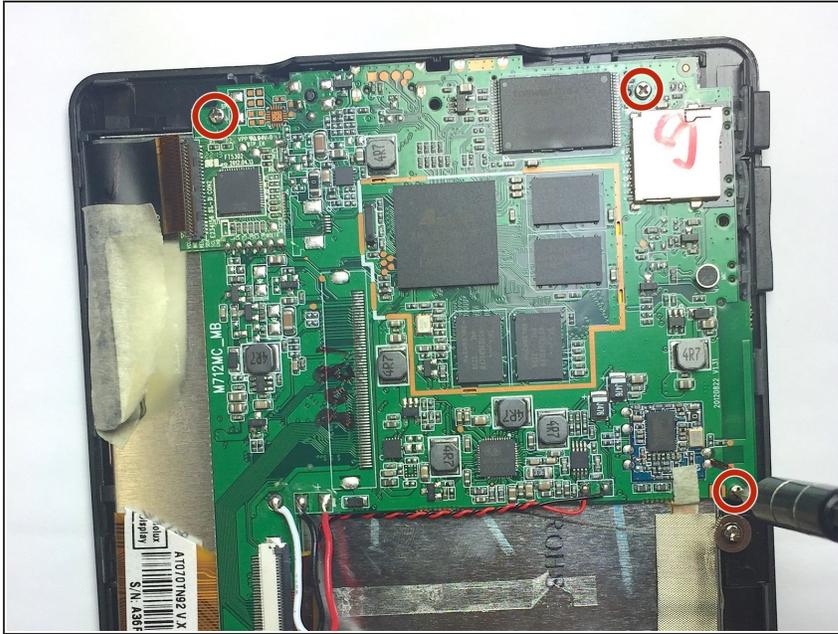

- Use the nut driver and J00 bit to remove the three 4 mm screws.

Step 8

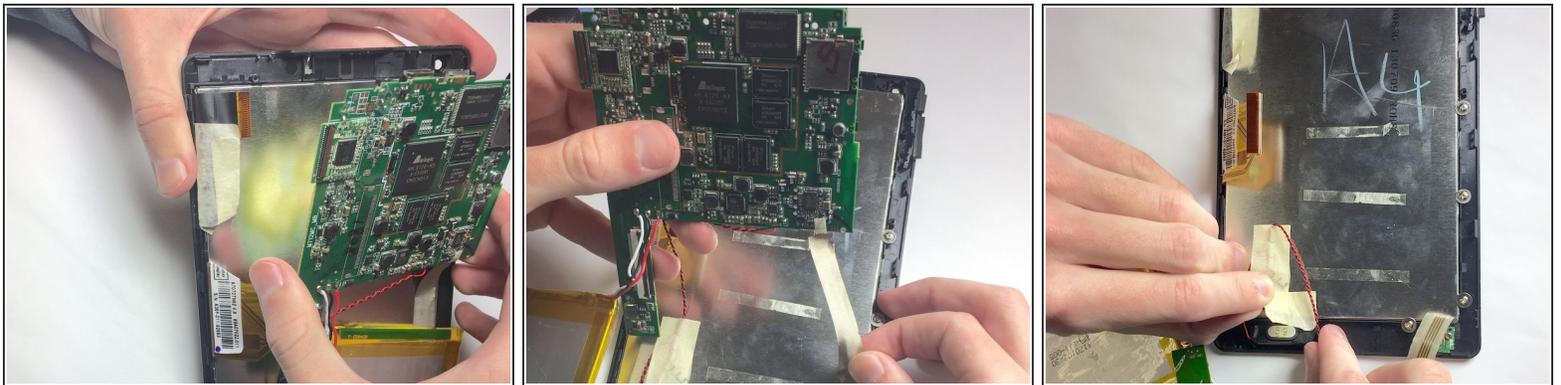

- Peel back metal tape that is hiding the auxiliary port wires.
- Remove tape that is holding the speaker wires in place.
- Lift up on the motherboard to release it from the tablet.

Step 9 — Volume Buttons



- [De-solder](#) volume buttons' eight contact points.
- ⓘ Each button has 4 points of contact.

To reassemble your device, follow these instructions in reverse order.