




# Nikon COOLPIX S3600 Battery Replacement

How to remove and replace the battery.

Written By: jriley

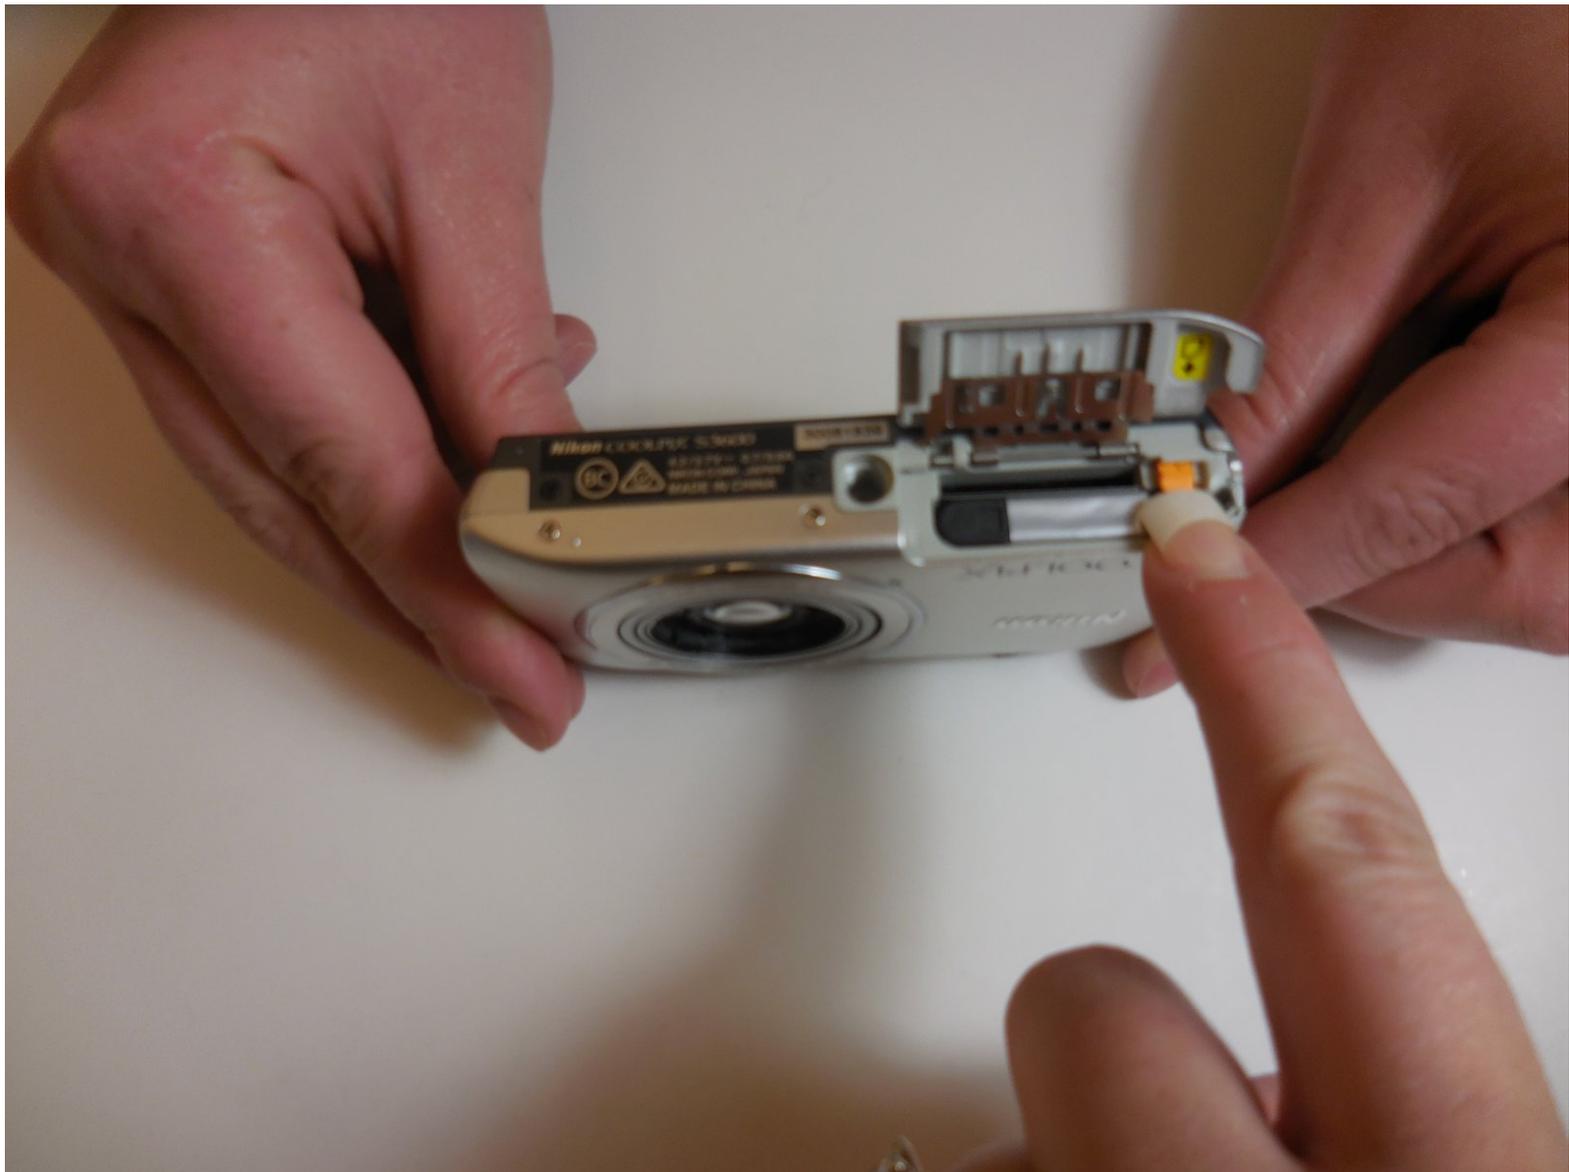

---

## INTRODUCTION

If your camera will not hold a charge or turn on you may need to remove or replace the battery.

---

### TOOLS:

- [Fingers](#) (1)
-

## Step 1 — Battery



- On the bottom right of the camera, locate the battery cover door.
- Push down with your finger to open the battery cover door.

## Step 2



- Push up on the orange battery latch to release the battery.
- Now remove the battery by pulling it out.

To reassemble your device, follow these instructions in reverse order.