



# Nikon Coolpix 995 LCD Replacement

Disassembly of the Nikon Coolpix 995 camera and removal of the LCD display.

Written By: Cory Layman



---

## INTRODUCTION


This iFixit guide shows you how to disassemble the Nikon Coolpix 995 camera, and remove/replace the LCD display.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — LCD

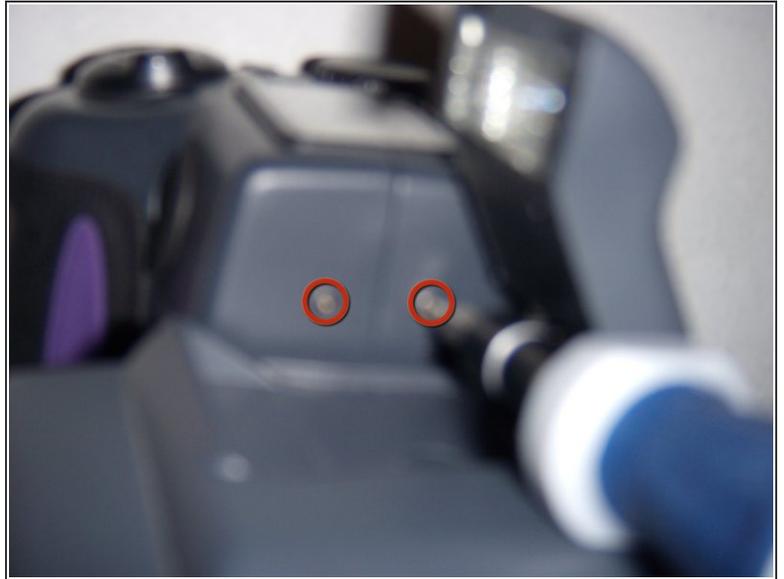

- Turn the lens/flash assembly 90 degrees, until you see the two Phillips #00 screws,
  - Remove the two screws with a Phillips #00 screwdriver.
  - Flip the flash so that you can access the remaining two screws. Remove these screws following the same method as before.
- i** Refer to the second image to locate the second set of screws. The relevant screws are highlighted in red.

## Step 2



- Flip the camera up-side down.
- Remove the two Phillips #00 screws located near the battery compartment.

## Step 3




- Open the memory card compartment cover.
  - You can now see four screws under the cover. Remove all four screws.
- ⚠ Refer to the image to locate the four screws. Make sure that you remove only the four screws identified in the image.

## Step 4




- Use your thumb to carefully lift the bottom side of the casing near the battery.
- ⚠ Pay attention to a cable located at the top of the assembly, as it is prone to breakage. Refer to the second image to locate the cable.

## Step 5

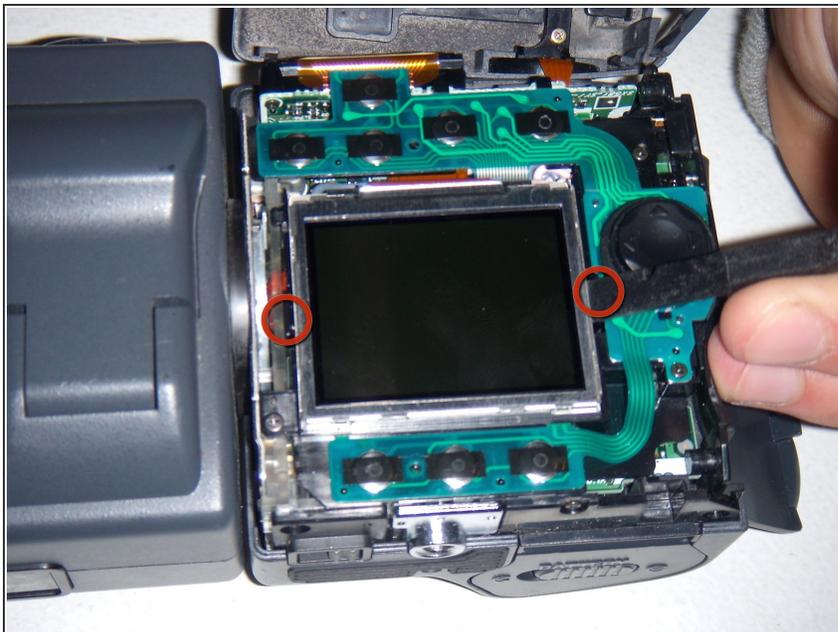

- Use a spudger to flip the tabs that hold the screen.
- ⓘ Refer to the image for more details. The tabs are circled in red.

## Step 6

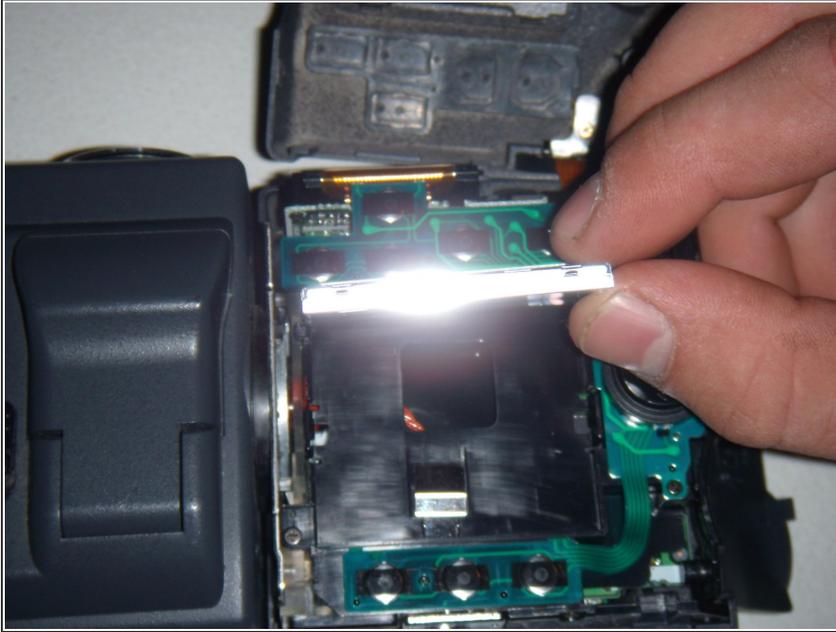

- Carefully lift the LCD from the bottom. It should come out fairly easily.

To reassemble your device, follow these instructions in reverse order.