




Nikon Coolpix P100 Display Screen Replacement

This guide will help users replace specific components of the Nikon Coolpix P100.

Written By: Rikki Brown

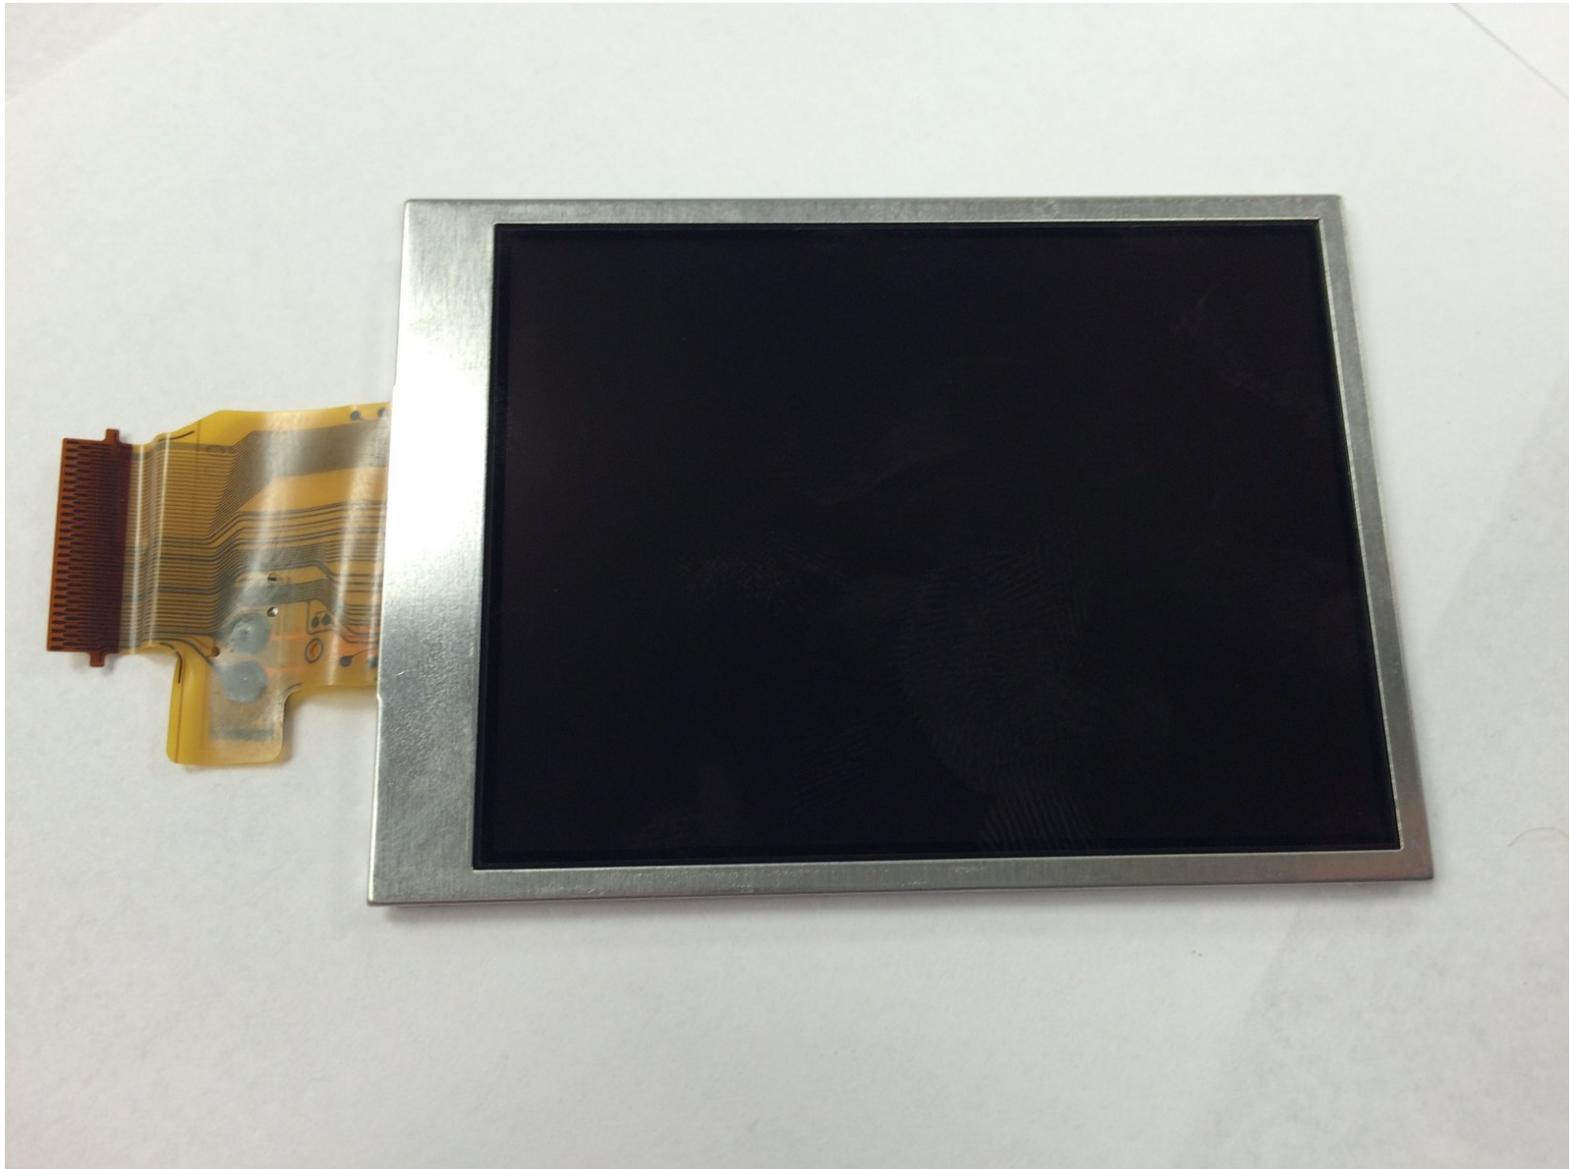

 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Display Screen




- Nikon Coolpix P100.

Step 2




- Set the camera upside down so that the side with the serial number is face up.
- Pull back the display panel. Orient the panel so that you are able to view the back of it.

Step 3

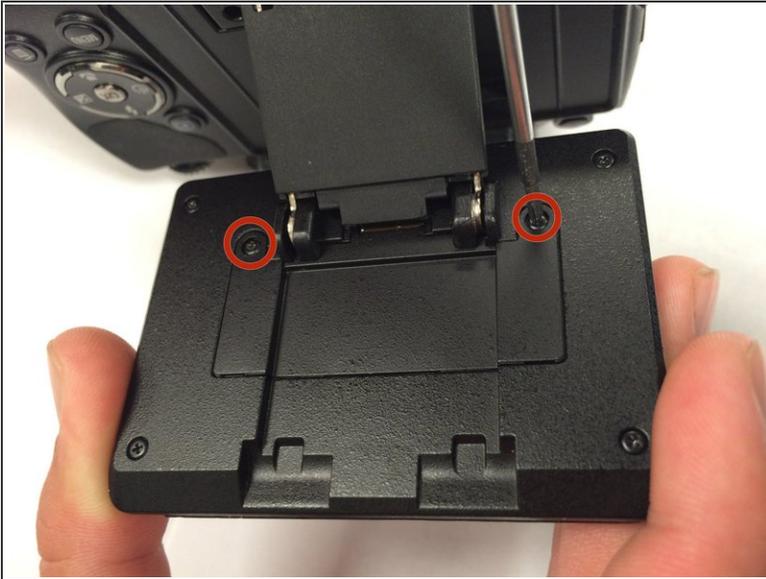


- Using a Phillips head screwdriver unscrew the two screws closest to the piece connecting the panel to the camera.

Step 4

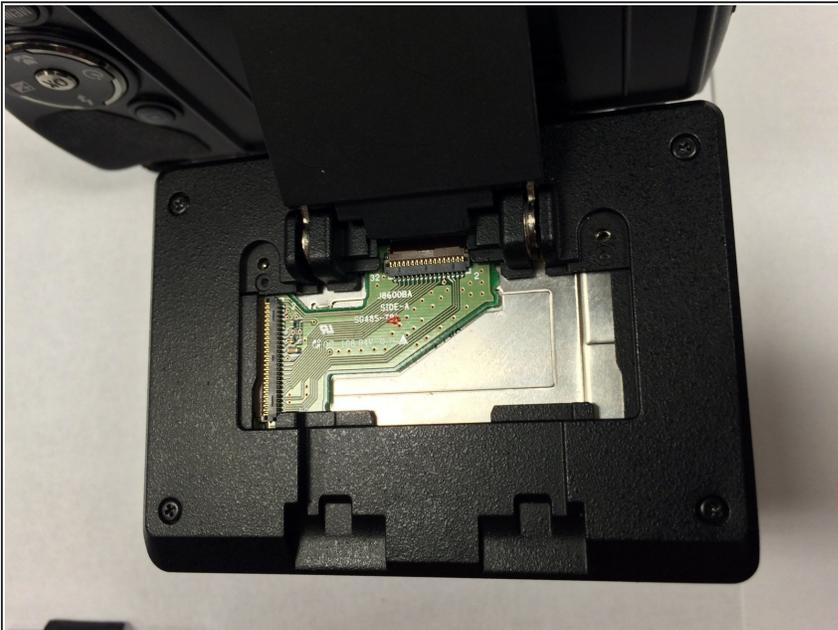


- Remove the cover that was unscrewed in the last step.

Step 5

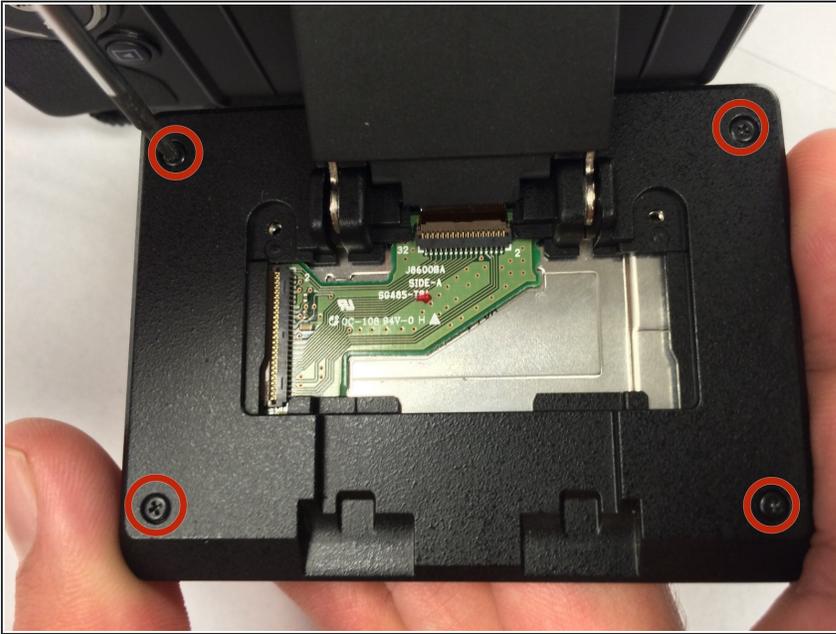


- Using a Phillips head screwdriver remove the remaining four screws on the outermost corners of the panel.

Step 6

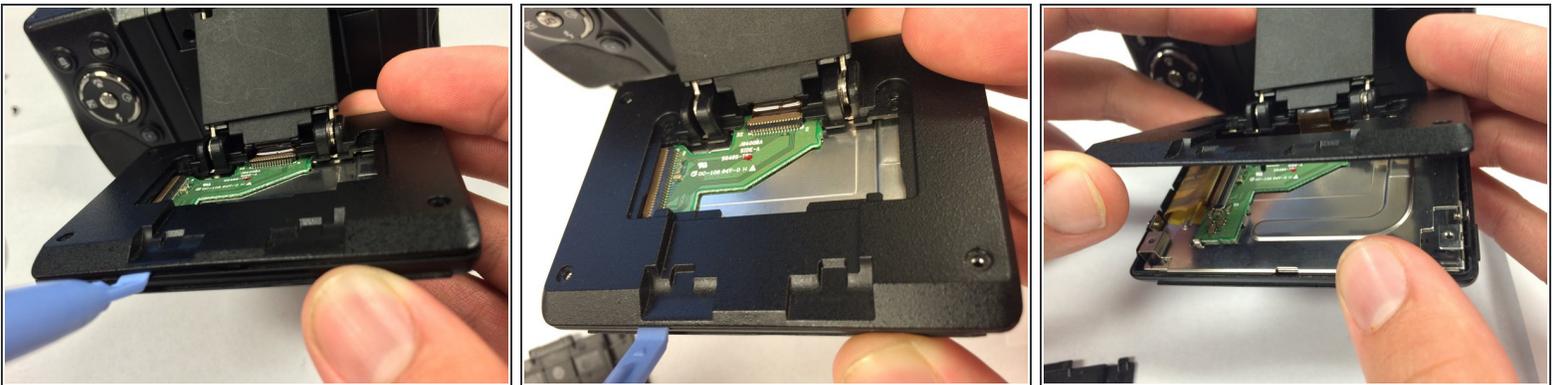


- Use a plastic opening tool to pry open the back panel display screen.

Step 7

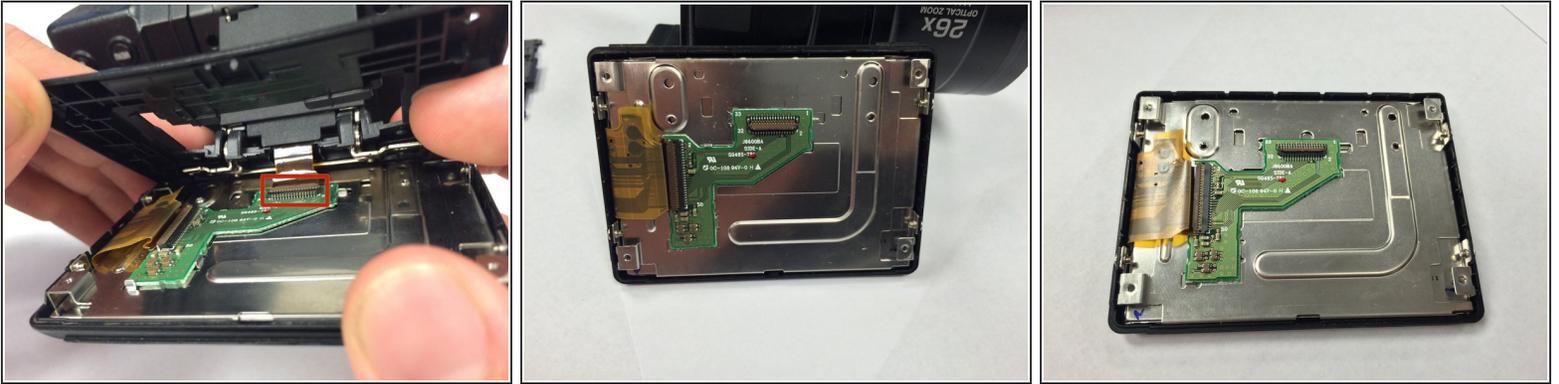


- ⚠ Carefully unhook the ribbon that attaches the panel to the camera. Remove the top black cover of the panel. [Disassembling Nikon Coolpix P100 Ribbon Cable](#)

Step 8

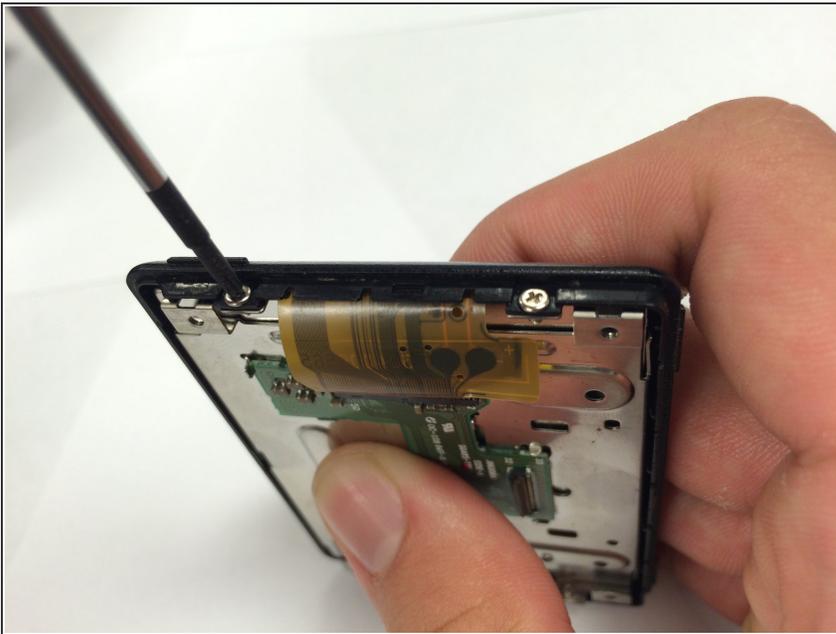

- Remove the two screws on the panel that are closest to the ribbon cable.

Step 9

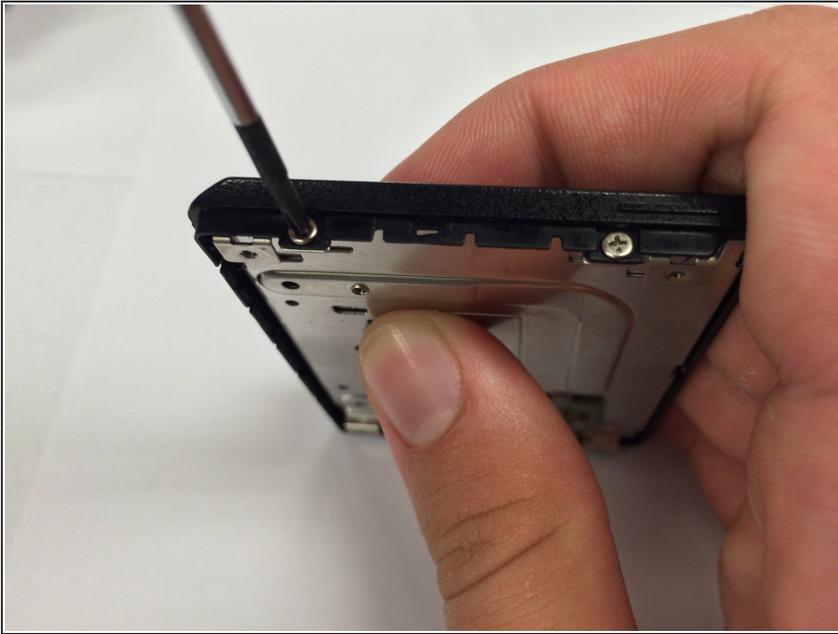


- Remove the other two screws on the opposite side of the panel.

Step 10




- Separate the metal portion of the screen from the plastic portion.

Step 11

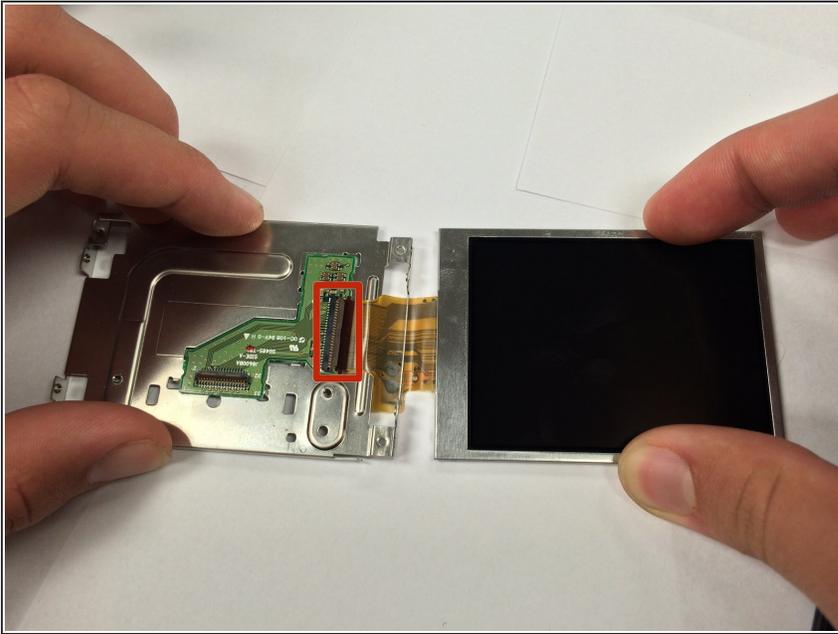

- ⚠ Carefully remove the ribbon connector cable from the metal portion of the display.

Step 12

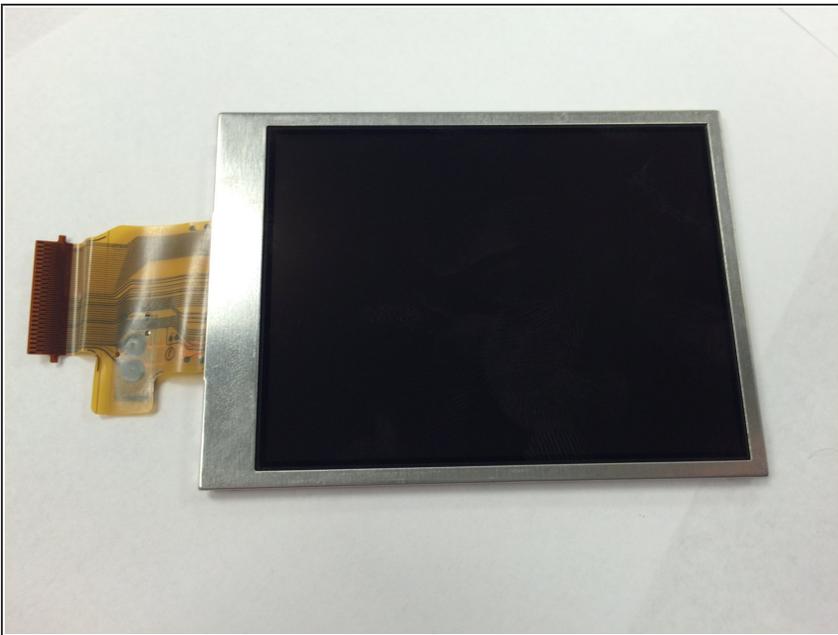

- Now you have successfully removed the display panel.

To reassemble your device, follow these instructions in reverse order.