




Nikon Coolpix P90 LCD Screen Replacement

This guide provides instructions how to remove the LCD screen.

Written By: Elizabeth Kamine

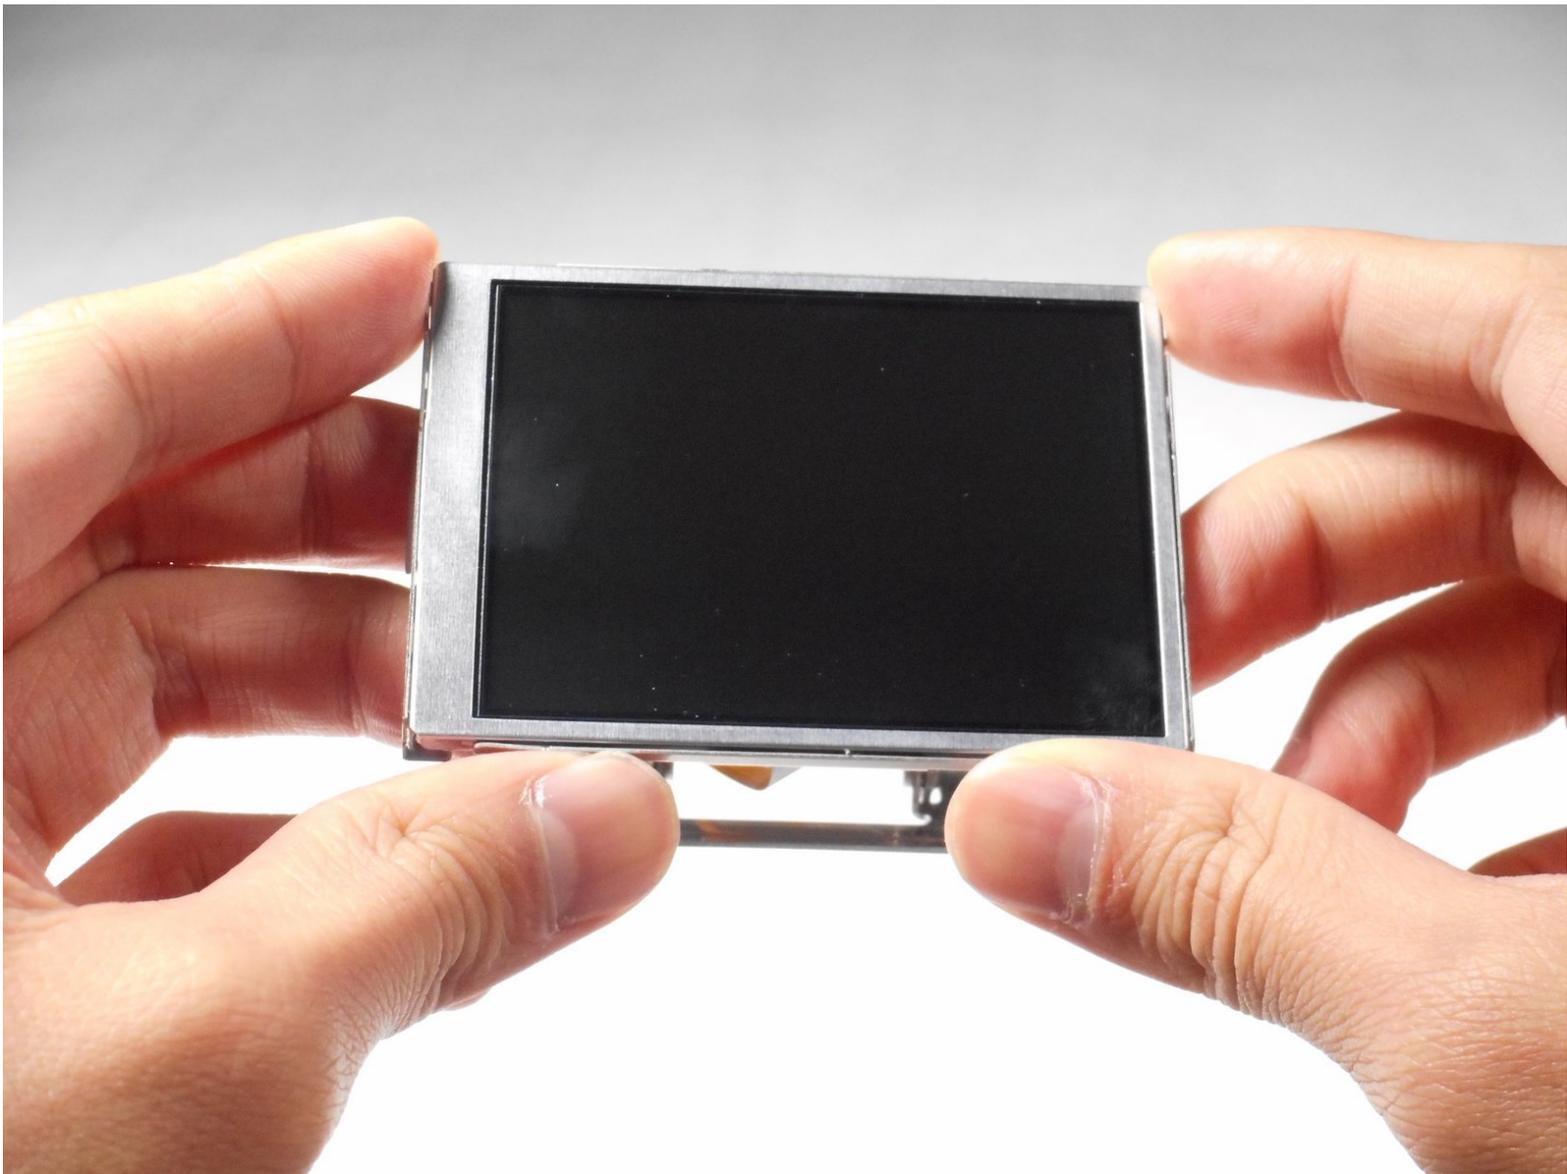

INTRODUCTION

Note that the LCD screen display and the glass screen are separate parts.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Camera Base



- Use your finger to push the notch of the compartment door to the center of the camera body.
- Release the compartment door, and it will swing open.
- Remove the existing battery with your fingers.

Step 2 — LCD Screen



i Use a Phillips #000 Precision Screwdriver for all of the following steps.


- Remove both 4.5 mm screws holding the bottom into place.
- Remove both 4.5 mm screws holding the side into place.
- Remove the 4.5 mm screw underneath the A/V flap.
- Remove the 4.0 mm screw on the left-side wrist strap loop.

Step 3




- Lift up the LCD screen to reveal the two screws.
- Using a Phillips #000 Precision Screwdriver, remove the two 3.0 mm screws that hold the arm in place.

Step 4

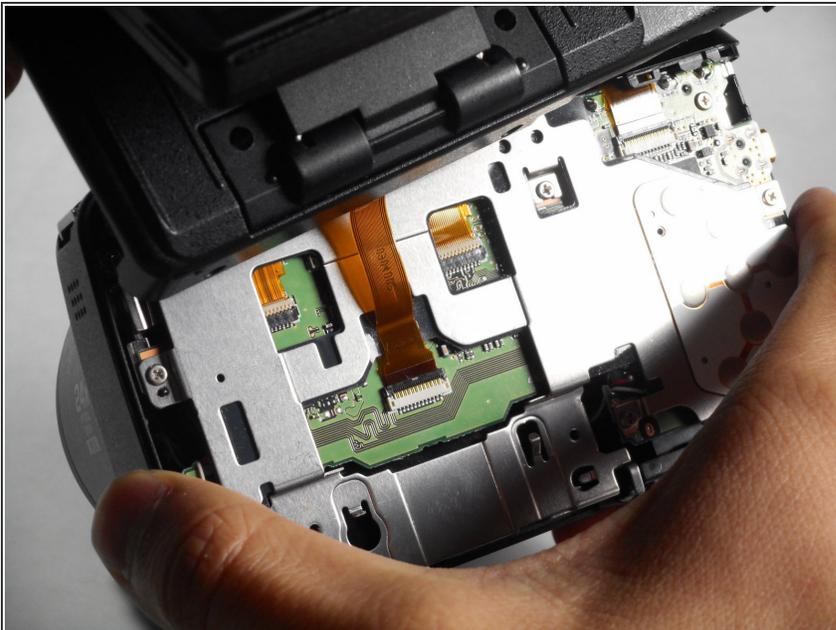

- Carefully lift the back cover from the camera.
- ⚠ Do NOT completely remove the back cover from the camera yet. There is a data transfer ribbon connecting the LCD screen to the motherboard.

Step 5

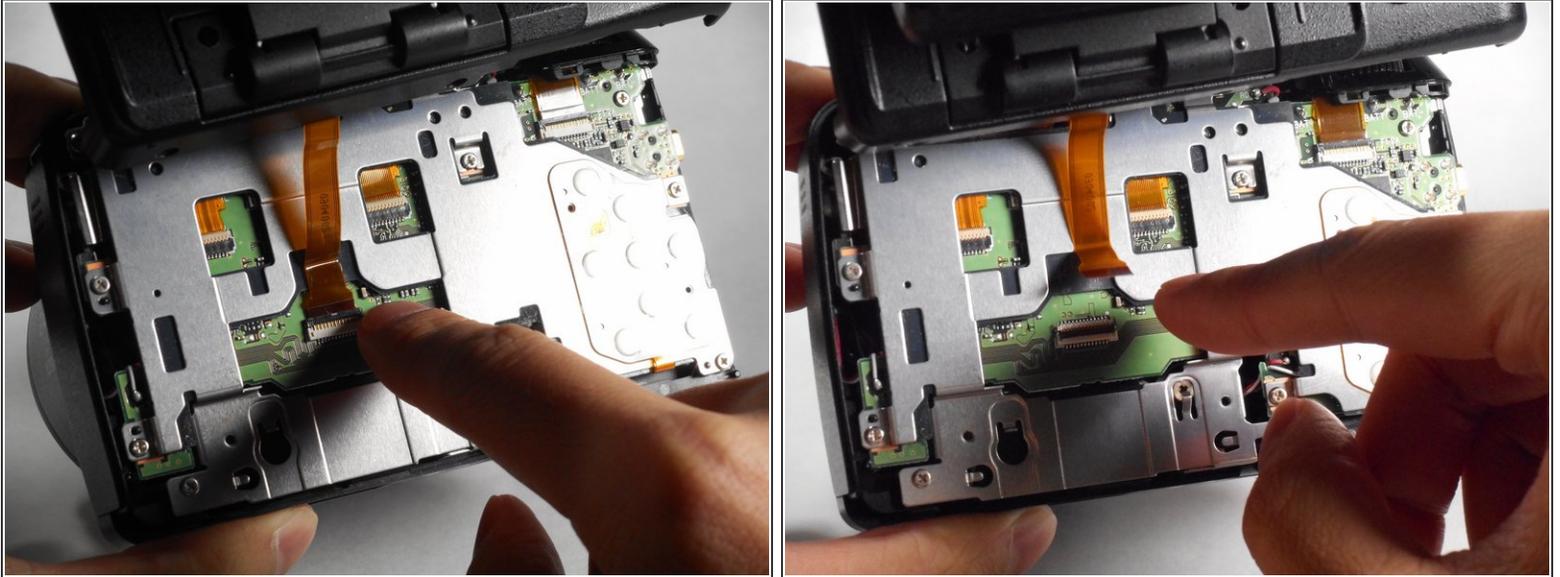


- Press your finger on the top of the latch and pull it down and towards you to open the safety latch and free the ribbon.

 Be careful when removing the safety latch as it is fragile and may break easily.

- Slide the ribbon out from its socket.


 It is now safe to completely remove the back cover from the camera.

Step 6

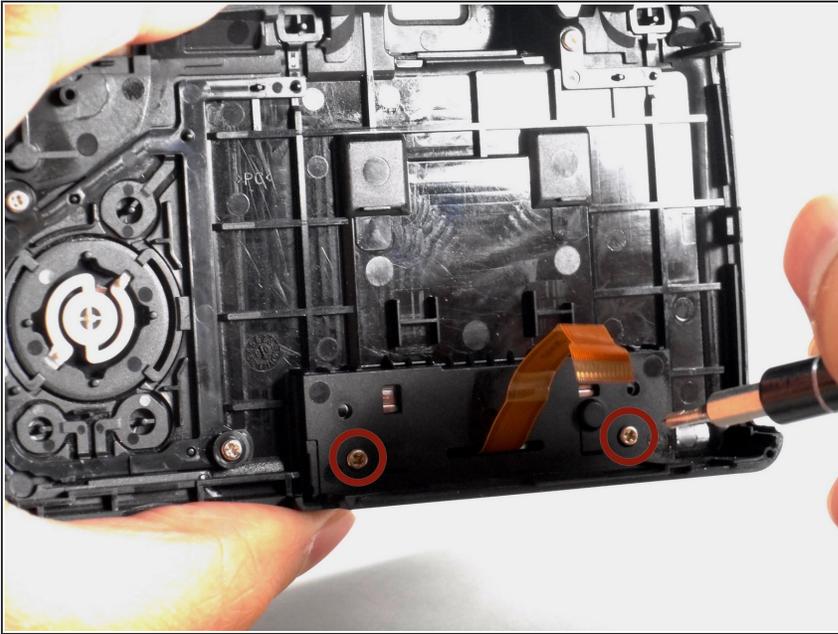

- Using a Phillips #000 Precision Screwdriver, remove the two 6.0 mm screws from the inner back panel that hold the LCD screen arm in place.

Step 7

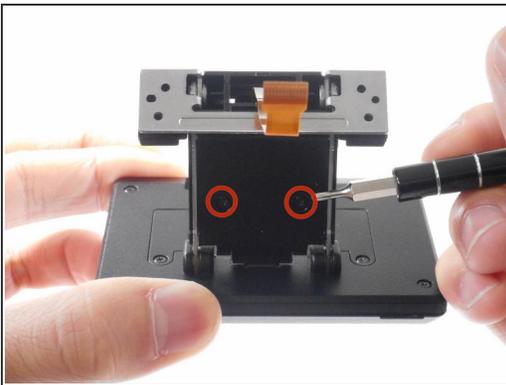

- Using a Phillips #000 Precision Screwdriver, remove the two 3.0 mm screws.
- Remove the plastic cover from the LCD screen arm.

Step 8




- Lift and rotate the plastic connector counter-clockwise, clockwise, then counter-clockwise again.
- Remove the plastic connector from the LCD screen arm.

Step 9




- Using a Phillips #000 Precision Screwdriver, remove the two 4.0 mm screws.
- Take off the plastic covering to reveal the inner components of the LCD screen.

Step 10

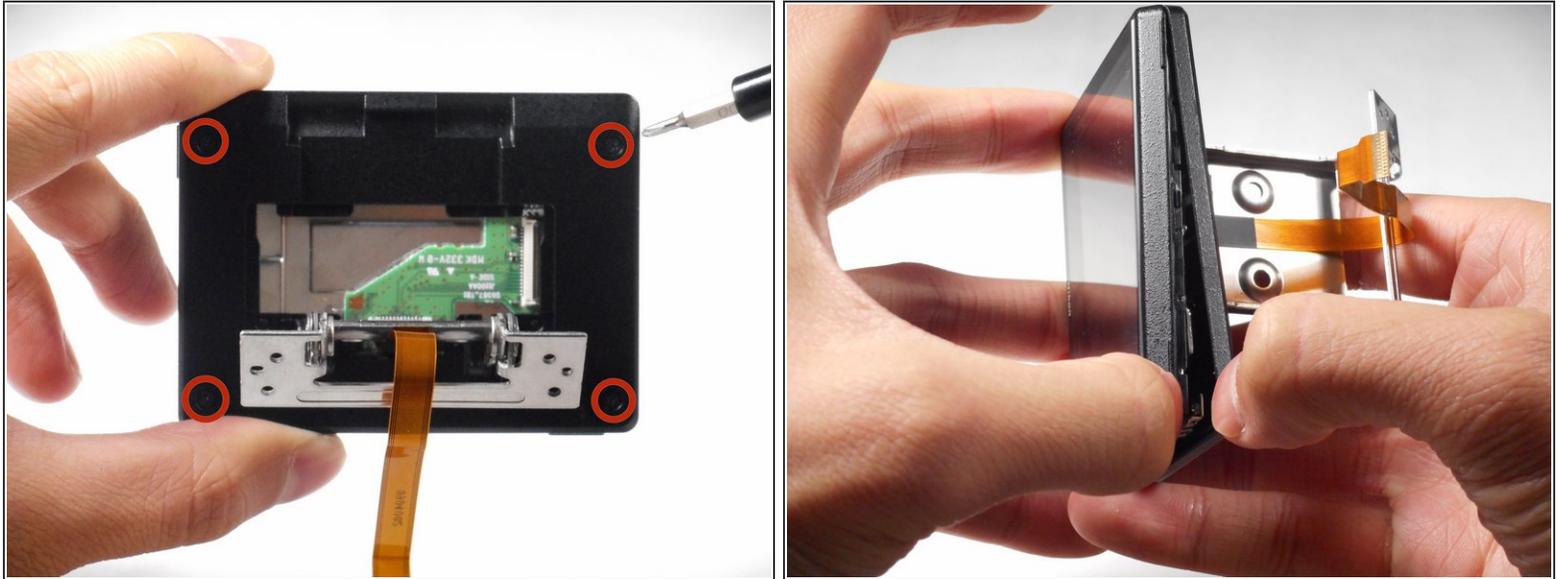

- Using a Phillips #000 Precision Screwdriver, remove the four 3.0 mm screws.
 - Using your fingers, remove the two plastic borders that case the LCD screen.
- i** A plastic opening tool is not necessary, but may be helpful.

Step 11

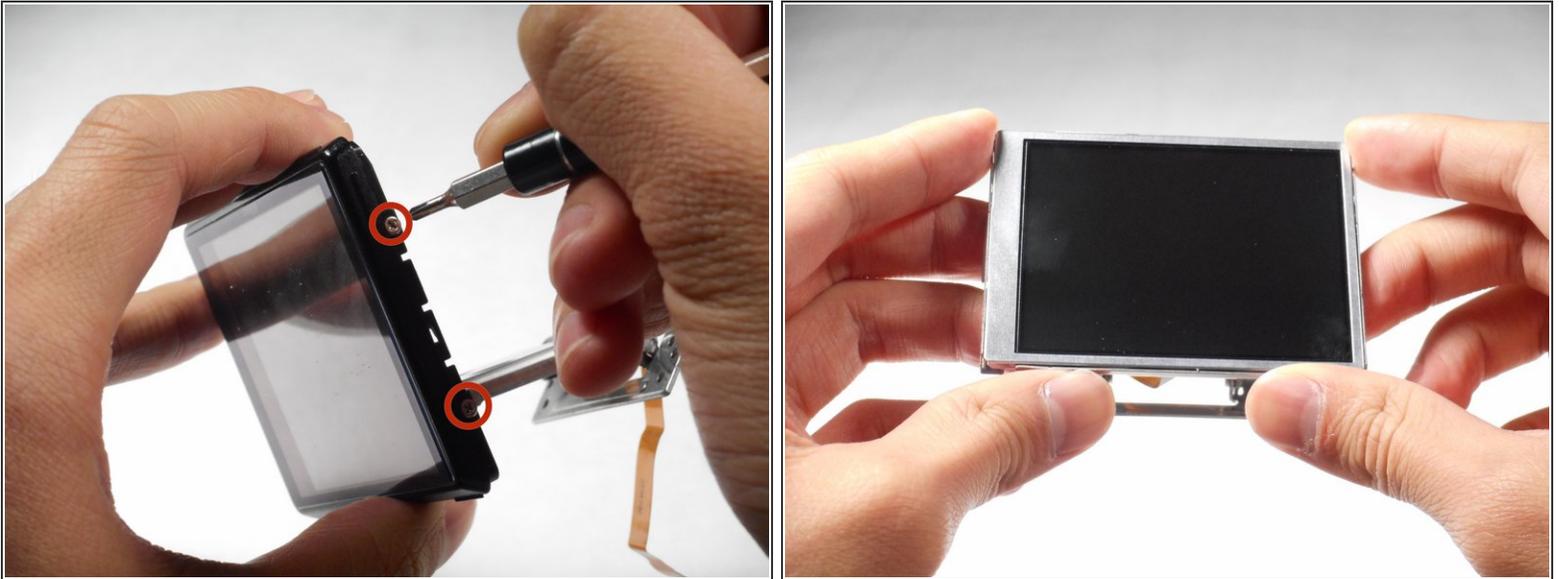

- Using a Phillips #000 Precision Screwdriver, remove both 3.5 mm screws from either side of the LCD screen.
- Remove the LCD screen from the screen cover.

To reassemble your device, follow these instructions in reverse order.