



Nikon Coolpix P90 Memory Card Replacement

This guide provides instructions to replace a corrupt or full memory card.

Written By: Elizabeth Kamine



INTRODUCTION

The Nikon Coolpix P90 is only compatible with SD and SDHC memory cards. It is not compatible with Multi Media Cards (MMC).

Step 1 — Camera Base



- Use your finger to push the notch of the compartment door to the center of the camera body.
- Release the compartment door, and it will swing open.
- Remove the existing battery with your fingers.

Step 2 — Memory Card



- Gently push the memory card down into the compartment until it clicks to unlock.
- Release and pull memory card out with your fingers.

To reassemble your device, follow these instructions in reverse order.