



Nikon D90 Bottom Casing Replacement

Replacing the bottom casing of the Nikon D90.

Written By: Matthew Grota



INTRODUCTION

The bottom casing of the Nikon D90 can sometimes be scuffed up and damaged. This guide shows how to replace the bottom casing of the Nikon D90. Be forewarned, the screws can be easily be stripped so be careful.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Bottom Casing



- Turn the camera so the bottom casing is facing up.


Step 2 — Removing Screws from the Bottom Casing

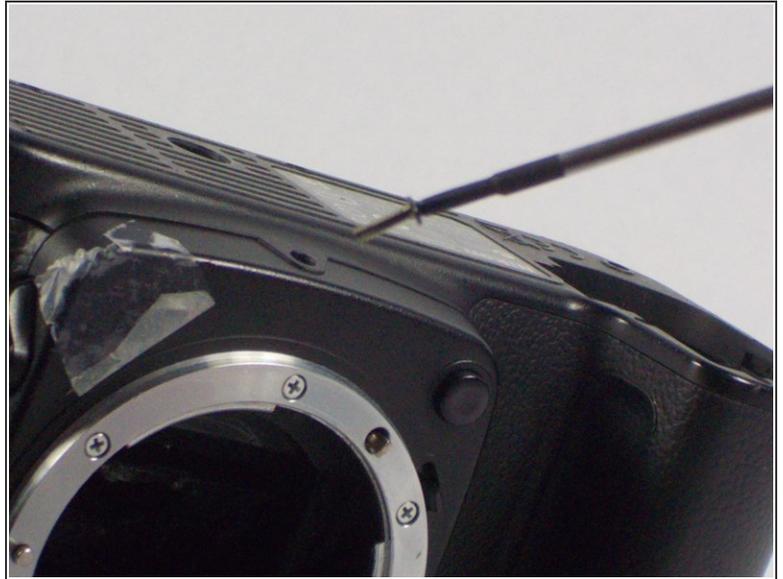

- Next, use a PH00 screwdriver to remove the screws from the bottom casing.
 - Remove the four 5.3 mm Phillips screws.
 - Remove the three other 6.3 mm Phillips screws.

⚠ Be careful not to strip the screws.

Step 3 — Removing the Bottom Case

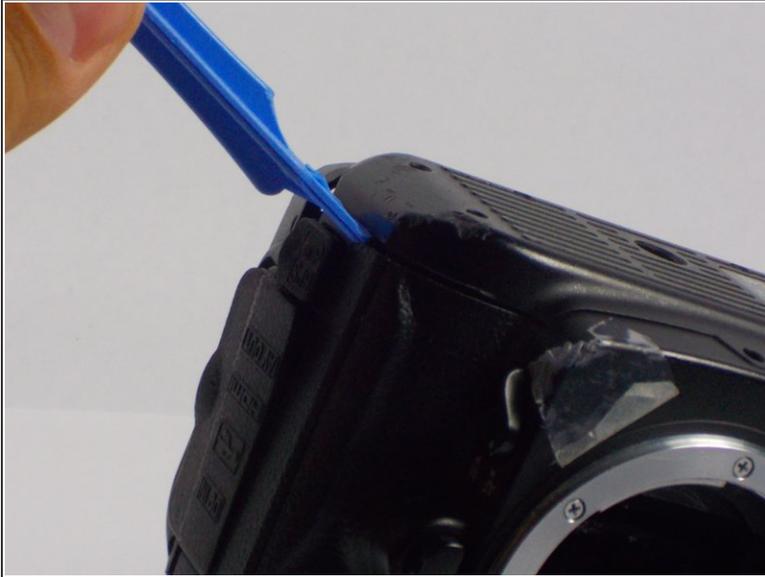

- Next, use a plastic opening tool and carefully pop off the bottom case.
- Then, lift and remove the bottom case.

To reassemble your device, follow these instructions in reverse order.