



Nikon N80 Lens Mount (aka Bayonet Mount) Replacement

This is a guide for replacing the lens mount (as known as the bayonet mount) in your Nikon N80 Camera.

Written By: Maegan Vloria



INTRODUCTION

Is the lens mount in your camera damaged or broken? It might be time to replace it with a new one! This guide will explain how to replace the lens mount (also known as bayonet mount) in a Nikon N80/F80 Camera.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Lens Mount (aka Bayonet Mount)



- Make sure the On/Off switch is in the Off position.

Step 2



- Place the camera so the lens is facing up.
- ⓘ If your camera has a lens on, remove it by pushing and holding the lens release button and turning the lens clockwise until it comes off.

Step 3



- Use a PH00 Phillips screwdriver to remove the five 4.8mm screws on the silver lens mount.

Step 4



- Remove the old lens mount and place the new one on.

To reassemble your device, follow these instructions in reverse order.