



---

## INTRODUCTION

This guide will show how to remove the outer and inner blender base and sections. This will allow you to get access to the inner components.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Blender Base




- Using the Phillips #1 screwdriver, remove the 5 screws (13mm long, 6mm wide) holding the outer base.
- Lift the base up to remove it.

## Step 2




- Remove the midsection by pulling it up. If the section is stuck, use the iFixit plastic opening tool to pry it off.
- Pull the power cord through the mid-section opening.

## Step 3

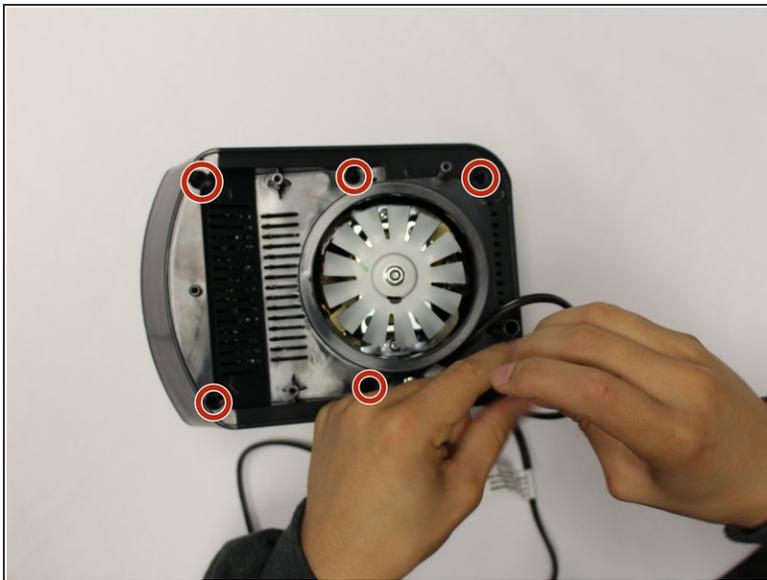


- Using the Phillips #1 screwdriver, remove the 6 screws (13 mm long, 6 mm wide).

## Step 4

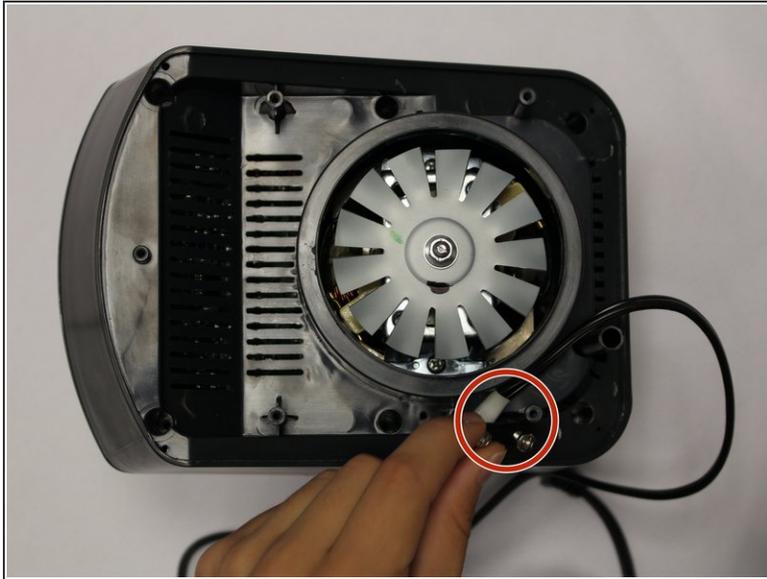

- Using the Phillips #1 screwdriver, remove the two screws (5 mm long, 3 mm wide) holding the power cord onto the motor cover.

## Step 5

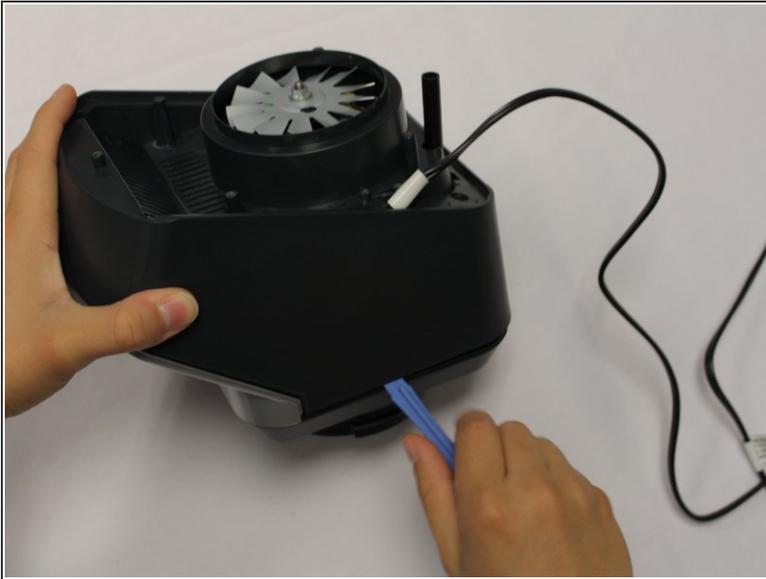

- Using the iFixit plastic opening tool, pry the motor cover off the general housing. Once it is loose, lift it up to remove it off the base.
- Slide the cover all the way to the end of the power cord.
- ⓘ Please note that the power cord does not completely come off the cover.

To reassemble your device, follow these instructions in reverse order.