




# Olympus Stylus 410 Speaker Replacement

Written By: Gabriela Igel

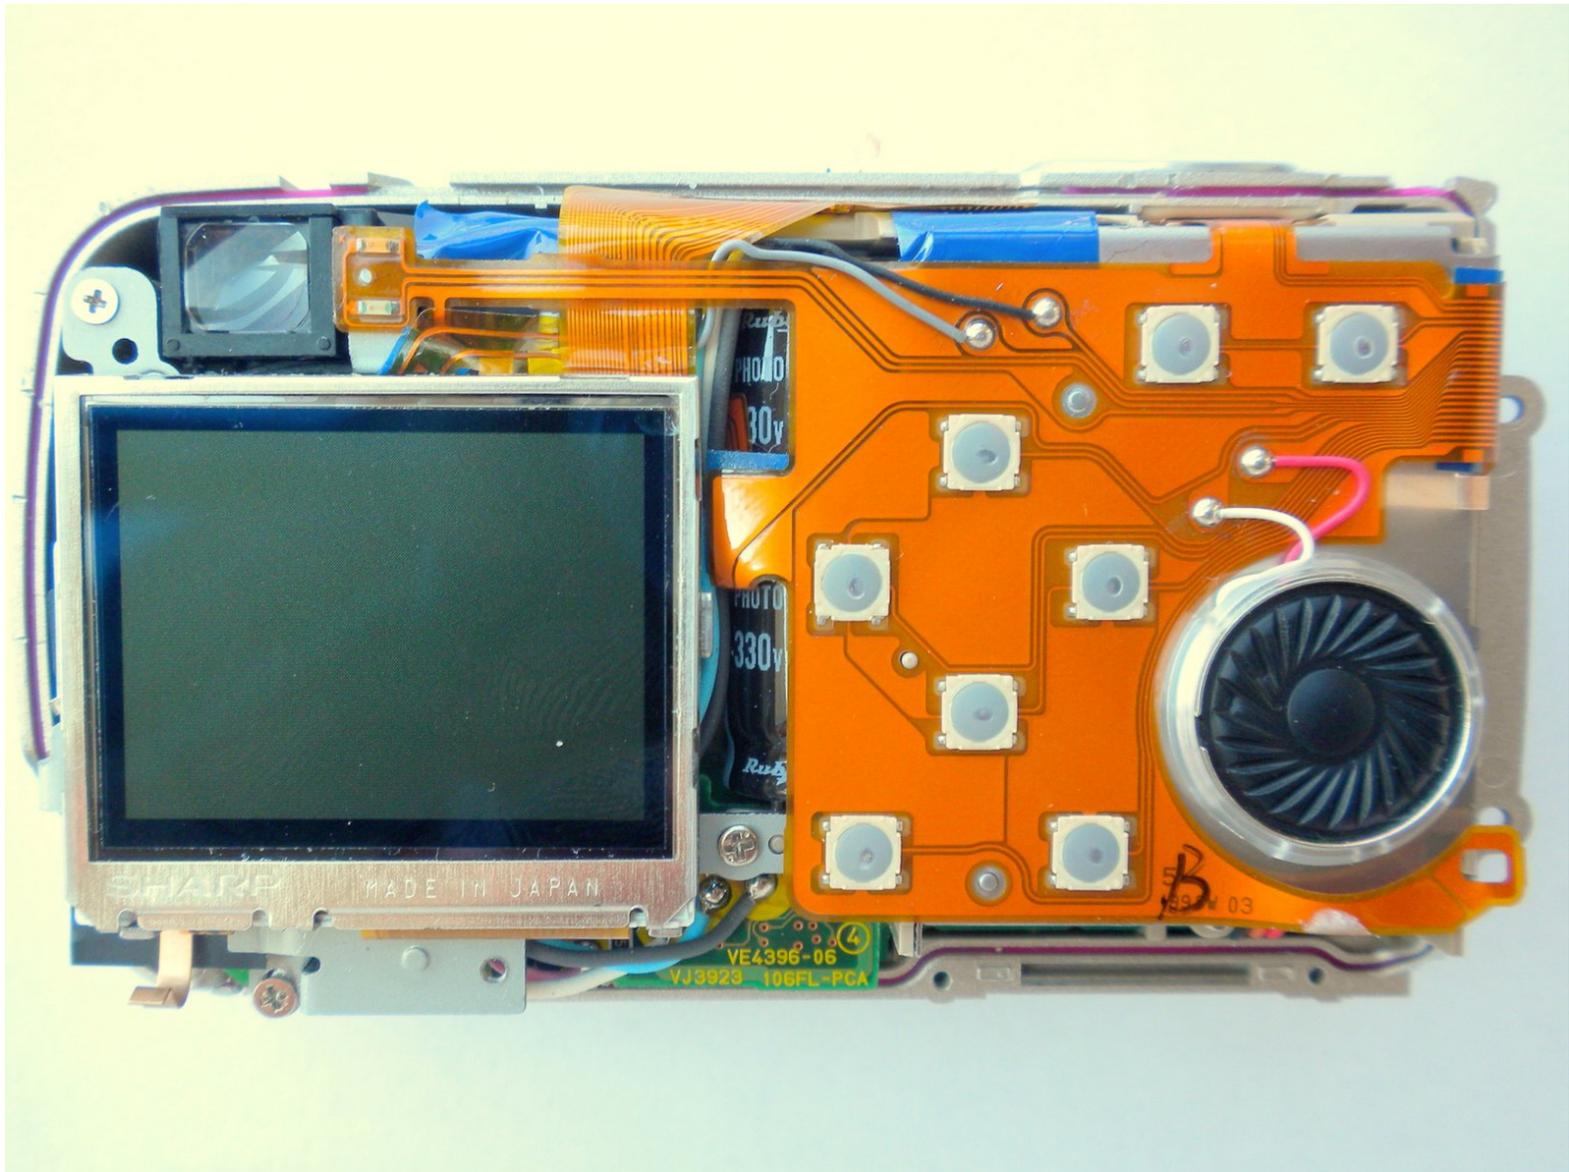

---

## INTRODUCTION

Use this guide to replace the Olympus Stylus 410 speaker.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Soldering Workstation](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Outer Case



- Locate the 3 screws on the outer metal band and remove them with a #00 Phillips screwdriver.

## Step 2

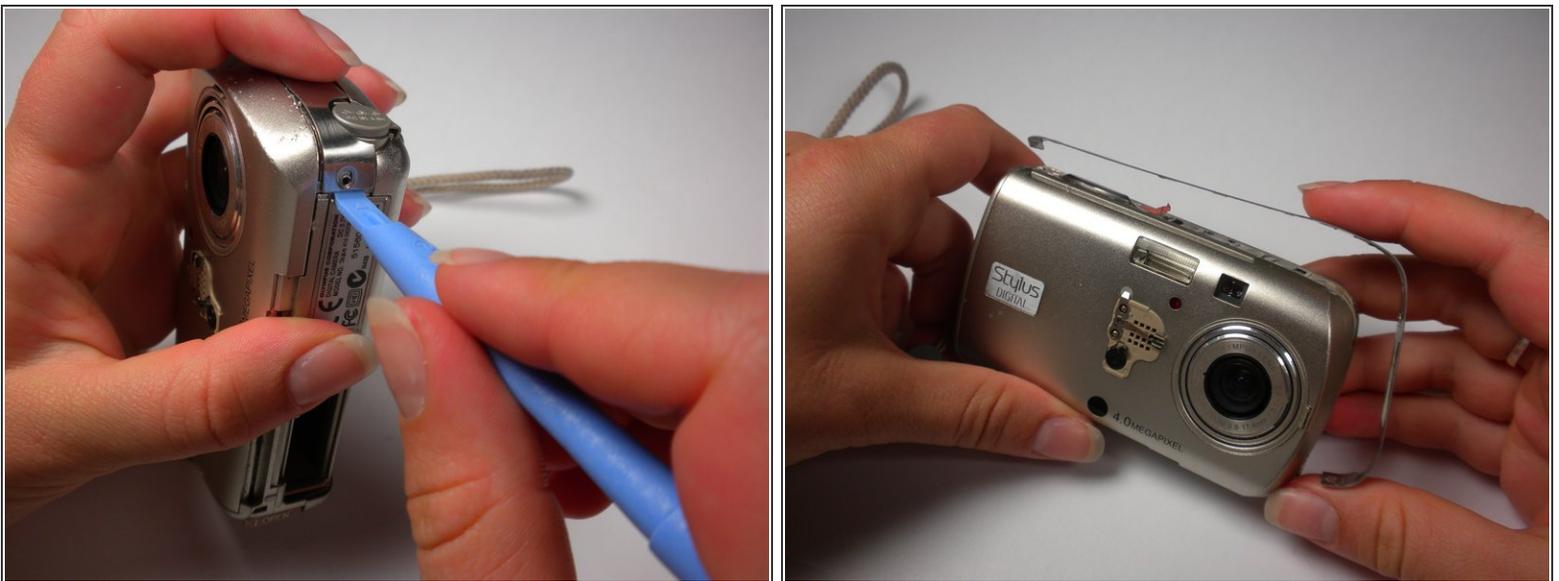

- Use the spudger to peel off the outer metal band, starting from the bottom of the camera.

**⚠** The metal band is attached to the camera with glue in addition to screws. Be careful not to bend the band when removing it from the camera.

### Step 3



- The shutter button can now be removed. It is not connected to the camera and can be lifted off.

### Step 4




- Remove the memory card.
- Locate and remove the 2 screws using a #00 Phillips screwdriver.

## Step 5




- Use a spudger around the edge of the case to loosen it.
- Carefully wiggle the back case off. This may require a fair amount of force.

## Step 6

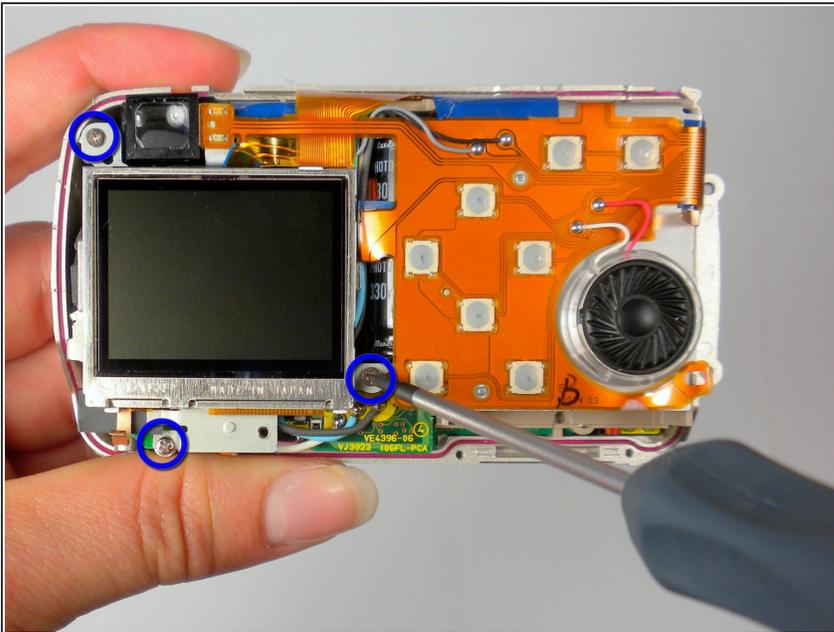


- Locate the 3 internal screws holding on the front of the case. Remove them with a #00 Phillips screwdriver.

## Step 7

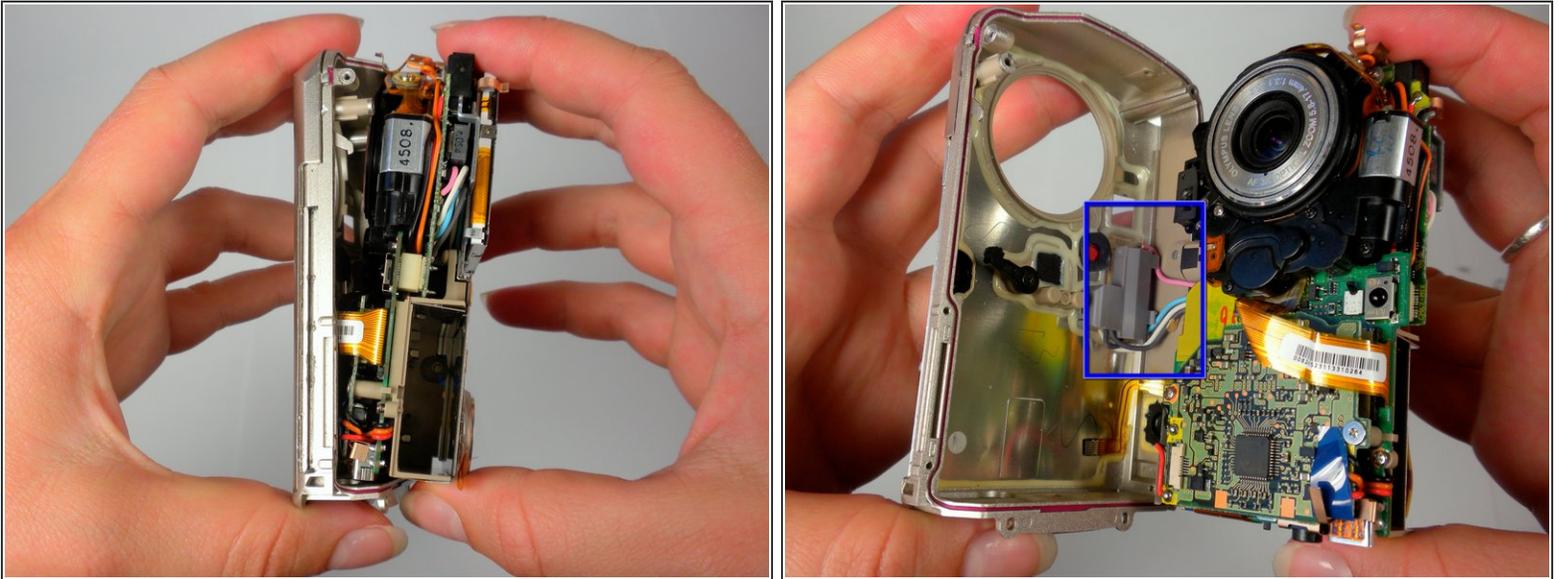


- While grasping the interior and the front case, gently pull until they start to come apart. Some light wiggling may be required.
- Be careful not to completely pull the front case off because it will still be connected with wires.

## Step 8 — Speaker

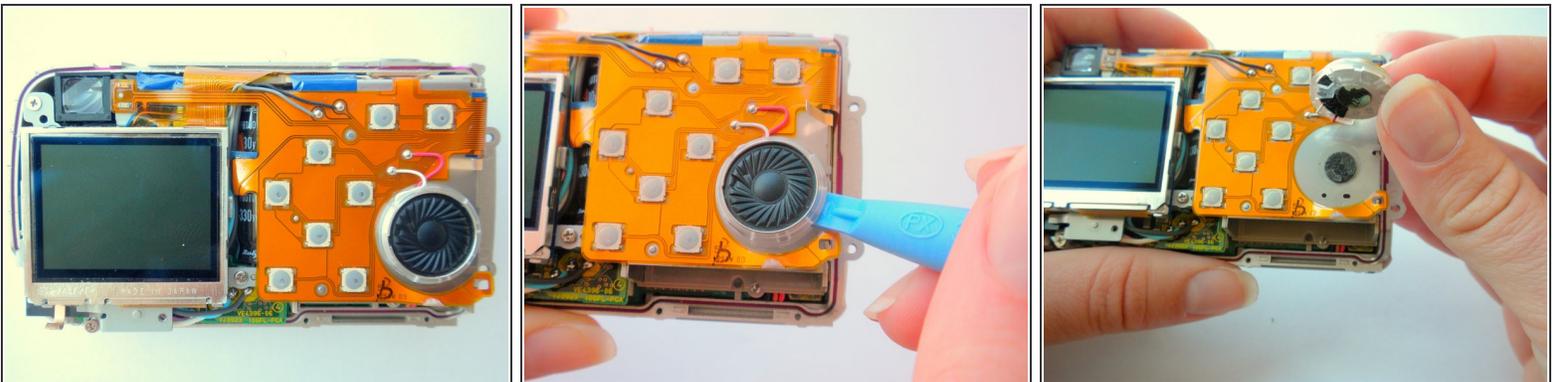

- Use a spudger to remove the speaker. It is attached by a double sided adhesive so it should just peel off.

## Step 9

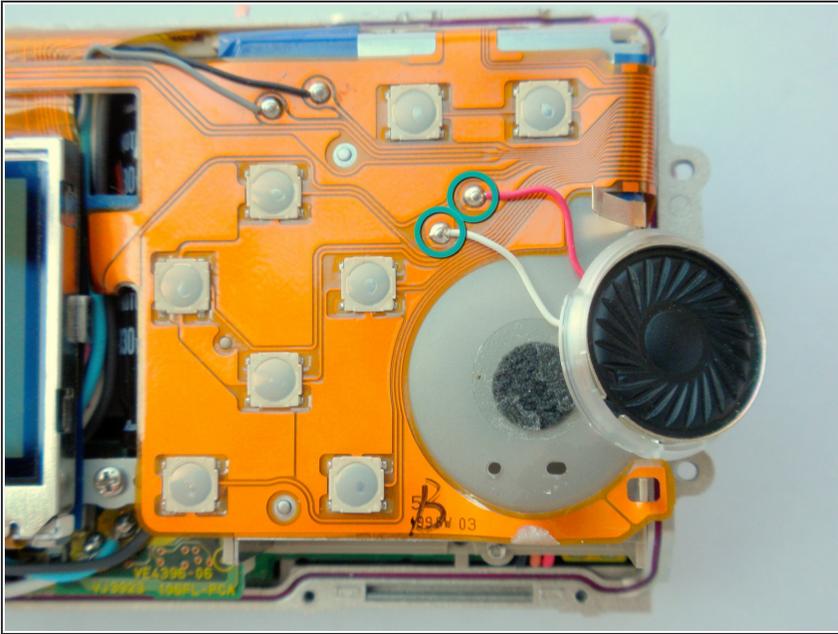

- Un-solder the wires to remove the speaker.

To reassemble your device, follow these instructions in reverse order.