



Oster Blend-N-Go My Blend Blade Assembly Seal Replacement

Replace damaged blade assembly seal.

Written By: Paul Long



INTRODUCTION

Put this guide to work in order to replace your leaking seal in the blade assembly, Note the seal is located inside of the existing blade assembly.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Blender Bottle



- Grip the blender base with one hand and blender bottle with the other hand.
- Rotate the blender bottle a quarter turn counterclockwise .
- Lift the blender bottle out of the blender base. The blade assembly should still be attached to the blender bottle.

Step 2



- Grip the blade assembly with one hand and blender bottle with the other hand.
- Rotate the blade assembly counterclockwise until it is completely unscrewed from the blender bottle.
- Lift the blender bottle to separate it from the blade assembly.

Step 3 — Blade Assembly



- After removing the blade assembly from the blender bottle, ensure your blade assembly has its seal placed in the seal bed.

Step 4 — Blade Assembly Seal



- After separating the blade assembly from the blender bottle, position the plastic opening tool on either side of the seal in the blade assembly.
- Wedge tool between seal and seal seat wall.

Step 5



- Gently pry the seal up while lifting seal out of the seal seat.

Step 6

- Place and press the new seal into seal seat with finger.

To reassemble your device, follow these instructions in reverse order.