


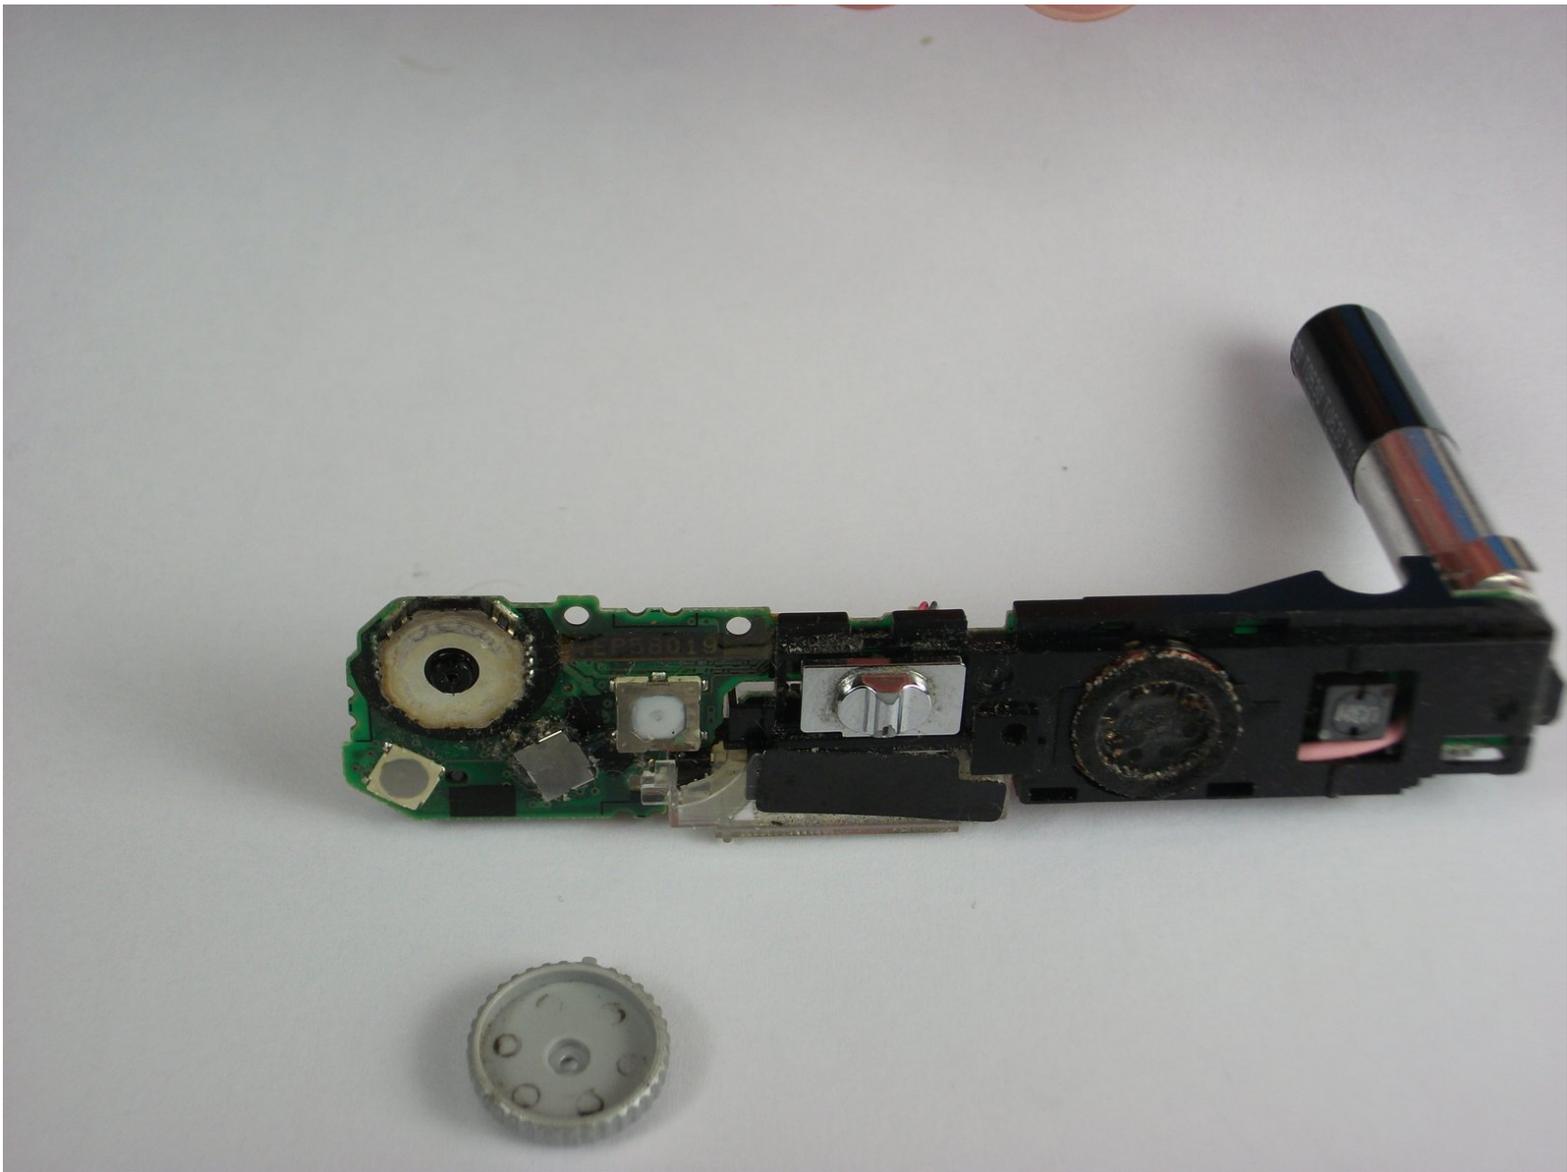

Panasonic Lumix DMC-FX01 On/ Off and Settings Button cover replacement

This guide walks you through the steps necessary to replace the On/ Off button and the settings buttons.

Written By: Andrew



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Locate the memory card and battery card latch on the bottom of the camera.
- Slide the latch to the open position.

Step 2



- Open the battery latch, and slide the battery release lever to the right.

Step 3



- Remove the battery from the camera.

Step 4 — Rear Casing



- Using a size #00 Phillips screwdriver, remove the three 4.58 mm screws on the bottom of the camera.
- Use this screwdriver for all screws in the device.

Step 5



- Remove the 3.15 mm screw on the left side of the camera.

Step 6



- Remove the left side casing.

Step 7



- Remove the two 3.15 mm screws on the right side of the camera.

Step 8



- Remove the bottom right panel.


Step 9



- Gently remove the back casing.


⚠ Start at the bottom and carefully pry towards the top to get this piece free.

Step 10 — LCD Screen

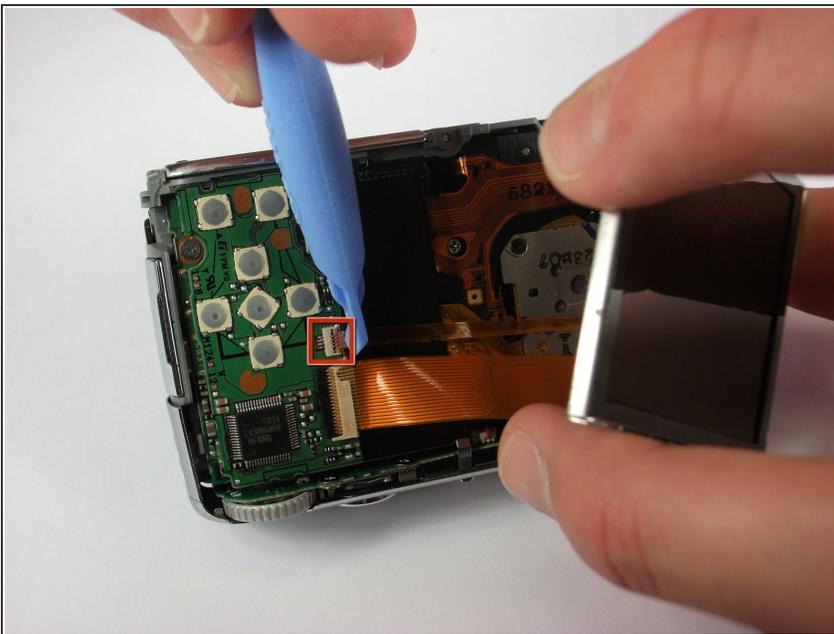


- Gently lift up the LCD screen.
- Using a plastic prying tool, flip up the latch that holds the thin ribbon in place.
- It should fall out on its own or with a gentle tug.

Step 11

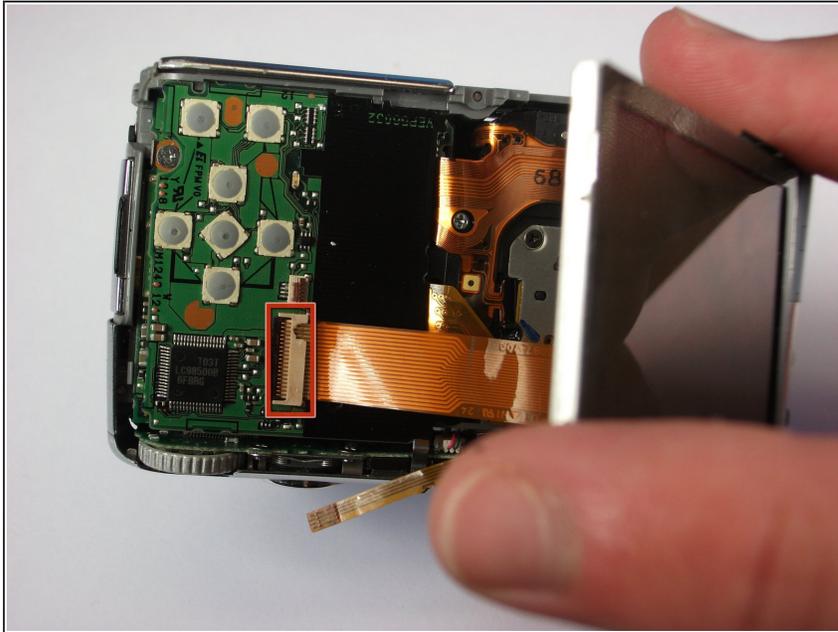


- Gently tug the thicker ribbon to remove it from its housing.

Step 12 — On/ Off Button and Settings Button

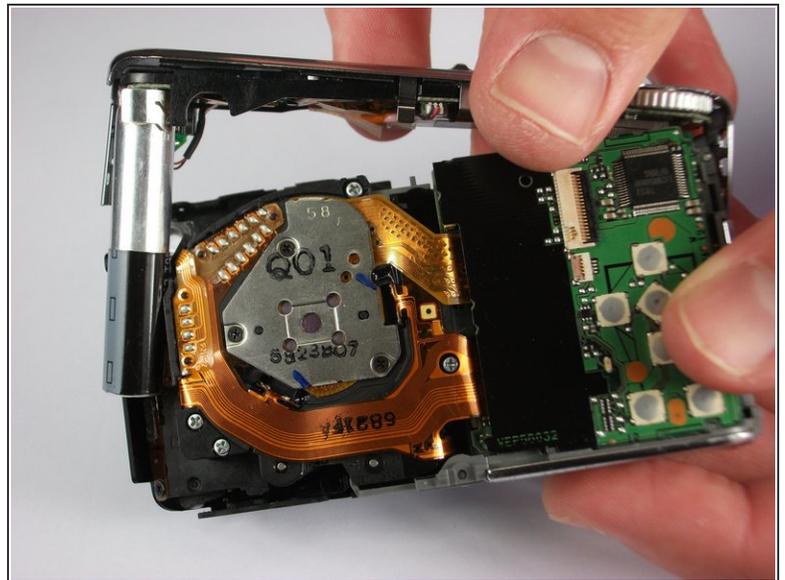



- Carefully remove the upper assembly, which houses the buttons and the flash battery.

Step 13

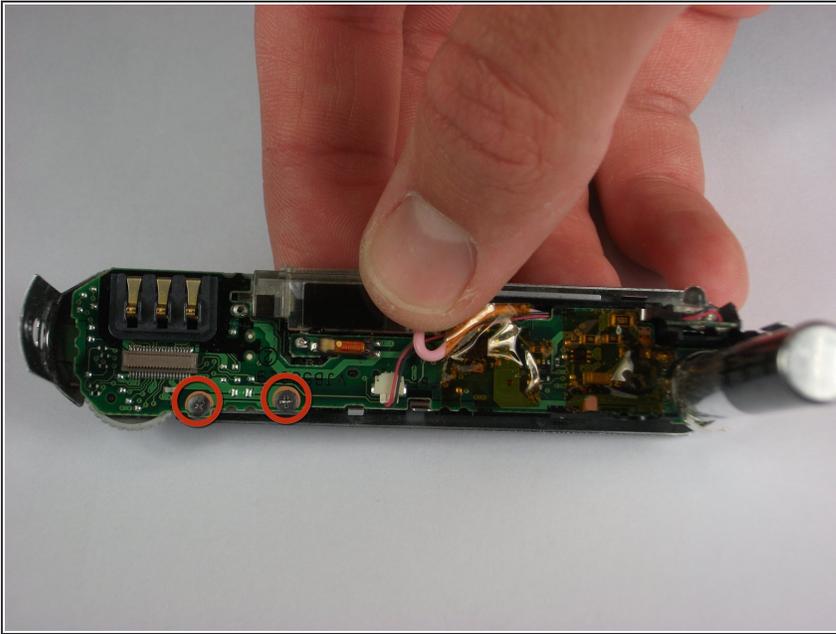



- Remove the two 3mm screws.

Step 14

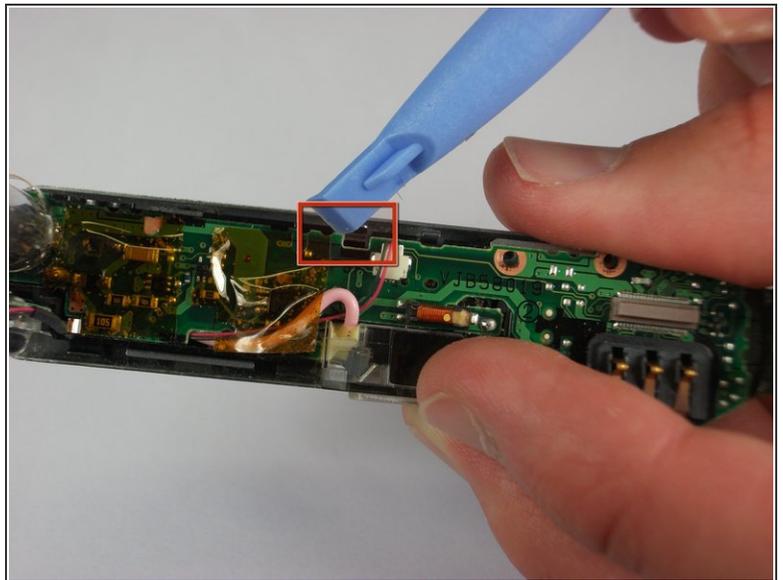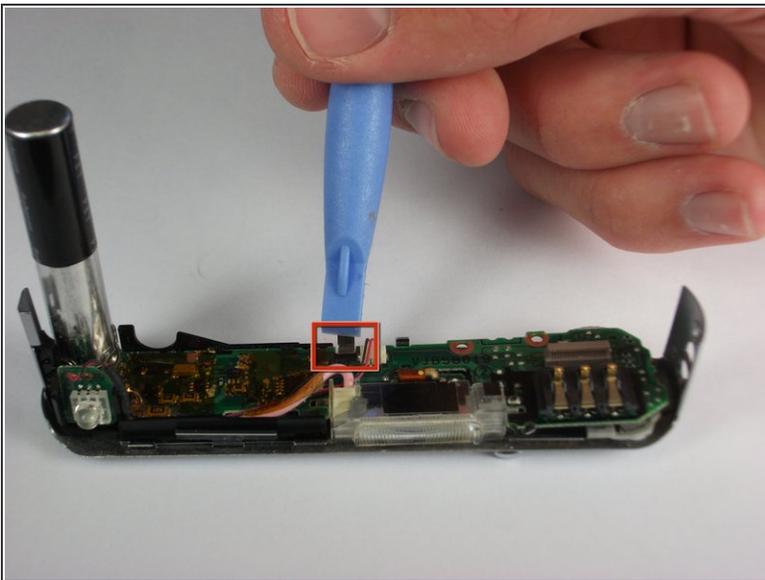


- Pry bars back gently as shown.
- Fingers can be used but tool is shown for clarity.

Step 15

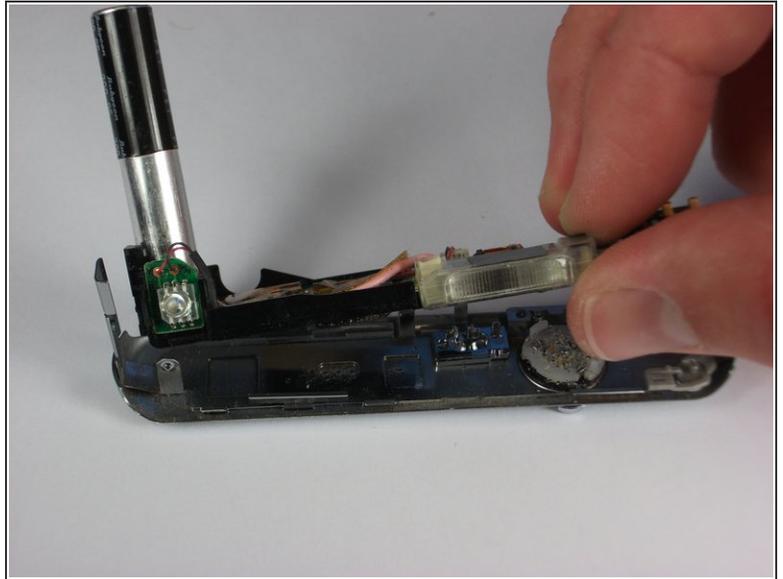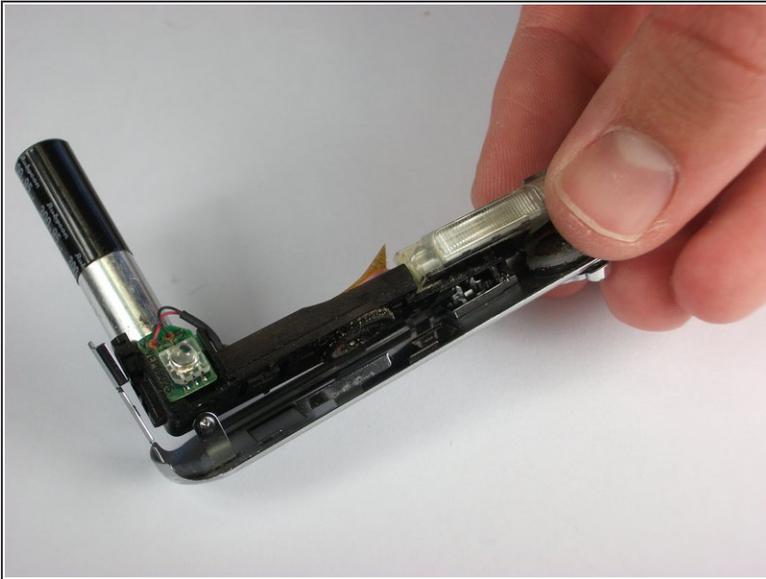


- After, releasing all the components, gently remove the flash assembly from the casing.

Step 16

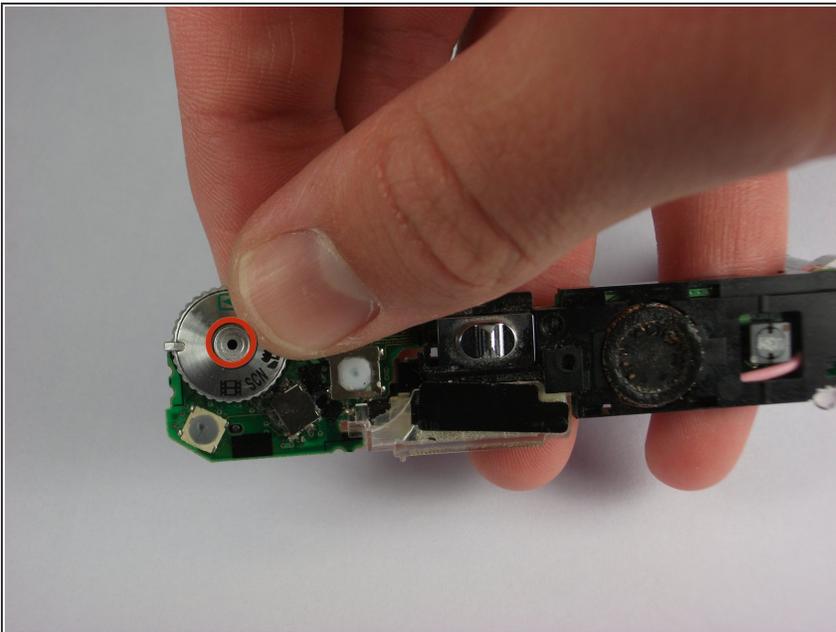

- Remove the 1.2 mm screw from the settings wheel.

Step 17

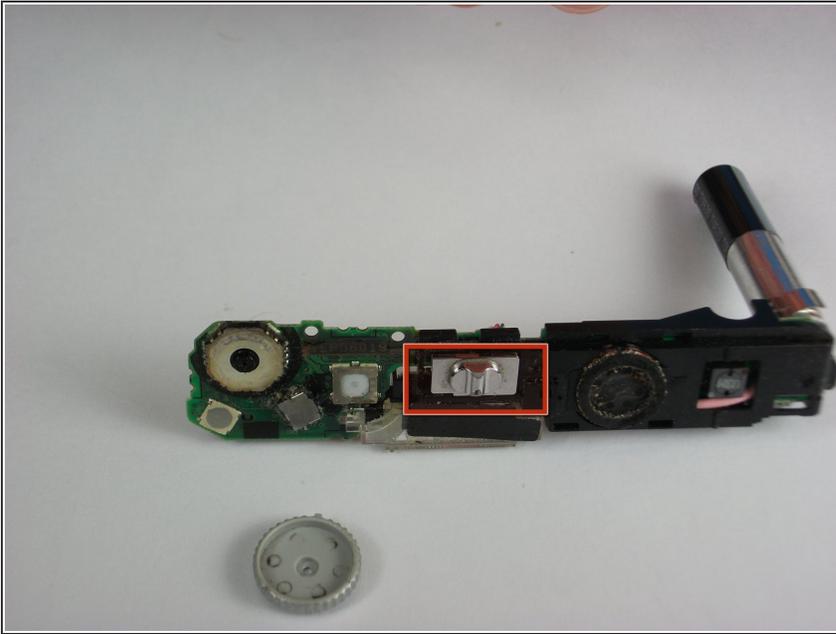

- Replace buttons.
- Replace the "On/ Off" button with the prongs facing away from the flash.

To reassemble your device, follow these instructions in reverse order.