



Panasonic Lumix DMC-GX85 Battery Replacement

How to replace a Panasonic Lumix DMC-GX85 battery.

Written By: Ryan Peeples



INTRODUCTION

Is the battery not charging or not powering up the Panasonic Lumix DMC-GX85? Then the battery might be the problem. The battery stores and provides power to the camera. If the battery had reached its lifespan or been damaged, the camera wouldn't turn on! For the battery replacement, no tools are needed, just follow the simple steps!



PARTS:

- [Panasonic DMW-BLG10 Lithium-Ion Battery](#) (1)
-

Step 1 — Battery



- Turn the camera upside down, and slide the switch to the left to open the flap.

Step 2



- Push in the small lever, releasing the battery.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.