



Philips DVP5992-F7 USB port Replacement

This guide will show consumers how to replace the USB port on the Philips DVD player.

Written By: Nathan Sarti



INTRODUCTION

With constant use, the USB port can become broken or unresponsive. This guide will show you how to replace the USB port on your Philips DVP5992-F7.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — USB port



- Remove the three 6.4 mm Phillips #1 screws on the back of the device with a Phillips head screwdriver.
- Remove the 6.4 mm Phillips #1 screws on each side of the device.

Step 2

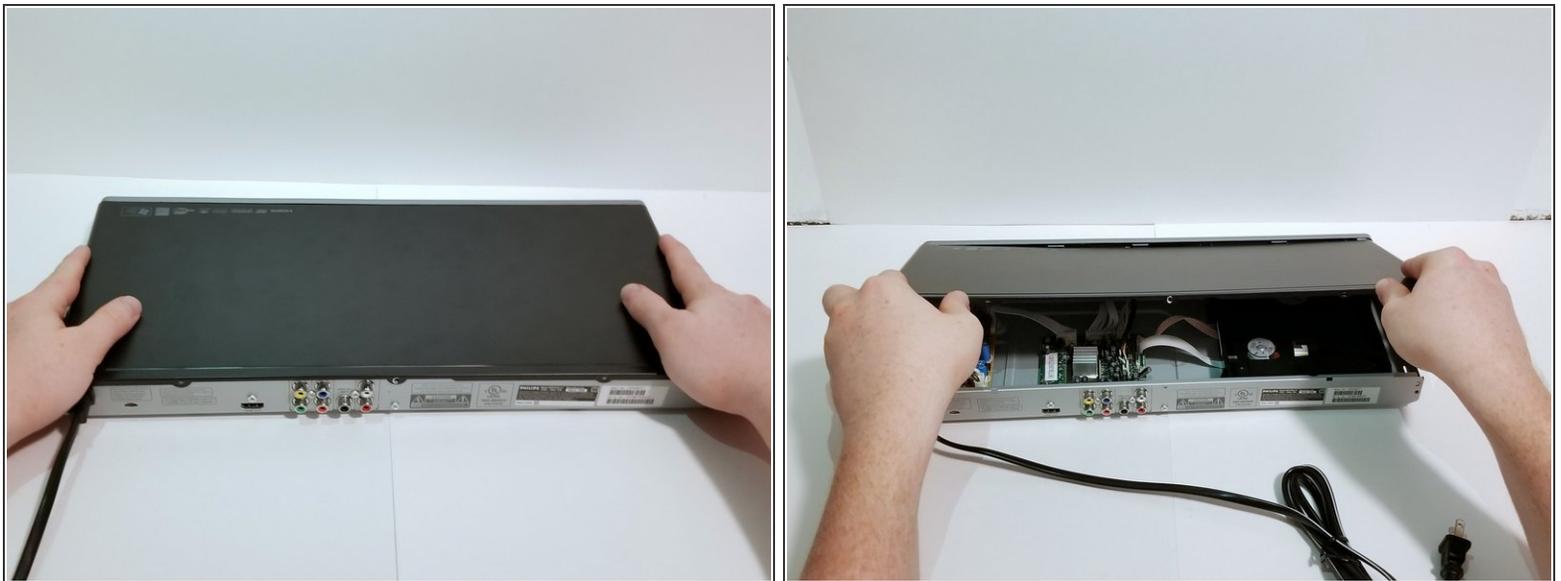


- Remove the top plate of the DVD by firmly grasping the player on both sides.
- Shift the top plate towards the backside of the player.
- Lift the back half of the top plate up to remove it from the player.

Step 3





- Locate the bundled cable connectors that attaches the USB port to the motherboard.
- Firmly grasp the bundled cable connector and lift it from the motherboard.

Step 4

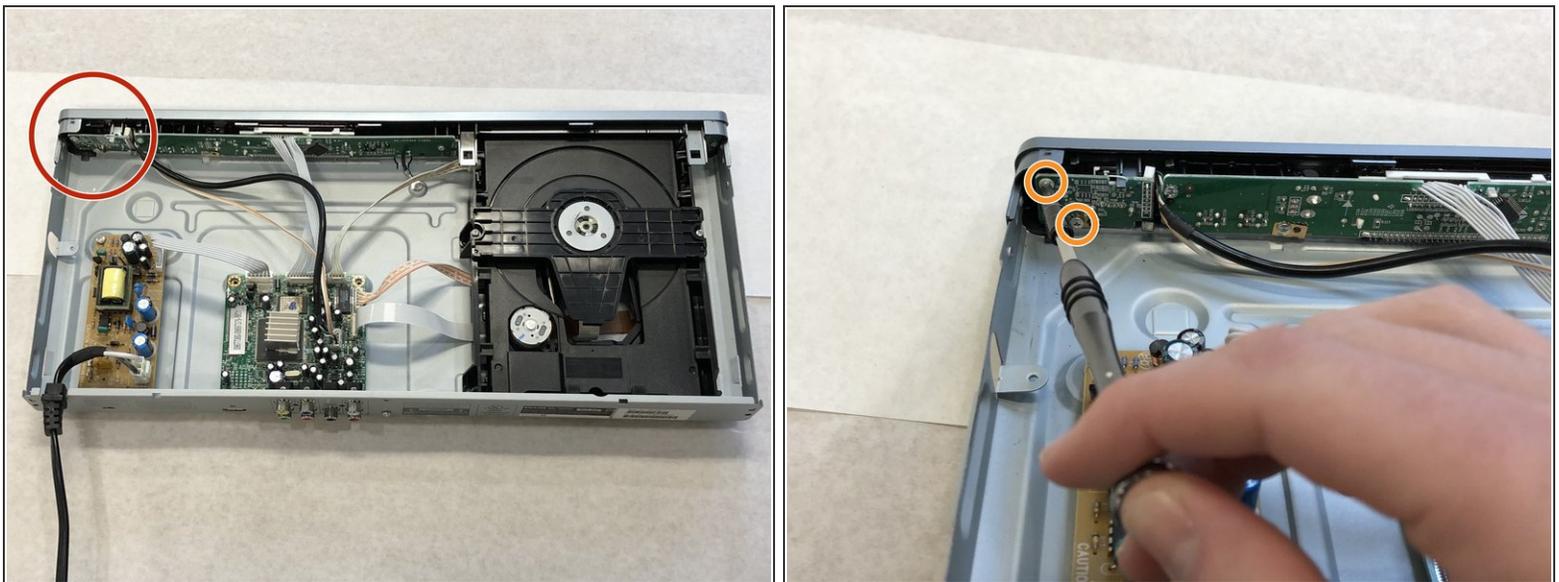

- Locate the area behind the USB port within the interior of the DVD Player.
- Unscrew the two 6.35 mm Phillips #1 screws located behind the USB port.

Step 5

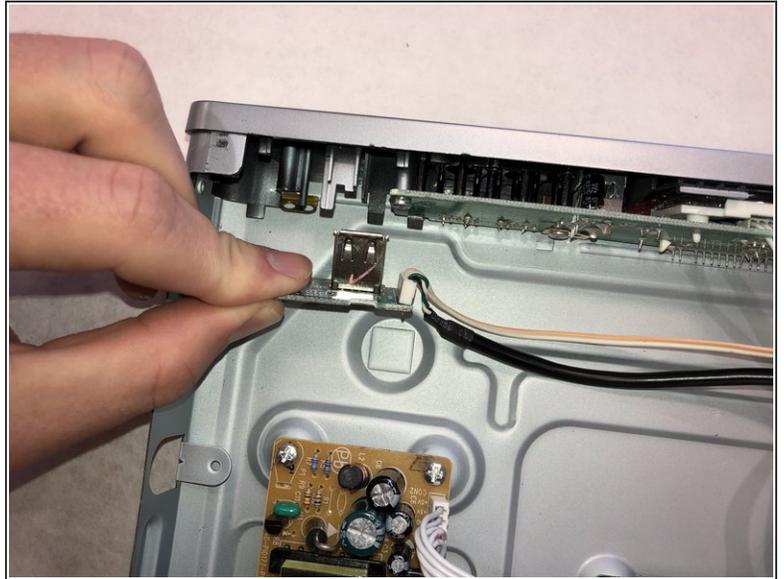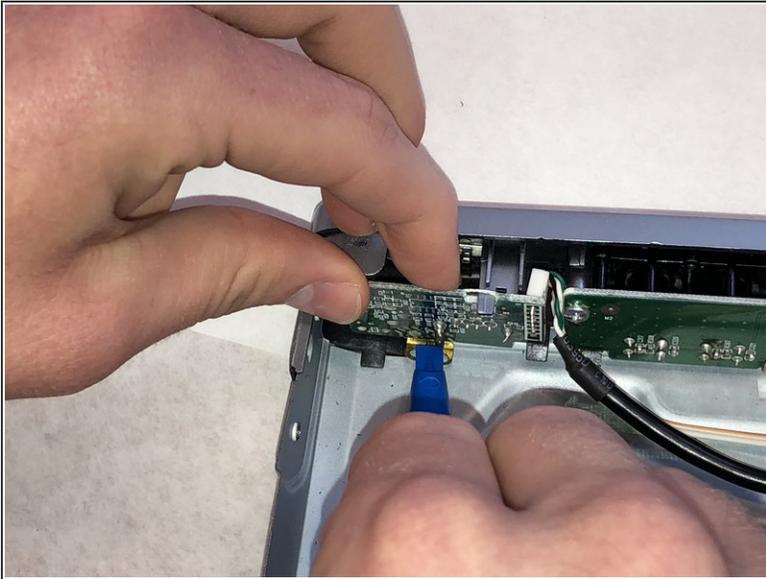

- Use the plastic opening tool to press down on the brass clip that holds the USB port in place.
- Pull back the USB Port to remove it from the DVD player.

To reassemble your device, follow these instructions in reverse order.