



# Removing Lenovo Thinkpad T61p RAM

This guide will show you how to remove the laptop RAM.

Written By: Glac1er



---

## INTRODUCTION



This guide will show you how to remove the laptop RAM.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-


## Step 1 — RAM

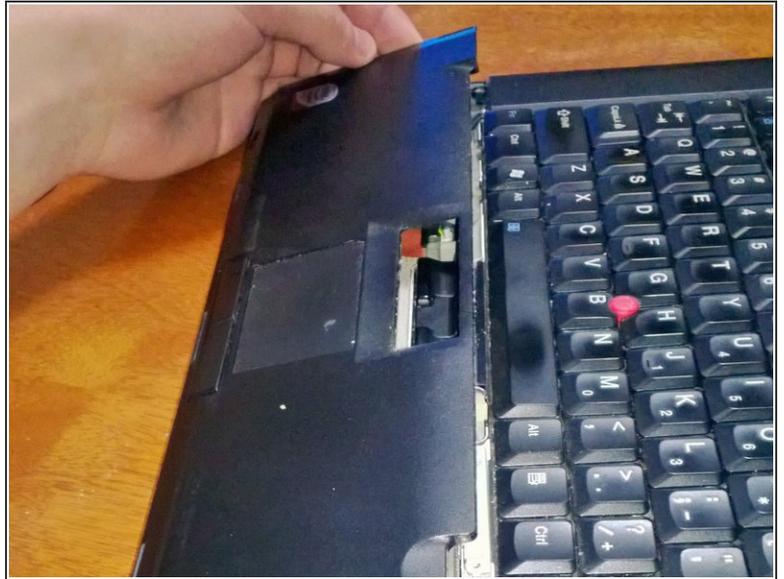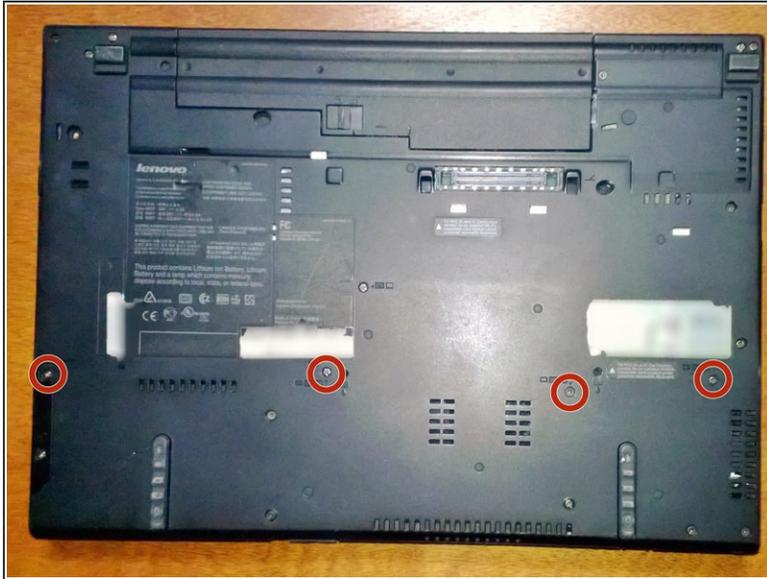

- Place the laptop on a flat surface with the underside facing up
- Remove the 4 Philips head screws.
- Turn the computer over and open the display
- Grasping each side of the palm rest, gently lift it off and rotate toward the front of the laptop


⚠ The palm rest will be connected to the main board by a ribbon cable

## Step 2

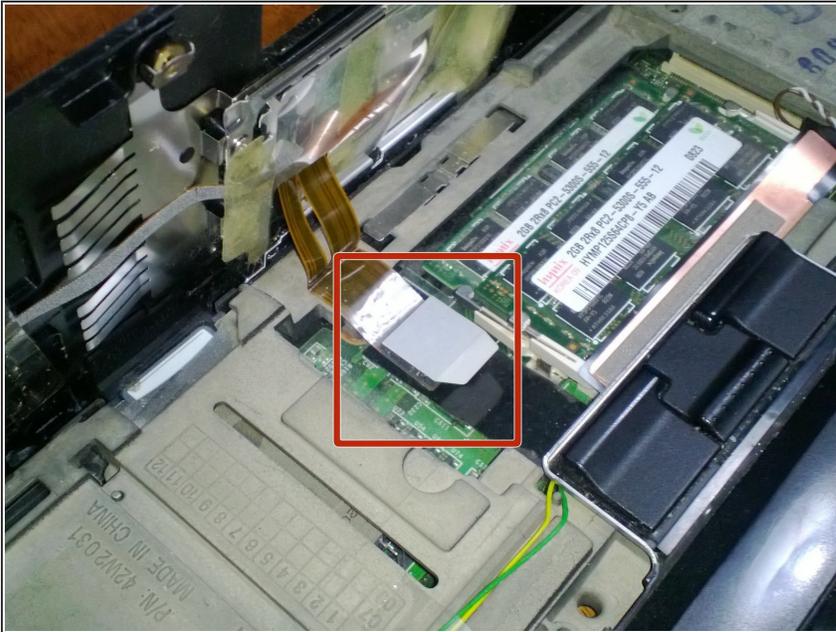

- Disconnect the touchpad ribbon cable
- ⓘ This step is recommended in the service manual however it is possible to remove the RAM without disconnecting the touchpad cable

## Step 3

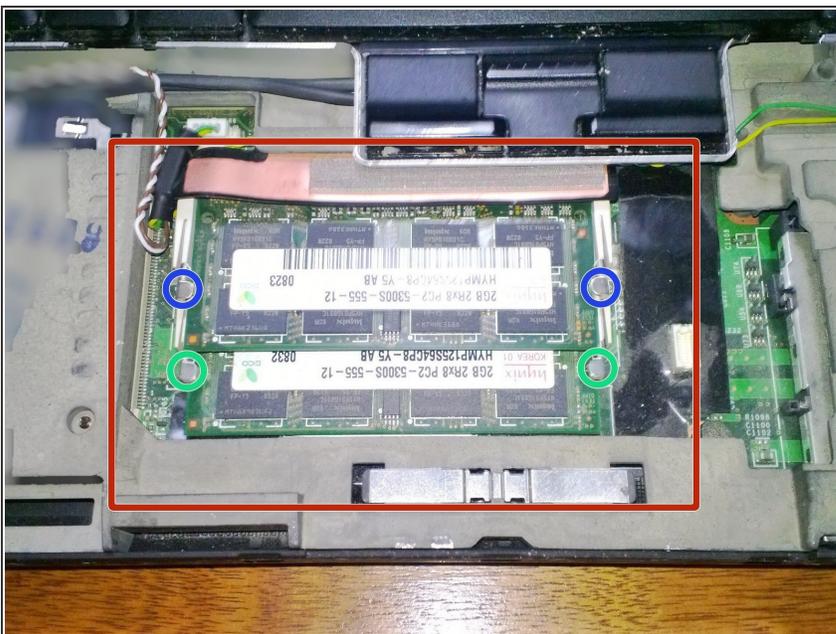

- Locate the RAM modules
- Gently press the metal tabs outwards to release the top RAM module and remove it from the laptop
- With the top RAM module removed you can release the lower RAM module in the same manner.

To reassemble your device, follow these instructions in reverse order.