



Removing iMac G4 15" 700 MHz EMC 1873 Outer Base Plate

We will be removing the metal outer Base plate.

Written By: Elliot Freerks



INTRODUCTION

This is the initial step in any repair guide. It is simple, quick, and will only take a few minutes.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Outer Base Plate



- ⓘ Place the computer monitor face down on a safe, harmless surface.
- Using a Phillips #00 screw driver, remove the four 6.86 mm screws from the metal plate.

Step 2



- Remove the metal plate from bottom of the iMac G4.
- ⓘ The four screws do not completely separate from the metal plate.

To reassemble your device, follow these instructions in reverse order.