


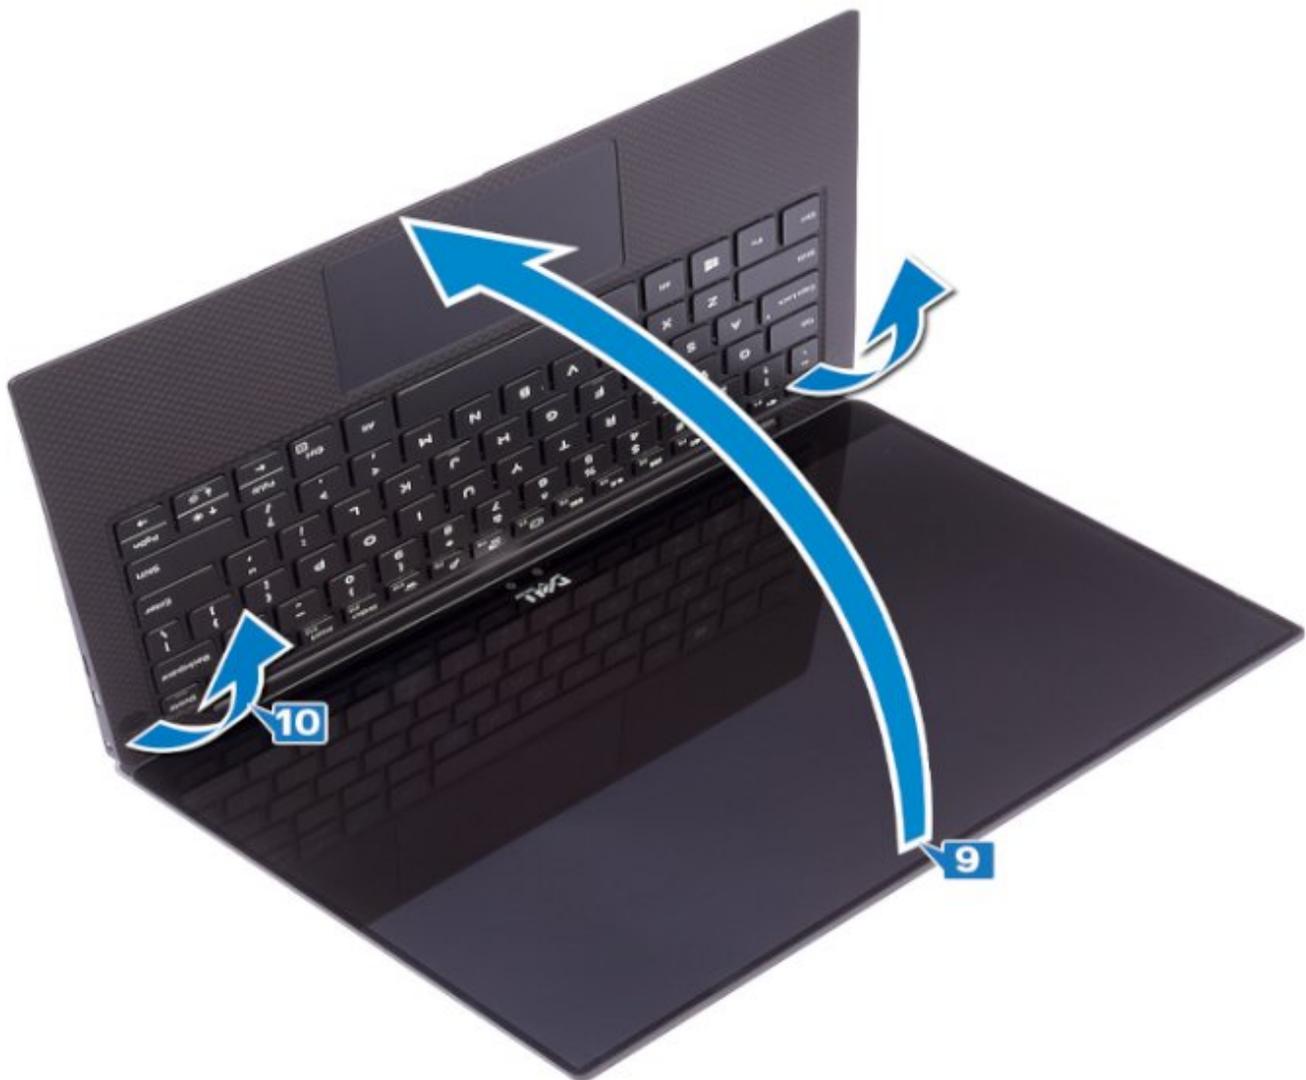

Replacement of the display on a Dell XPS 13 9380

This guide explains how to remove the screen from your Dell XPS 13 9380.

Written By: Schwarzer




INTRODUCTION

You must disconnect or replace the screen of your Dell XPS 13 9380, this guide is then made for you!

TOOLS:


- [Mako Driver Kit - 64 Precision Bits](#) (1)
-

Step 1 — Remove the back panel

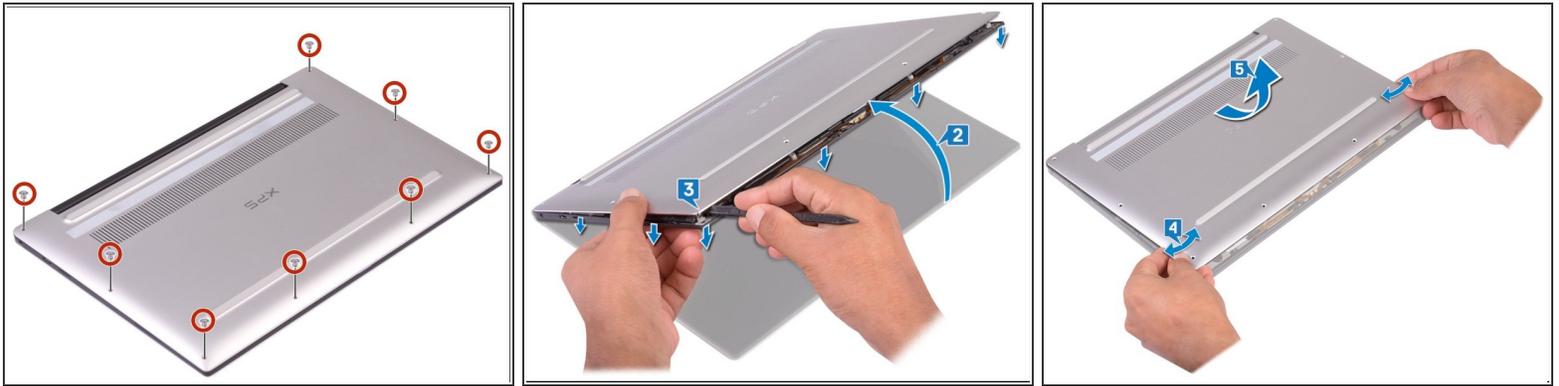


- Unscrew the eight screws (Torx M2x3) that attach the back panel.
- Turn the computer over, then open it by tilting it.
- Using a Spudger, lever on the back panel.
- By sliding the back panel from left to right, release the clips that attach it. This way you can remove it

Step 2 — Remove the battery

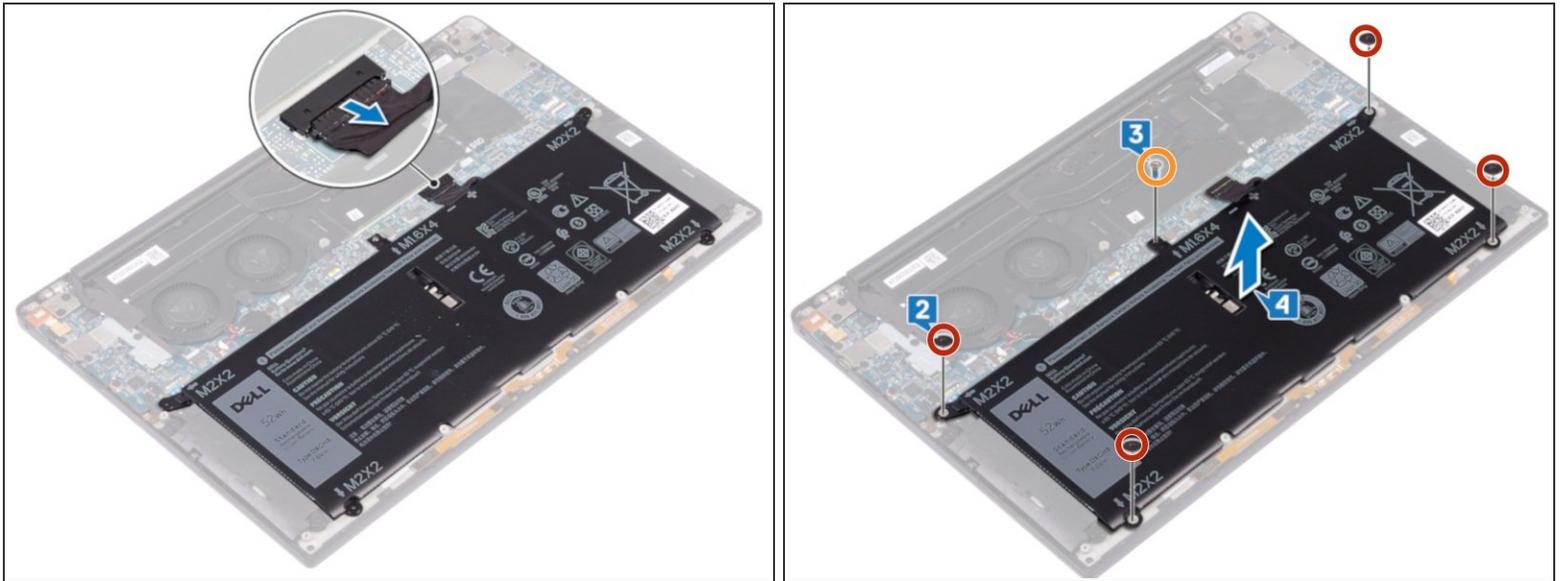


- 1- Disconnect the cable from the battery.
- 2- Remove the four screws (M2 x 2) that attach the battery.
- 3- Remove the screw (M1.6 x 4) that fixes the battery.
- 4- Remove the battery from its place.

Step 3 — Display

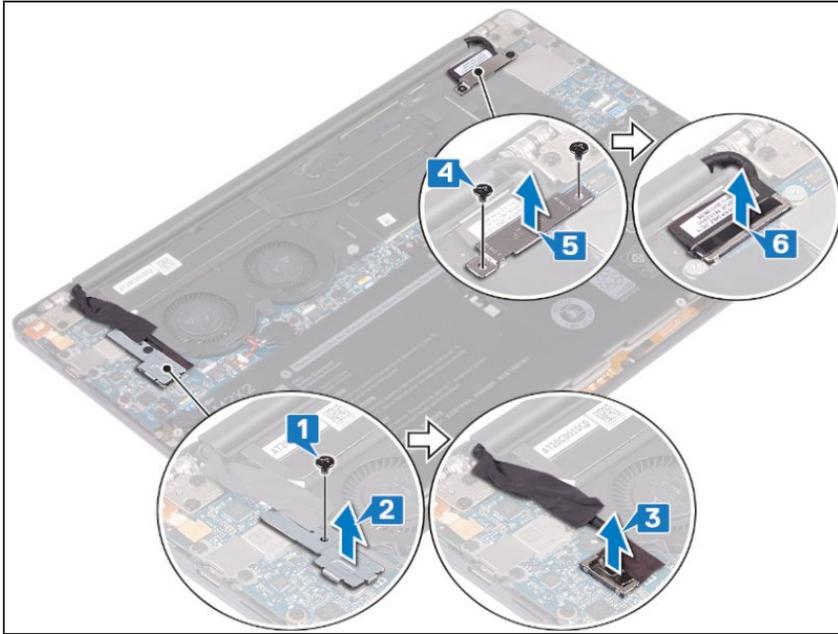

- **1-** Remove the screw (M1.6 x 3) that attaches the WiFi card and cable holder from the webcam to the motherboard. **2-** Remove the WiFi card and cable holder.
- **3-** Disconnect and lift the webcam cable from the motherboard, removing the adhesive tape that attaches the webcam cable to the fans.
- **4-** Remove the two screws (M1.6 x 2.5) that attach the display cable holder to the motherboard. **5-** Then remove everything.
- **6-** Disconnect the screen connection from the motherboard.

Step 4

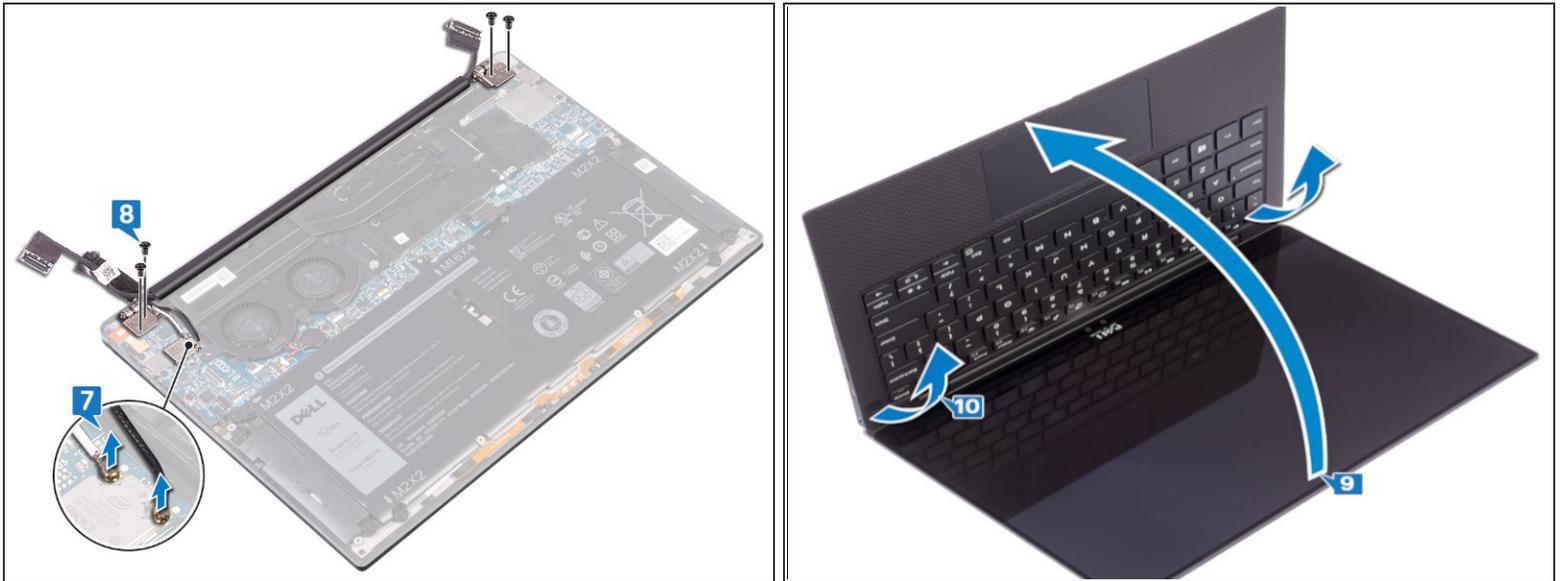

- **7-** Disconnect the antenna cables from the motherboard.
- **8-** Remove the four screws (M2.5 x 4) that fix the hinges of the screen.
 - **9-** Place the back of the computer screen on a clean and level surface, then open the computer at a 90-degree angle.
 - **10-** Gently slide and lift the screen off the rest of the computer.

To reassemble your device, follow the instructions in reverse order.