



Replacement the WiFi card on Dell XPS 12 9Q23

This guide shows the steps to follow when replacing the WiFi card.

Written By: Schwarzer




INTRODUCTION

Your WiFi card no longer works and you want to change it. You've come to the right place, this tutorial is for you.

TOOLS:

- [Mako Driver Kit - 64 Precision Bits](#) (1)
-

Step 1 — Battery

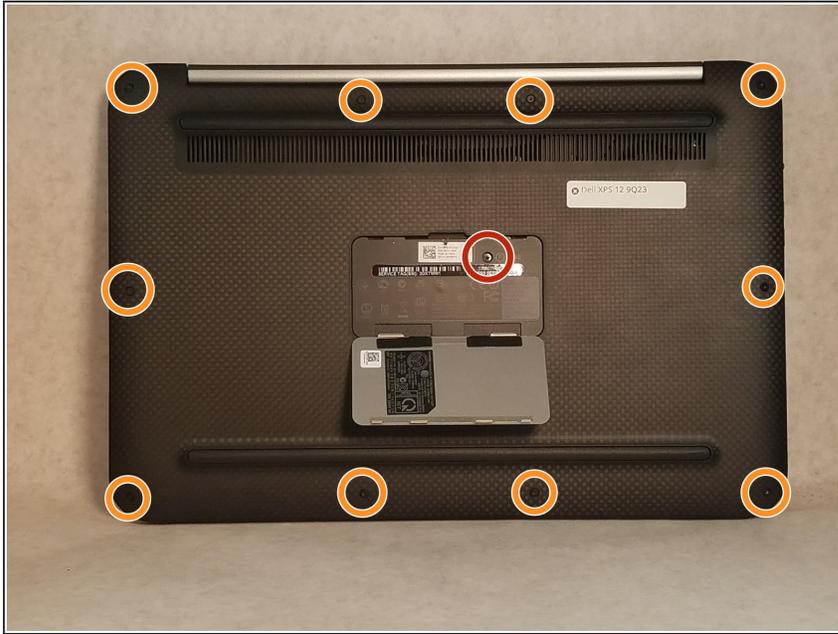


- Pop the center cover open on the bottom cover.
- Remove the center screw with a #00 Phillips screwdriver.
- Use a T5 Torx screwdriver for the remaining screws around the edge of the bottom cover.

Step 2




- Carefully remove back panel after all screws have been removed.

Step 3

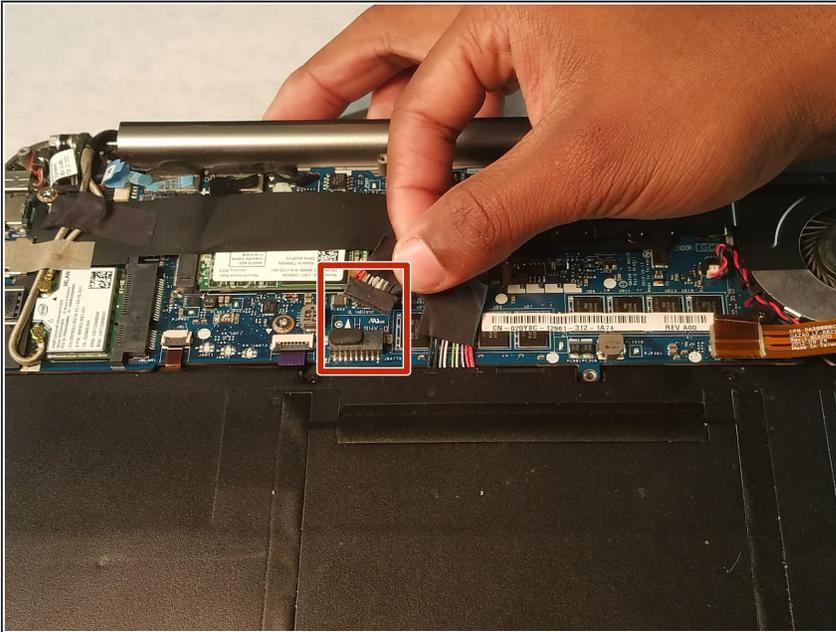


- After the back panel has been removed, disconnect the battery to prevent electrical shock

Step 4

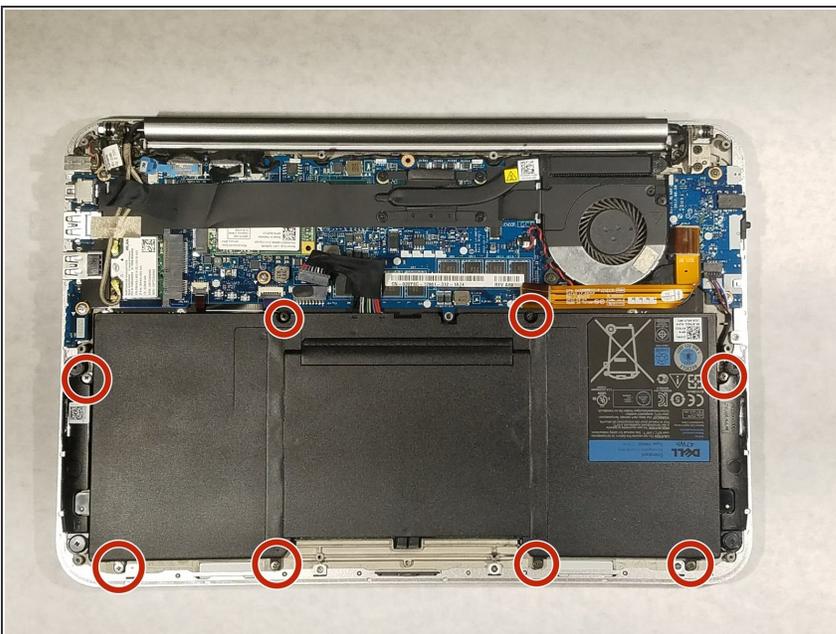

- Use a Phillips #00 screwdriver to remove the 8 screws that secure the battery.

Step 5 — Remove the battery

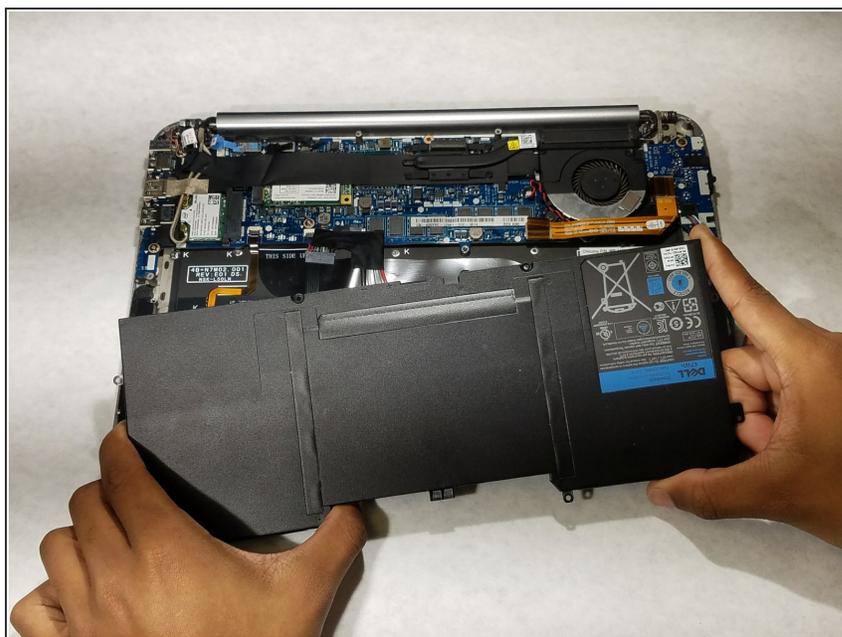

- Once all the screws have been removed the battery is now safe to extract

Step 6 — Remove the WiFi card



 We removed the battery to avoid electric shocks.

- Disconnect the two wires from the WiFi card. You can do this with a pair of pliers or your fingernail.
- Remove the screw with a #00 Phillips screwdriver.
- Now remove your WiFi card to replace it.

To reassemble your device, follow the instructions in reverse order.

This document was generated on 2019-10-02 04:26:41 PM (MST).

