




# Samsung Blackjack Volume/Scroll Wheel Replacement

Remove the volume/scroll wheel on your Samsung Blackjack.

Written By: Kristin Manna

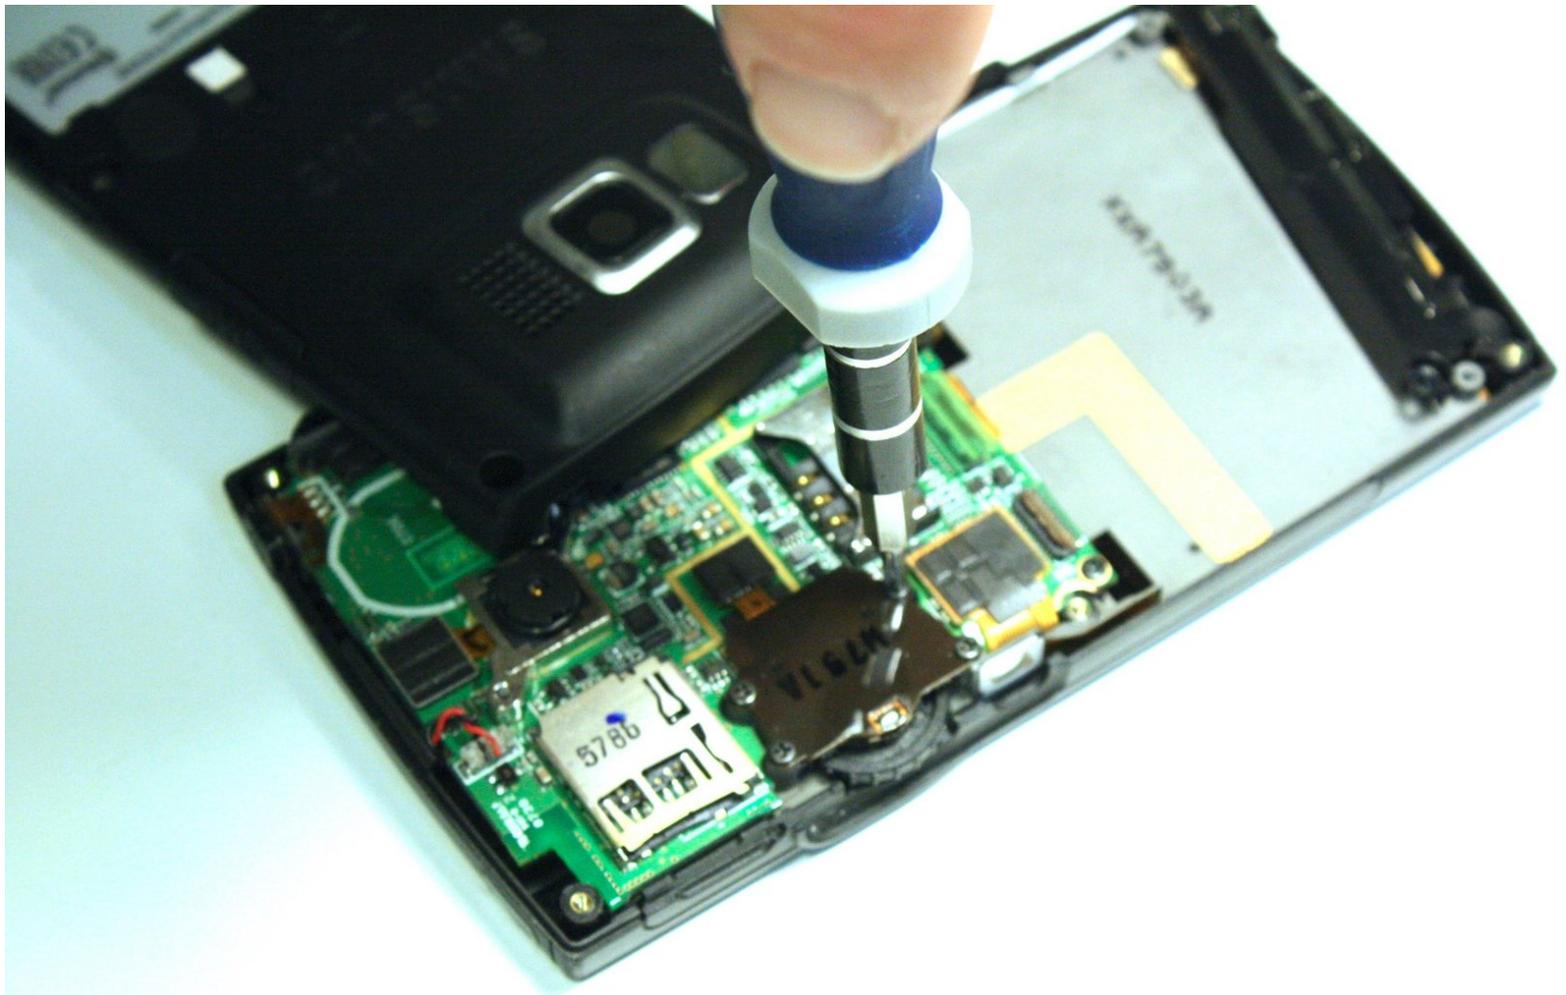

---

## INTRODUCTION

Use this guide to remove the volume/scroll wheel.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery Cover



- Hold the device with the screen facing away from you and the camera towards you.
- Place your thumb on the bottom half of the phone and slide the cover off while gently pushing down on the cover.

## Step 2 — Battery

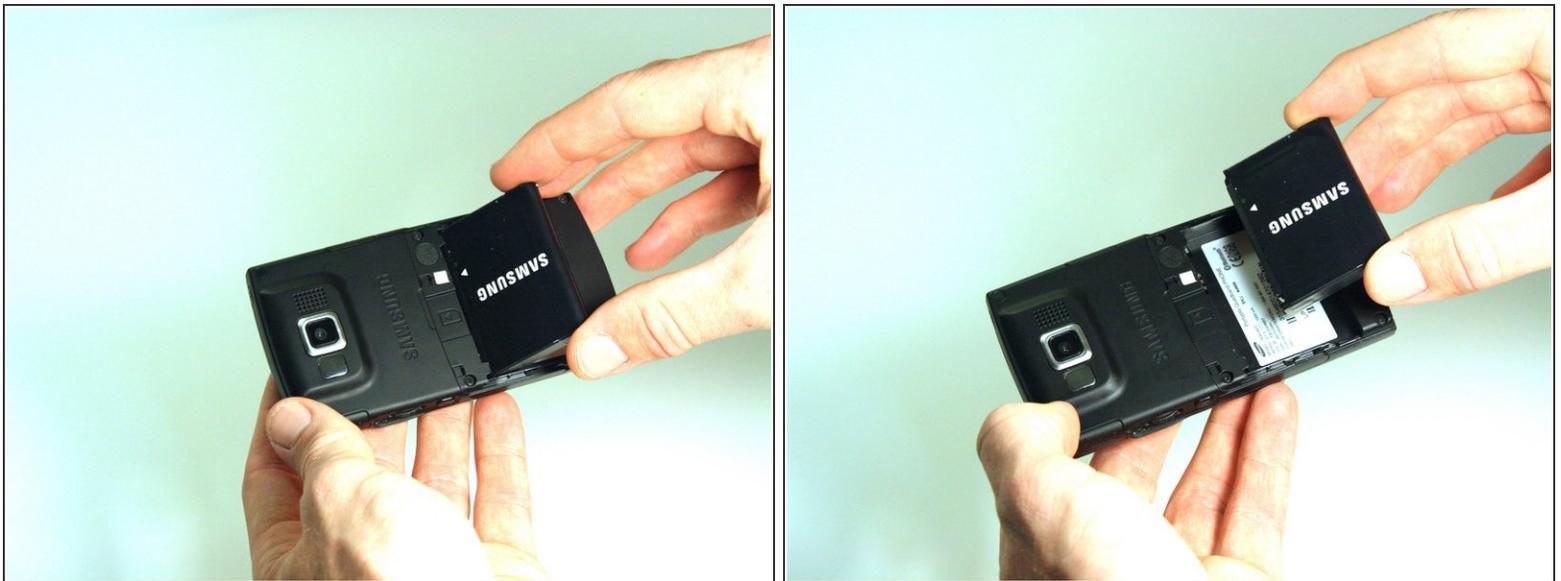


- Place your fingers on both sides of the bottom of the battery and lift upwards.
- Pull the battery away from the phone.

### Step 3 — SIM Card



- Place your thumb on the SIM card.
- Slide the card out of the slot.

### Step 4 — Back Phone Casing

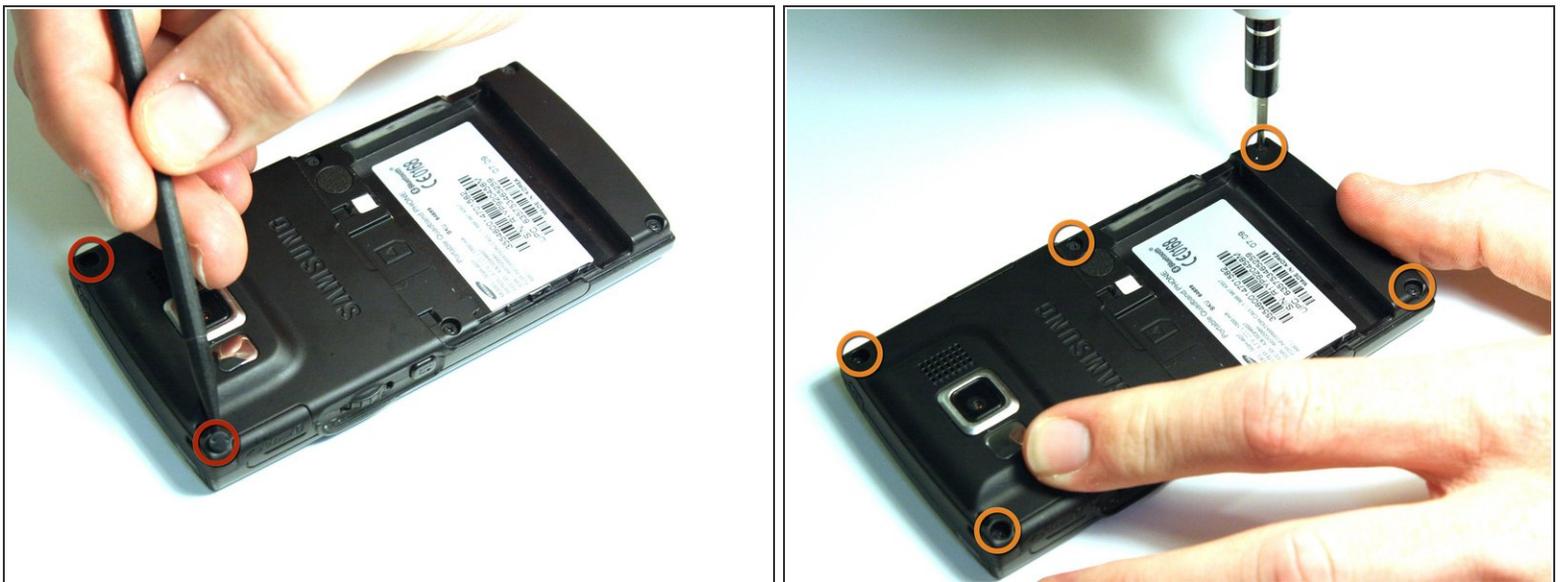

- Use the spudger to remove the rubber stoppers from the top of the cover.
- Use the Phillips 00 screw driver to remove the screws from each of the four corners and the two on sides (six total).

## Step 5




- Use the spudger to loosen and separate the front and back covers.
- Pick up the back cover once loosened.

**⚠** *The front and back covers will be attached to each other by a gold wire.*



- Remove the gold wire connecting the back cover to the motherboard to completely separate the covers.

## Step 6 — Volume/Scroll Wheel

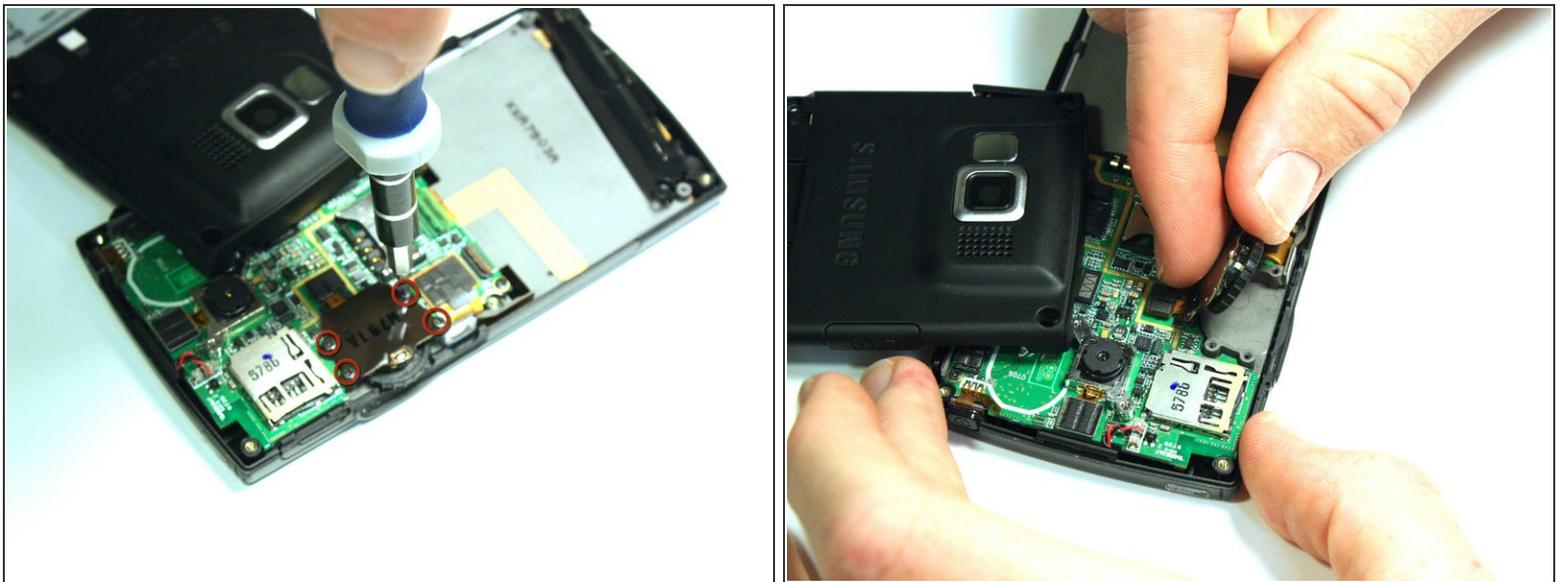

- Use the screwdriver to unscrew the four screws that hold the scroll wheel in place.
- Use your fingers to remove the scroll wheel and the metal plate that it is attached to.

## Step 7

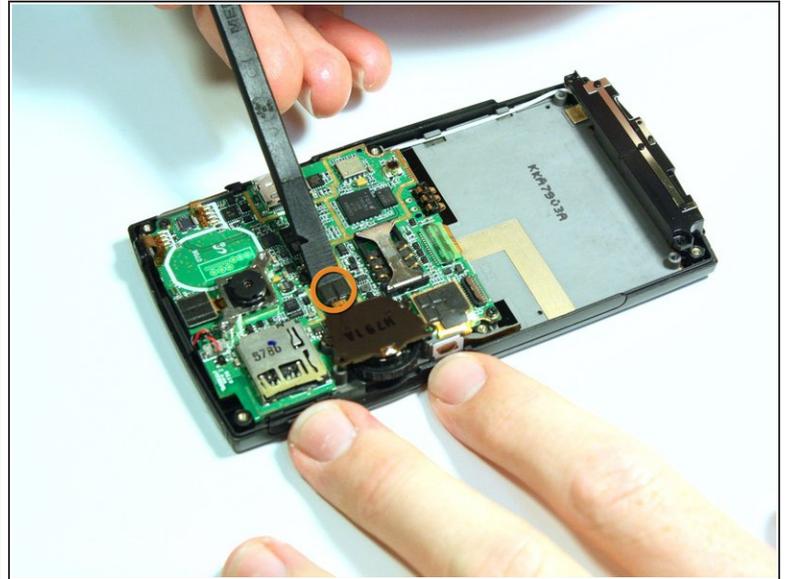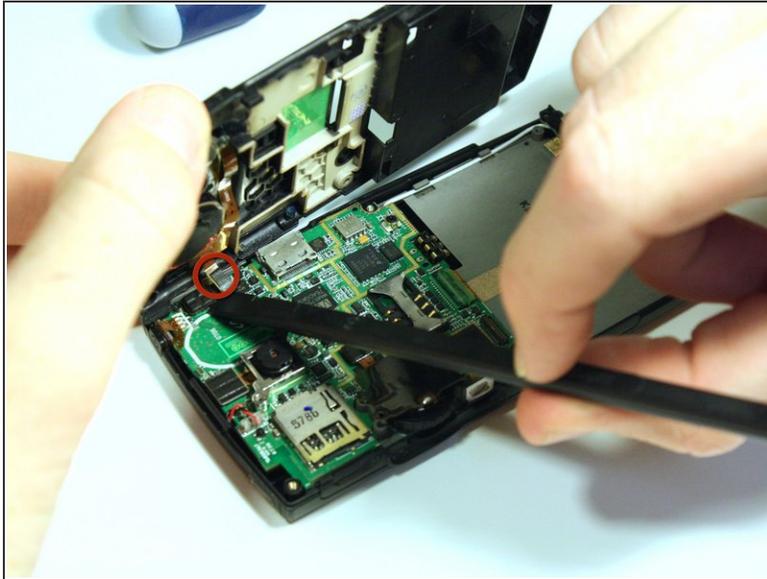

- Use the spudger to unsnap the gold wire connection that connects the back casing to the logic board.
- Use the spudger to unsnap the gold wire connection that connects the scroll wheel assembly to the logic board.

To reassemble your device, follow these instructions in reverse order.