




# Samsung Chromebook 3 XE500C13-K02US

## Track pad Replacement

This guide illustrates the steps to replace the track pad in the Samsung Chromebook 3 XE500C13-K02US.

Written By: Mick McCarty

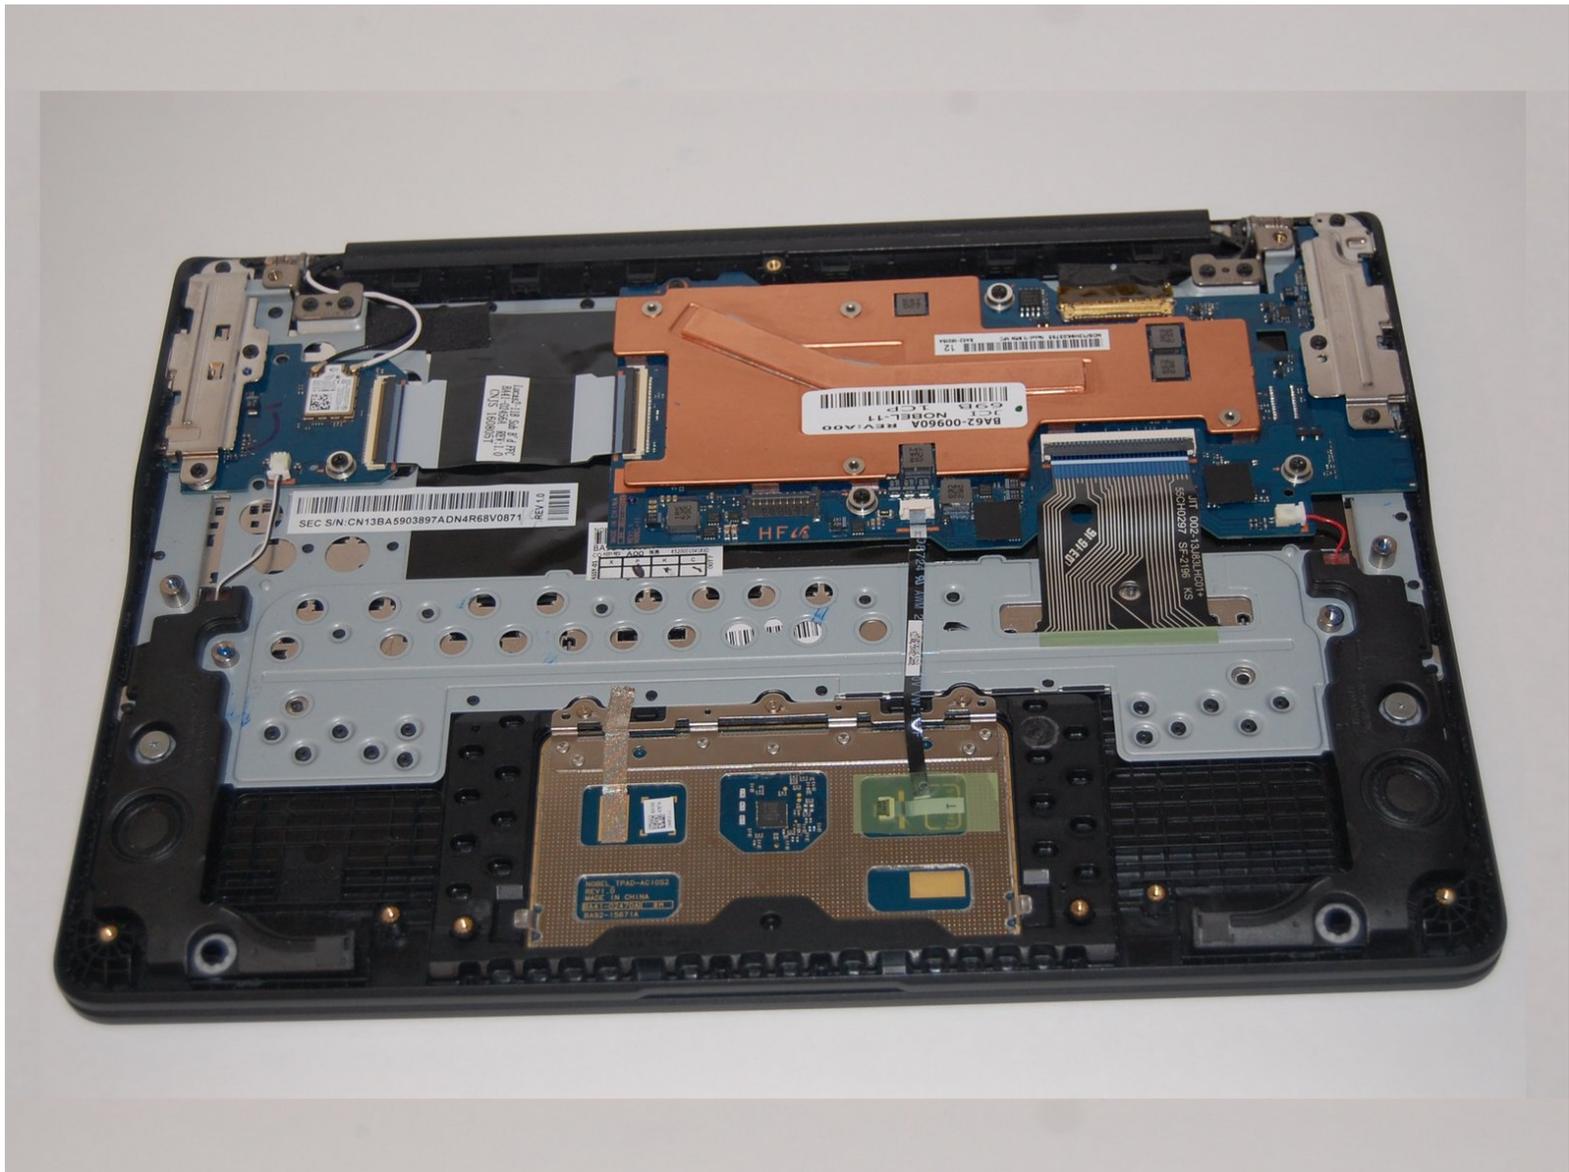

This document was generated on 2020-01-01 09:39:17 PM (MST).

---

## INTRODUCTION

This guide demonstrates how to removing the Samsung Chromebook 3 XE500C13-K02US track pad.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Bottom Case



- Place the laptop back cover facing up to expose the screws.
- Using a Phillips #00 screwdriver, remove nine 4.6mm screws from the back casing.

## Step 2



- Use an iFixit opening tool to wedge in between the case and body of the laptop.
  - Once the tool is wedged in between the case and laptop, slide it around the entire laptop's edge to disengage the retaining clips.
- i** You should hear a popping sound as you slide the iFixit opening tool around the laptop.

## Step 3



- Remove the cover exposing the inside of the laptop.

## Step 4 — Battery



- Remove the four 4.6mm screws with the Phillips #00 screwdriver.

## Step 5




- Use the spudger to pry underneath the cable and gently lift the connector up.

## Step 6



- Lift the battery up and out of the case.

## Step 7 — Track pad

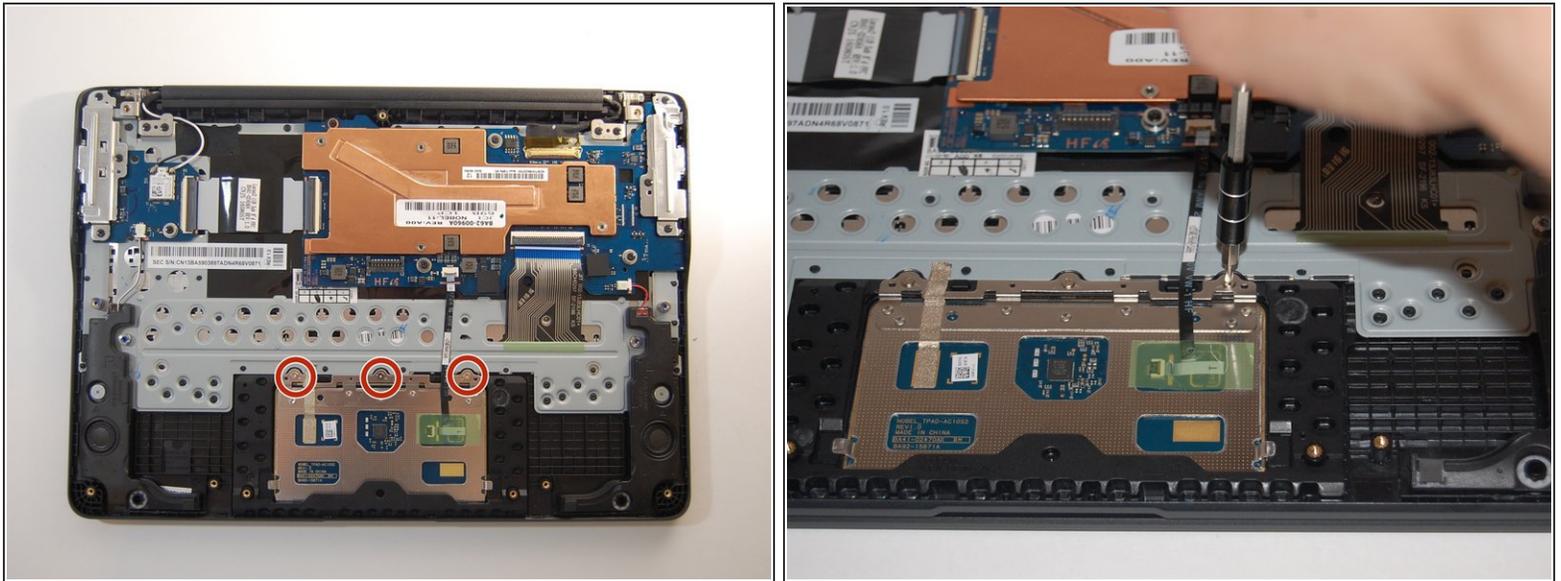

- Remove the three 2.3mm screws along the top of the trackpad using a Phillips #00 screwdriver.

## Step 8



- Remove the ribbon cable by lifting it out of the connector.
- Lift the grey adhesive tape.

## Step 9



- Lift the track pad from the top.
- Slide the track pad away from yourself to clear the black plastic edge.
- Lift the track pad up and out of the laptop.

To reassemble your device, follow these instructions in reverse order.