


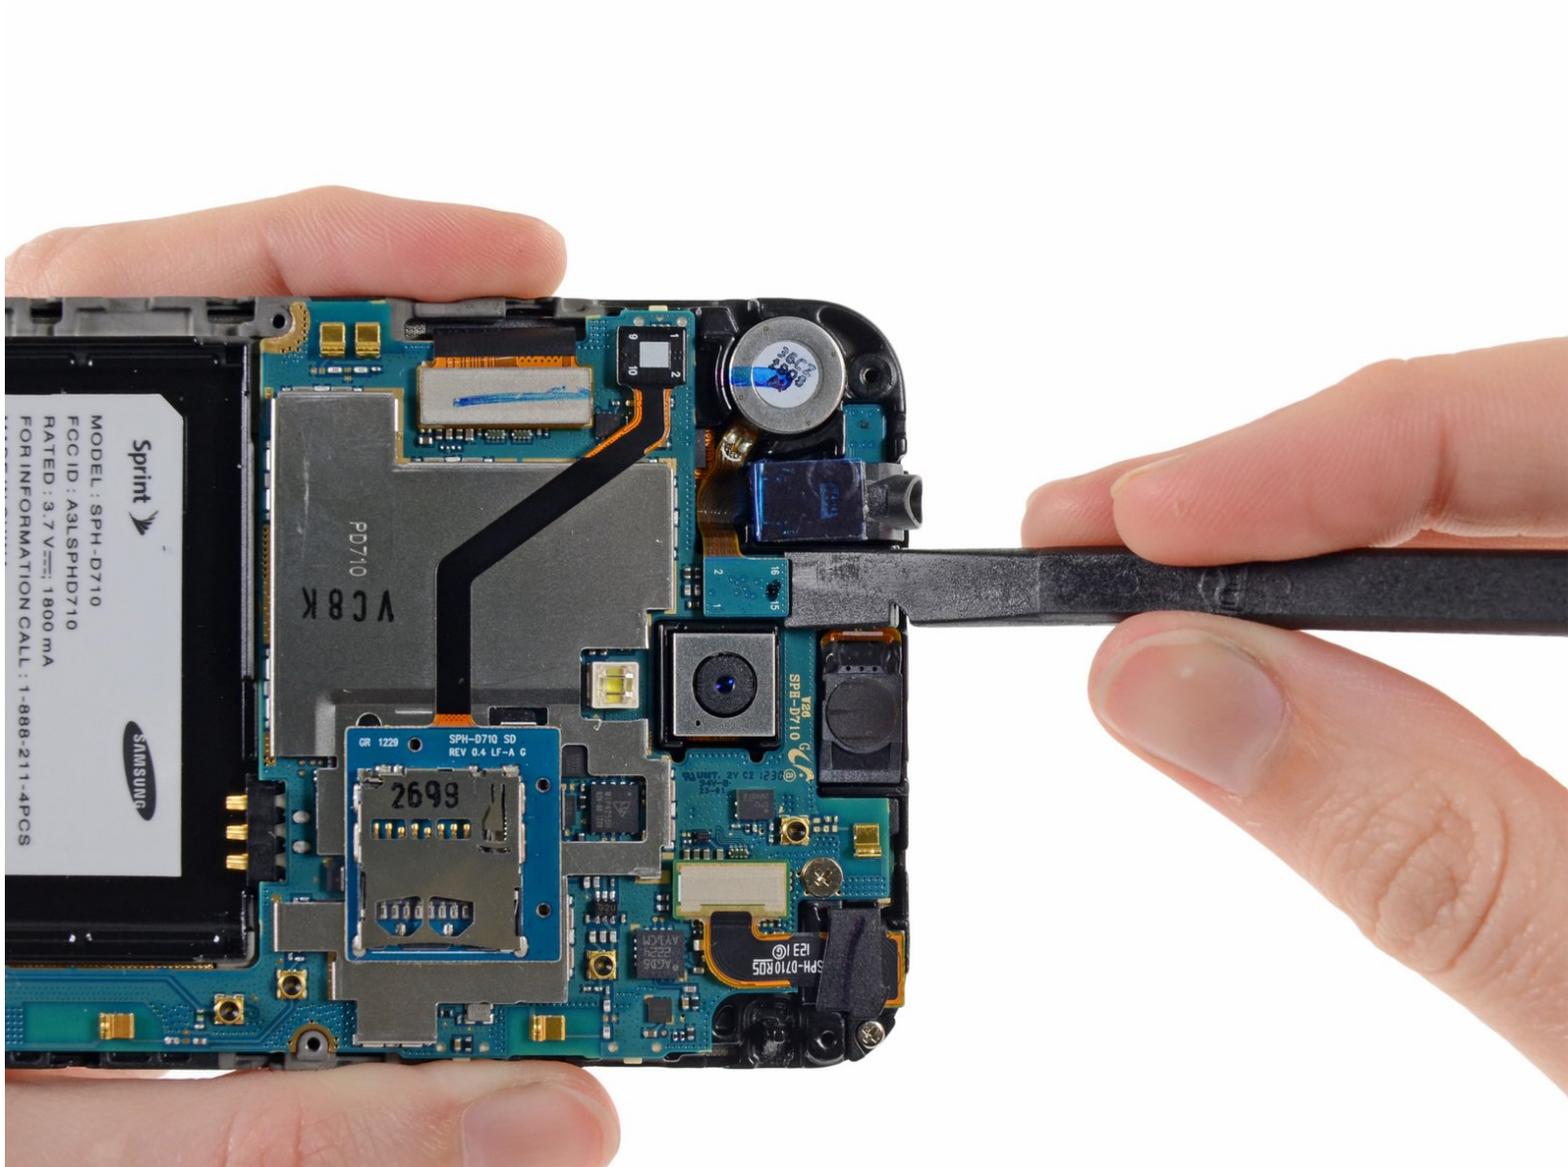

Samsung Epic 4G Touch Headphone Jack/Vibrator Connector Replacement

Prereq only.

Written By: Walter Galan




INTRODUCTION

Prereq only.

TOOLS:

- [Spudger](#) (1)
-

Step 1 — Headphone Jack/Vibrator Connector

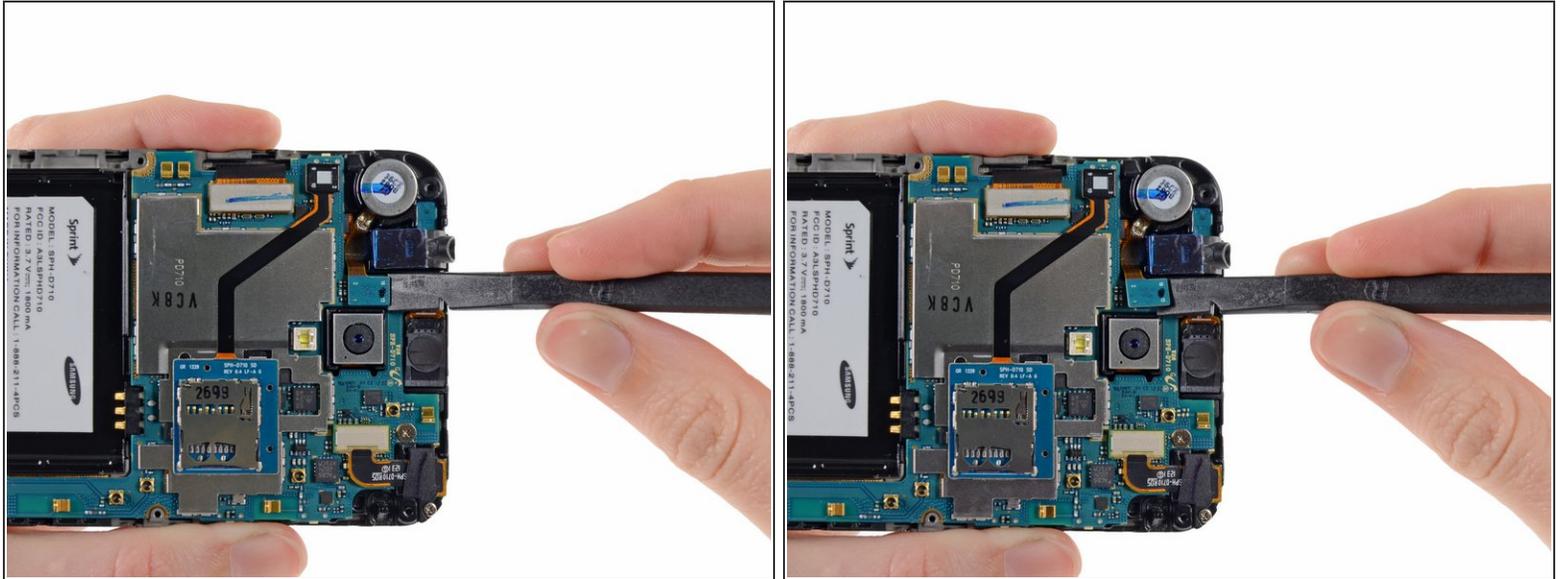

- Use the flat end of a spudger to disconnect the headphone jack/vibrator assembly cable.

To reassemble your device, follow these instructions in reverse order.