



Samsung SC MX-20 Memory SD Card Replacement

Find and replace the external SD card on the Samsung SC MX-20 camcorder.

Written By: Matthew Madeja



INTRODUCTION

The SD card holds the memory of pictures and video recordings of the camera. It is vital to understand how to replace the SD card as it is a necessary skill that will have to be put to use.

This guide will show you how to replace the SD card in your device.

Step 1 — Memory SD Card



- Open the battery cover by sliding it away from the device.
- Pull out the SD card from slot.

To reassemble your device, follow these instructions in reverse order.