




# Sandisk Sansa m230 Series mp3 player Teardown

This guide will help those looking to repair a component found inside the device. Follow these steps to gain access to such components.

Written By: James Thorne

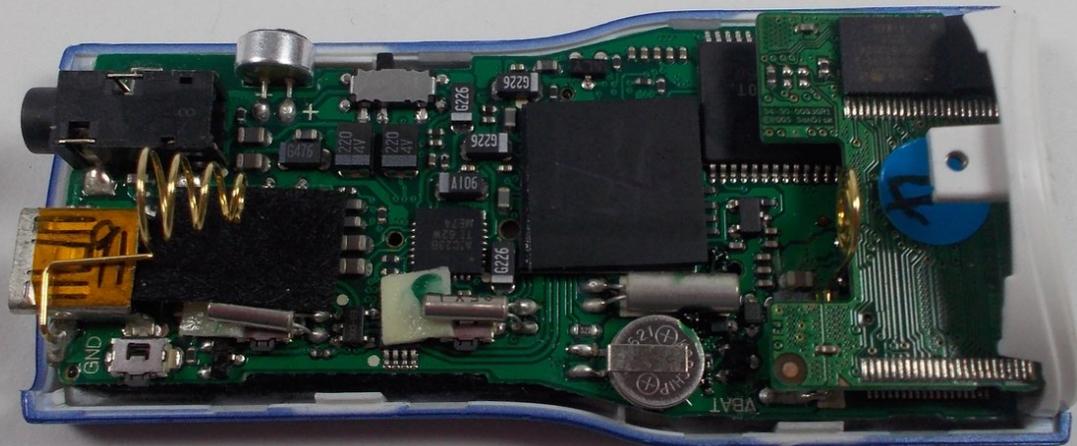

---

## INTRODUCTION

Follow the steps in this guide in order to gain access to components found inside the device which most often require repair or replacement.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Sandisk Sansa m230 Series mp3 player Teardown



- Remove the battery compartment cover.
- Remove the battery.

## Step 2



- Locate and remove the screw next to the battery compartment lid.

### Step 3



- Locate the interlocking pegs along the seam of the device's casings.
- Gently pry the pegs apart one at a time, working your way around the case.

 Be careful when prying apart the pegs: they are made of plastic and may break.

### Step 4




- The battery contact springs may prevent the case from separating.
- Push the battery contact springs down through the hole in the case.

## Step 5



- The casing protecting the USB and headphone jacks must be removed.
- Locate and gently pry apart the two interlocking clips holding it in place.
- The outer casings may now be removed and the MP3 player should separate.

## Step 6

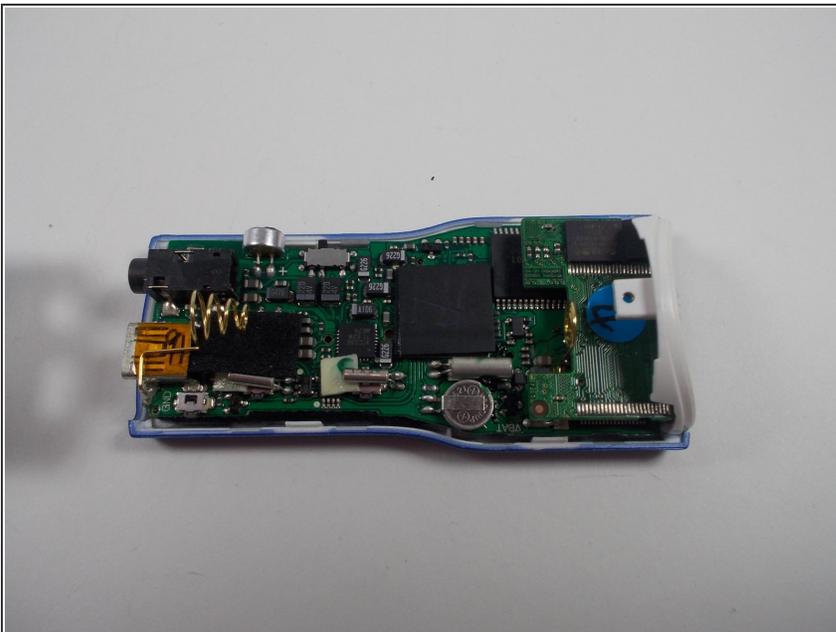

- You now have access to all components found on the inside of the device!

To reassemble your device, follow these instructions in reverse order.