



# Shark ION Robot R75 Caster Wheel Replacement

This guide provides the necessary step required to remove the front caster wheel on the Shark ION Robot R75.

Written By: Kyle Wilbourn



---

## INTRODUCTION

The caster wheel of the R75 is the single wheel in the front of the robot that is capable of rotating freely. This is a simple guide on the removal of the wheel for replacement or cleaning. Remember to periodically check the caster wheel for signs of damage and wear. The wheel should be replaced every year or so.

---

### TOOLS:

- [TR9 Torx Security Screwdriver](#) (1)
-

## Step 1 — Shark ION Robot R75 Caster Wheel



- Orient the device with the bottom facing up.

## Step 2



- Using a plastic opening tool, pry first one side of the wheel, then the other out of the caster.
- Remove the wheel.

### Step 3



- Using a Torx TR9 screwdriver, remove both screws from the caster assembly beneath the wheel.
- Pull the caster assembly up from its slot in the device.

To reassemble your device, follow these instructions in reverse order.