



Shark Rotator Lift-Away Speed Vacuum Hose and Wand Accessory Replacement

How to remove or replace the Shark Rotator Lift-Away Speed hose and wand attachments for routine cleaning and maintenance or to clear blockages.

Written By: Samantha Woo



This document was generated on 2019-09-18 01:22:33 AM (MST).

INTRODUCTION

The vacuum comes with several hose attachments and pathways through which debris passes through. To clean or remove blockages from hose attachments, it may be necessary to remove the hose and wand attachments.

Step 1 — Hose and Wand Attachment



- ⚠ Make sure the vacuum is turned off and unplugged before proceeding.
- Place the vacuum upright and locate the attachment you want removed.

Step 2



- Slide the attachments off of the end of the wand.
- Some attachments may have a "Release" button--if so, hold down the button while sliding the attachment off.
- ⓘ The back of the vacuum has slots to hold up to two vacuum attachments. To store, simply place the attachment onto the circular slots.

Step 3



- Locate the button that says “Release Wand” and press down.
- Press button while lifting upwards on the handle at the top of the wand.

Step 4

- Locate the black hose on the back of the vacuum.
- Locate the silver release levers on the top and bottom of the hose.
- Press on the silver release levers and pull up and away from the device to release the hose.

To reassemble your device, follow these instructions in reverse order.