




Sony Cyber-Shot DSC-TX30 Battery Cover Seal Replacement

This guide will show how to replace the seal on the battery/memory card cover of your device.

Written By: Kellen Fulkerson

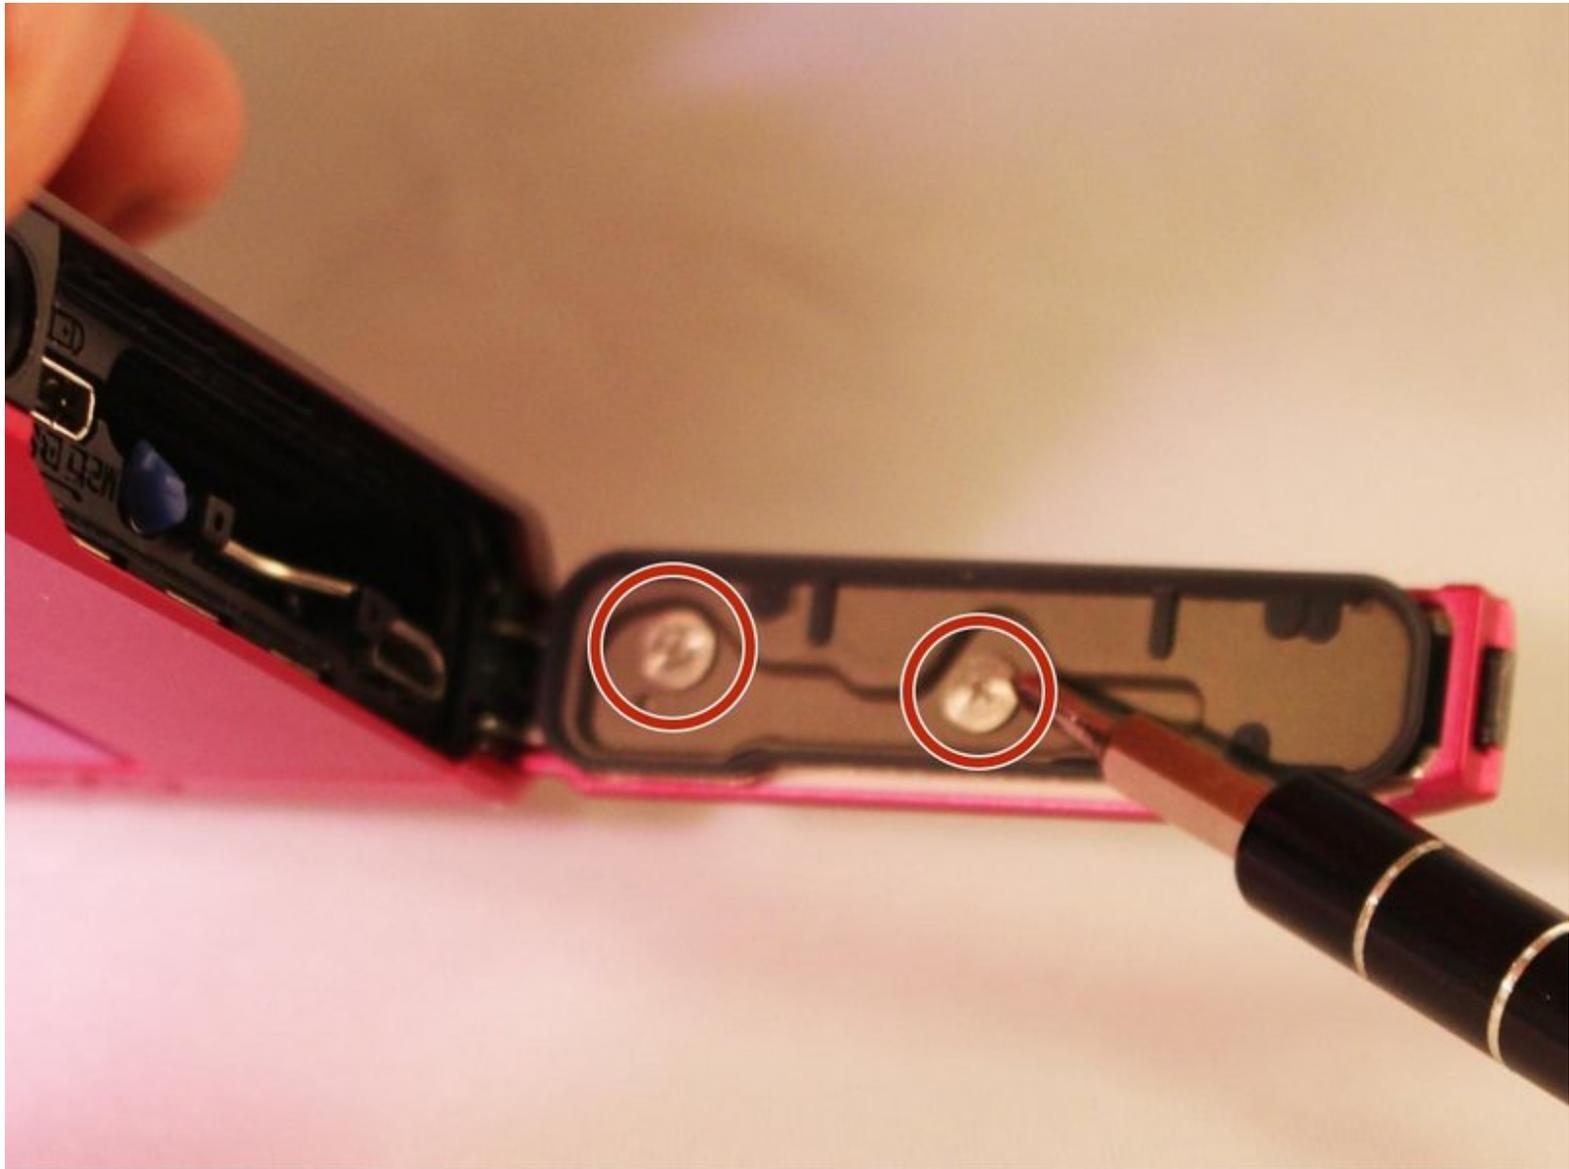

INTRODUCTION

Before use underwater it's important to ensure that the device is properly sealed. Otherwise, the device will likely be seriously damaged. If the battery/memory card cover seal is damaged, broken, or not properly sealing the device to prevent it from taking in water or other hazards, then it needs to be replaced before the camera is used underwater.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery




- Using your finger, slide the release catch to unlock the battery/memory card cover.

Step 2

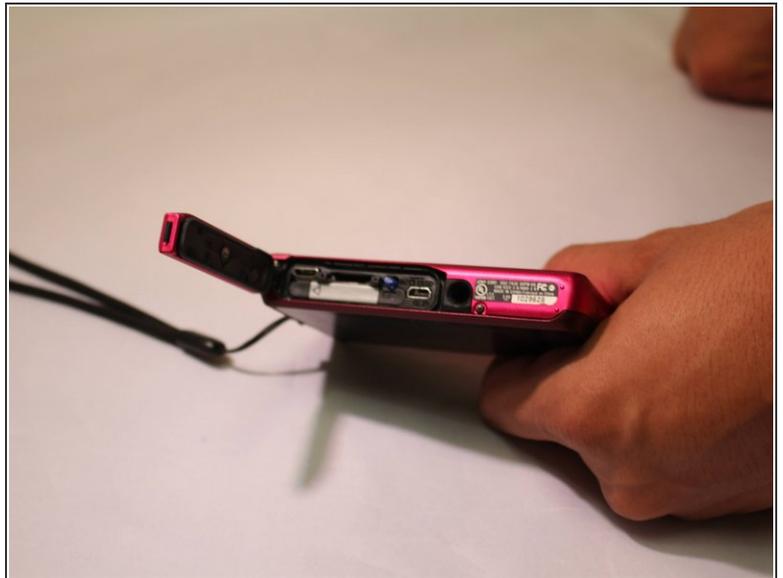

- Open the battery/memory card door.

Step 3

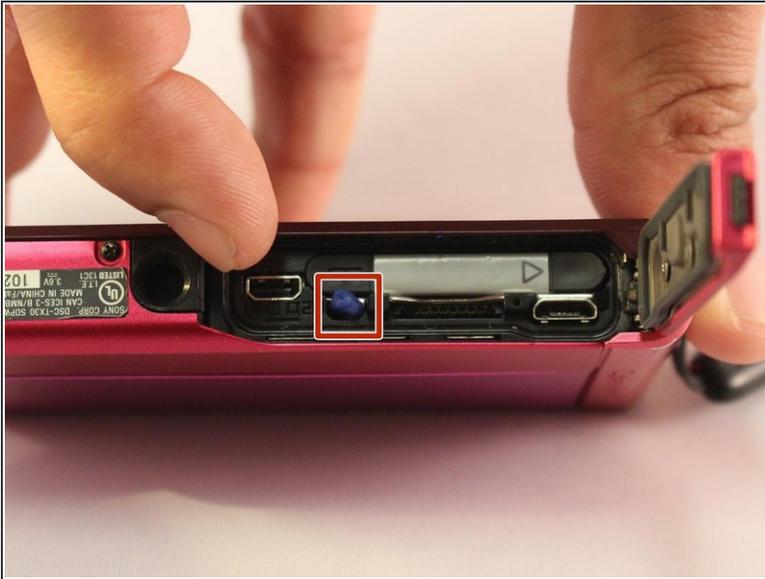


- Push the battery eject lever to free the battery.

Step 4




- Remove the battery from the device.

Step 5 — Battery/Memory Card Door Seal

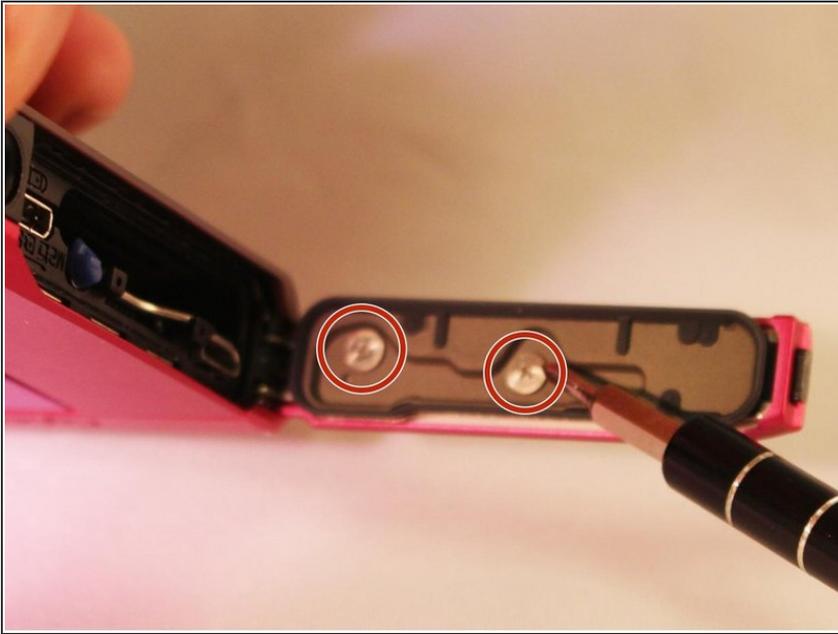

- Using a Phillips #00 screwdriver, remove the two 2mm screws on the battery/memory card cover seal.

Step 6

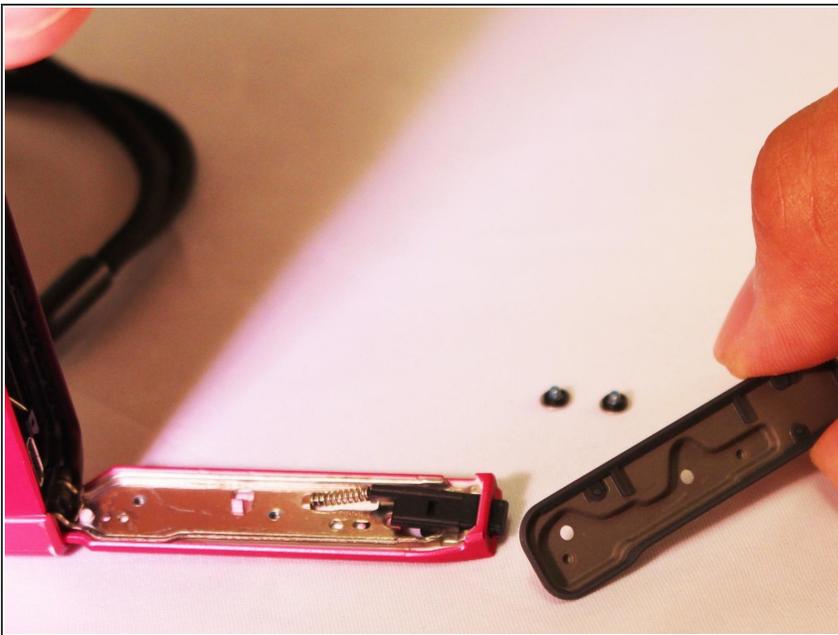

- Using your fingers, remove the battery/memory card door seal.

To reassemble your device, follow these instructions in reverse order.