




# Sony Cyber-shot DSC-H200 LCD Screen Replacement

This guide will show you how to replace a broken or non responsive Sony Cyber-shot DSC-H200 LCD screen.

Written By: Elizabeth Morrison

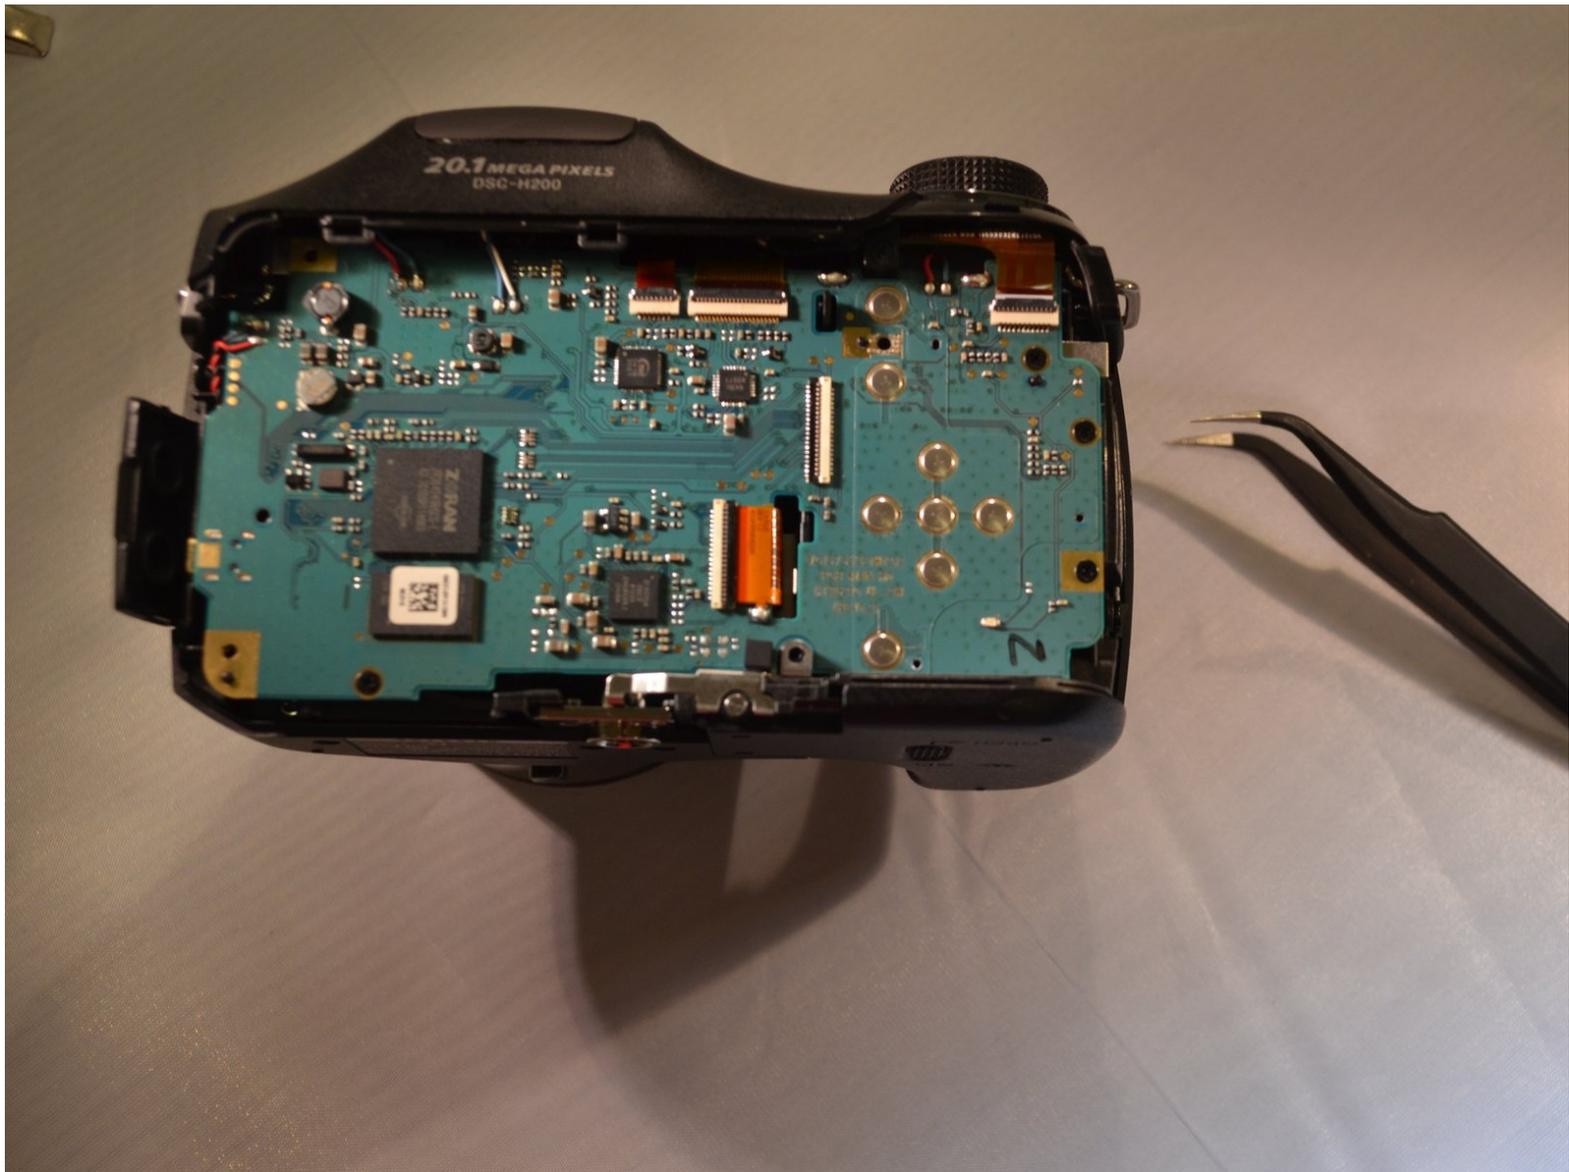

---

## INTRODUCTION

In order to change a broken screen, you need to get into the body of the camera. We will show you how to not only take apart your camera but also how to replace a broken screen. Properly following the steps included will ensure a safe and easy LCD Screen replacement.

---

### TOOLS:

- [Tweezers](#) (1)
  - [64 Bit Driver Kit](#) (1)
  - [Magnetic Project Mat](#) (1)
-

## Step 1 — LCD Screen



- Using a screwdriver, remove the five 6mm screws located on the back panel.
- Using a screwdriver, remove the two 3mm screws located on the back panel.

## Step 2



- Using a screwdriver, remove one 6mm screw on the front panel.
- Using a screwdriver, remove two 3mm screws on the front panel.

### Step 3




- Open the SD Door, unscrew and remove the single 6mm screw closest to "PUSH IN/OUT" under the SD card slot.

### Step 4




- Remove the back panel (the LCD and motherboard are exposed).

## Step 5

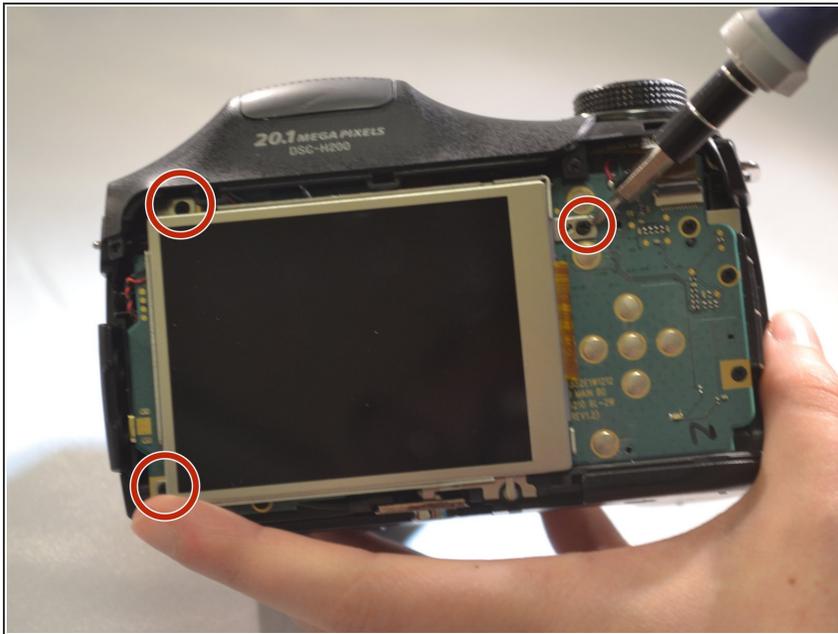



- Using a screwdriver, remove the three 4mm screws that attach the LCD to the camera motherboard. (The LCD is contained in a holding plate, attached to the motherboard with a ribbon cable.)

## Step 6

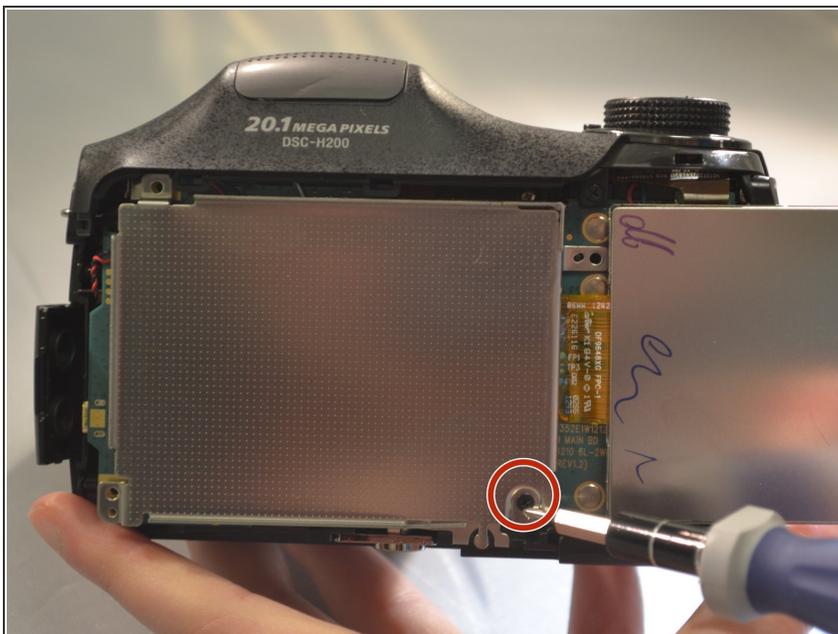


- Using a screwdriver, remove the single 4mm screw at the bottom of the holding plate.

## Step 7

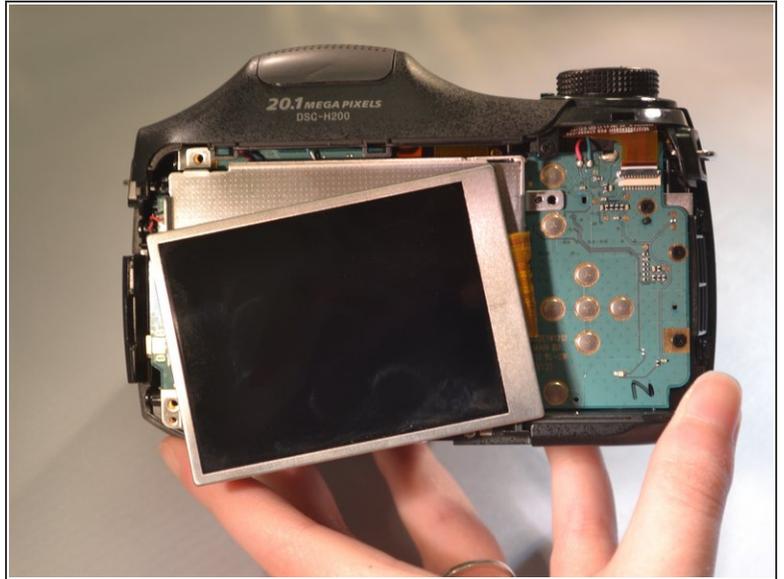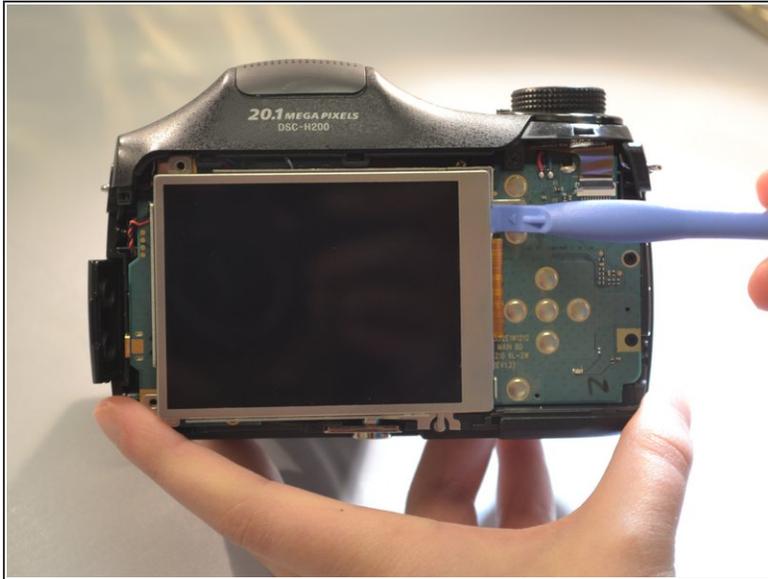

- Lift the holding plate away from the motherboard and set aside.

## Step 8

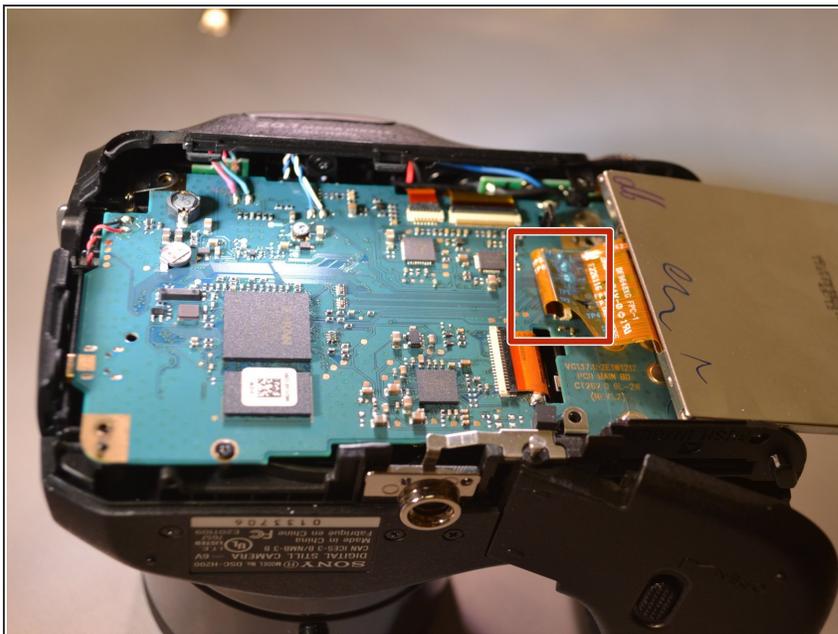

- Using tweezers, open the LCD ribbon port by lifting the black hinge. (The LCD ribbon cable will detach.)

## Step 9



- Using tweezers, remove the LCD with the ribbon cable and set aside.

To reassemble your device, follow these instructions in reverse order.